



# TruVision NVR 21(S/P) User Manual

**Copyright** © 2015 United Technologies Corporation.

Interlogix is part of UTC Building & Industrial Systems, a unit of United Technologies Corporation. All rights reserved.

**Trademarks and patents** Trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.

**Manufacturer** United Technologies Corporation.  
2955 Red Hill Avenue, Costa Mesa, CA 92626-5923, USA  
Authorized EU manufacturing representative:  
UTC Fire & Security B.V.  
Kelvinstraat 7, 6003 DH Weert, The Netherlands

**Certification**   

**FCC compliance** **Class A:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Canada** This Class A digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

**ACMA compliance** **Notice!** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**European Union directives** **2004/108/EC (EMC directive):** Hereby, UTC Climate Controls & Security declares that this device is in compliance or with the essential requirements and other relevant provisions of Directive 2004/108/EC.



**2002/96/EC (WEEE directive):** Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: [www.recyclethis.info](http://www.recyclethis.info).



**2006/66/EC (battery directive):** This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: [www.recyclethis.info](http://www.recyclethis.info).

**Contact information** For contact information, see [www.interlogix.com](http://www.interlogix.com) or [www.utcssecurityproducts.eu](http://www.utcssecurityproducts.eu).

# Content

<b>Chapter 1</b>	<b>Product overview 1</b>
	Installation environment 1
	Default settings to access the device 1
<b>Chapter 2</b>	<b>Installation 3</b>
	Installation environment 3
	Unpacking the recorder and its accessories 3
	Back panel 4
	Wiring the keypad 6
	RS-485 ports 8
	RS-232 port 9
	PoE ports 9
	Monitor connections 9
	Audio inputs and output 9
	Brackets 10
<b>Chapter 3</b>	<b>Getting started 11</b>
	Turning on and off the recorder 11
	Using the setup wizard 12
<b>Chapter 4</b>	<b>Operating instructions 17</b>
	Controlling the recorder 17
	Using the front panel 17
	Using the mouse 22
	Using the IR remote control 23
	Menu overview 26
<b>Chapter 5</b>	<b>Live view 29</b>
	Description of live view 29
	Video output 30
	Monitor output 30
	Audio output 31
	Controlling live view mode 31
	Multiview format 33
	Sequencing cameras 33
	Accessing frequently used commands 34
	Configuring live view 36
	General settings 38
	Configuring time and date 40
<b>Chapter 6</b>	<b>Controlling a PTZ camera 43</b>
	Changing PTZ camera settings 43
	Calling up presets, tours and shadow tours 43
	Setting and calling up presets 44

Setting and calling up preset tours 46  
Setting and calling up a shadow tour 48

**Chapter 7**      **Playing back a recording 51**  
Overview of the playback window 51  
Playback pop-up menu 53  
Instant playback 54  
All-day playback 55  
Playback skip time 56  
Searching recorded video 56  
Playing back recordings by time and video type 57  
Playing back recordings by event 58  
Creating and playing back bookmarked recordings 59  
Slideshow of snapshots 60  
Playing back recordings from the system log 61  
Playing back frame-by-frame 61  
Digital zoom in playback 62

**Chapter 8**      **Archiving recorded files 63**  
Archiving files 63  
Auto archiving 66  
Creating and archiving video clips 67  
Archiving snapshots 67  
Managing backup devices 68  
Playing back archived files on a PC 68

**Chapter 9**      **Using the web browser 69**  
Windows 7 and 8 users 69  
Accessing the web browser 70  
Web browser overview 70  
Using the web browser to configure the device 72  
Searching and playing back recorded video 76  
Searching for event logs 77  
Recording from the browser 78  
Dual stream recording 78  
Controlling a PTZ dome camera in the web browser 79  
Capturing text insertions 80  
Text overlay 82  
Using a network storage system 82

**Chapter 10**     **Recording 83**  
Configuring recording settings 83  
Using an external recording device 85  
Configuring recording schedules 85  
Daily schedules 86  
Holiday schedules 87  
Manual recording 88  
Motion detection schedules 89

	External alarm schedules	89
	Protecting recorded files	89
	Configuring redundant recording	91
	Capturing text insertions	92
	Failover and recovery	92
<b>Chapter 11</b>	<b>Alarm settings</b>	<b>95</b>
	Description of alarm notification types	95
	Setting up motion detection	97
	Video analytics	100
	Setting up system notifications	100
	Setting up external alarms	101
	Triggering or clearing alarm outputs manually	103
	Detecting video loss	103
	Detecting video tampering	104
<b>Chapter 12</b>	<b>Network settings</b>	<b>105</b>
	Configuring general network settings	105
	Configuring PPPoE	107
	Configuring DDNS	107
	Configuring an NTP server	108
	Configuring e-mail	109
	Configuring SNMP	109
	Configuring UPnP	110
	Configuring an FTP server to store snapshots	111
	Configuring a remote alarm host	111
	Configuring multicast	111
	Configuring the server and HTTP ports	112
	Configuring the RTSP service port	112
	Telnet set up	112
	Checking network status	112
	Exporting network packet data	113
	Port forwarding	114
<b>Chapter 13</b>	<b>Storage management</b>	<b>115</b>
	Initializing HDDs	115
	Controlling disk storage mode on the HDD	116
	Setting up HDD groups	116
	Setting the HDD property	117
	Checking HDD status	117
	Configuring HDD alarms	118
	Managing eSATA	118
	Checking the S.M.A.R.T. information	118
	Bad sector detection	119
<b>Chapter 14</b>	<b>Camera settings</b>	<b>121</b>
	Cameras supported	121
	Adding IP cameras to the recorder	121

	PoE power budget	123
	Accessing IP cameras connected to an internal switch	125
	Configuring the camera OSD settings	125
	Setting up privacy masking	126
	Adjusting video image settings	127
	Watermarking	128
	Hiding a camera image from view	128
<b>Chapter 15</b>	<b>Recorder management</b>	<b>129</b>
	Configuring the RS-232 port	129
	Updating system firmware	130
	Restoring default settings	131
	Importing and exporting configuration settings	131
	Viewing system information	131
	Searching system logs for events	133
<b>Chapter 16</b>	<b>User management</b>	<b>135</b>
	Adding a new user	135
	Customizing a user's access privileges	136
	Deleting a user	138
	Modifying a user	138
	Changing the Admin password	138
<b>Appendix A</b>	<b>Specifications</b>	<b>139</b>
<b>Appendix B</b>	<b>PTZ protocols</b>	<b>143</b>
<b>Appendix C</b>	<b>Port forwarding information</b>	<b>145</b>
<b>Appendix D</b>	<b>KTD-405 keypad</b>	<b>147</b>
	Supported firmware	147
	Wiring the keypad	147
	Setting up the keypad to work with the recorder	148
	Operating the keypad	150
<b>Appendix E</b>	<b>Maximum pre-recording times</b>	<b>155</b>
<b>Appendix F</b>	<b>Supported PTZ commands</b>	<b>157</b>
<b>Appendix G</b>	<b>Default menu settings</b>	<b>159</b>
	<b>Index</b>	<b>171</b>

# Chapter 1

## Product overview

### Installation environment

The TruVision NVR 21 (TVN 21) series is a versatile, user-friendly embedded network video recorder (NVR) series. The standard series supports up to 8/16 channels with a maximum bandwidth of 40/80 Mbps and up to 4 SATA hard drives.

The TVN21S model includes an 8/16 embedded PoE switch that allows TruVision cameras to be connected in a plug and play manner. Simply plug in the IP camera to automatically power and connect it, assign the IP address, as well as set it up using default values. The embedded 8/16 PoE switch provides a maximum PoE wattage of respectively 120 W and 200 W.

The TVN 21P series supports up to 8/16/32 channels with a maximum bandwidth of 40/80/160 Mbps and up to 8 SATA hard drives. The full TVN 21 series provides integration with the UTC portfolio of security solutions, and offers a seamless user experience within the TruVision brand.

The TVN 21 series can be configured and operated through its on-screen display (OSD), web browser, mobile applications, TruVision Navigator software, or third party software using the TruVision SDK.

The recorder can be fully managed by the license-free TruVision Navigator software - ideal for most commercial applications. Its easy and intuitive web browser interface enables remote configuration, viewing and searching of video on any TruVision recorders.

### Default settings to access the device

#### Default user names and passwords

See Table 1 on page 2 for the list of default user names and passwords. Go to Chapter 16 “User management” on page 135 for further information.

**Table 1: Default user names and passwords**

User	Description
<b>Administrator</b>	There can only be one administrator. The user name is “admin”. The name cannot be modified. The default password is 1234.
<b>Operator</b>	The default user name is “operator”. The default password is 4321.
<b>Guest</b>	The default user name is “guest”. The default password is Empty.

**Note:** The default passwords should be changed for security reasons.

## Default network settings

The default values for TVN 21(P/S) network settings are:

- IP address - 192.168.1.82
- Subnet mask - 255.255.255.0
- Gateway address - 192.168.1.1
- Ports:

When using the browser:

RTSP port: 554

HTTP port: 80

When using TruNav:

RTSP port: 554

Server/Client software port: 8000

Go to Chapter 9 “Using the web browser” on page 69 for further information.



# Chapter 2

## Installation

This section describes how to install the TVN 21(P) unit.

### Installation environment

When installing your product, consider these factors:

- Ventilation
- Temperature
- Moisture
- Chassis load

**Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Ensure that the location planned for the installation of the unit is well ventilated.

**Temperature:** Consider the unit's operating temperature (-10 to +55 °C, 14 to 131 °F) and noncondensing humidity specifications (10 to 90%) before choosing an installation location. Extremes of heat or cold beyond the specified operating temperature limits may reduce the life expectancy of the recorder. Do not install the unit on top of other hot equipment. Leave 44 mm (1.75 in.) of space between rack-mounted TruVision NVR 21(S/P) units.

**Moisture:** Do not use the unit near water. Moisture can damage the internal components. To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

**Chassis:** Equipment weighing less than 15.9 kg (35 lb.) may be placed on top of the unit.

### Unpacking the recorder and its accessories

When you receive the product, check the package and contents for damage, and verify that all items are included. There is an item list included in the package. If any of the items are damaged or missing, please contact your local supplier.

Items shipped with the product include:

- IR (infrared) remote control
- Two AAA batteries for the remote control
- AC power cords
- USB mouse
- Brackets
- NVR
- CD with software and manuals
- TruVision NVR 21(P) Quick Start Guide
- TruVision NVR 21(P) User Manual (on CD)
- TruVision Recorder Operator Guide (on CD)

## Back panel

Figure 1 on page 5 shows the back panel connections and describes each connector on a typical TVN 21(P) network video recorder. Details may vary for specific models.

Before powering up the recorder, connect a main monitor for basic operation.

Figure 1: Back panel connections


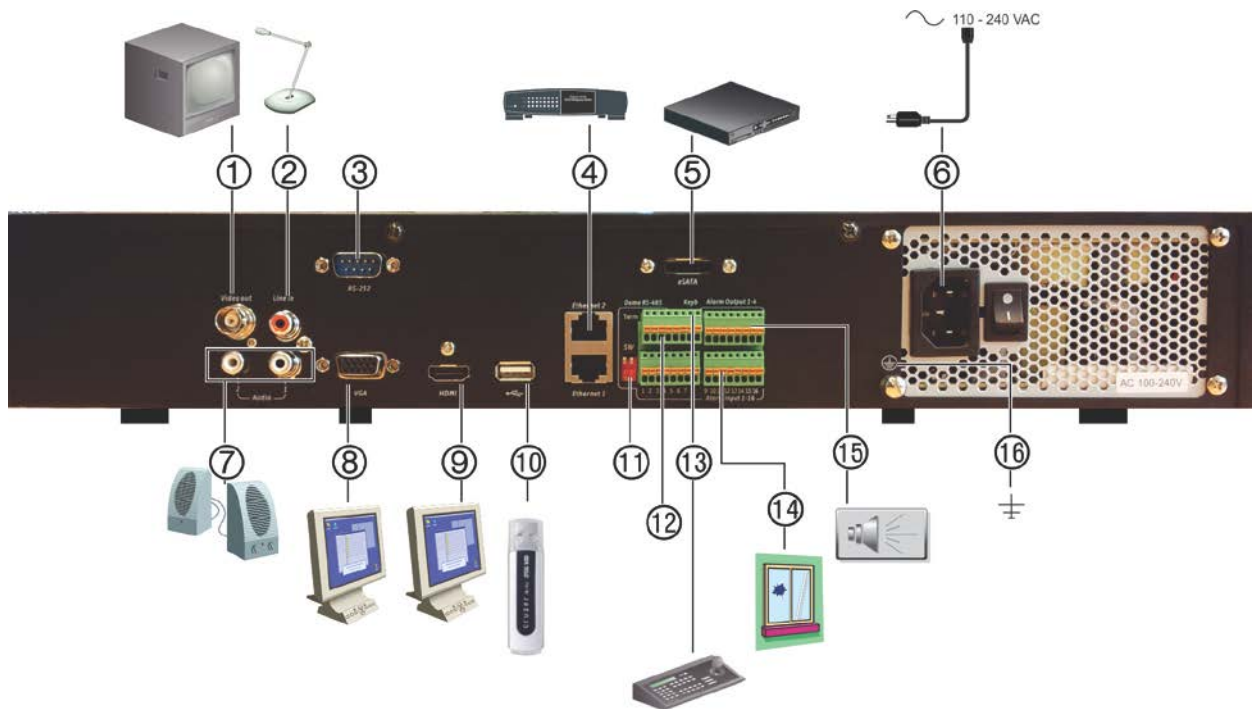


Figure 1: TVN 21S back panel connections

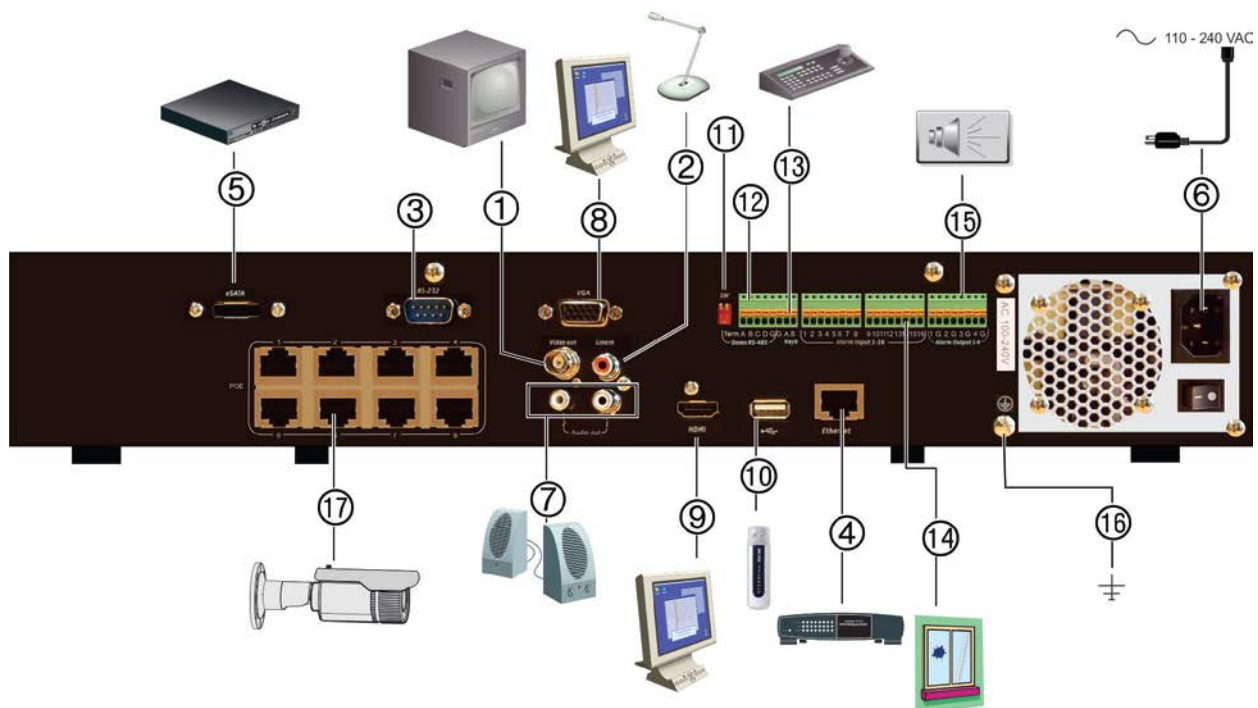

1. Connect one CCTV monitor (BNC-type connectors).
2. Connect one audio input to RCA connectors.
3. Connect to a RS-232 device.
4. Connect to a network.
5. eSATA.
6. 110 - 240 VAC.
7. Audio.
8. Video-out.
9. HDMI.
10. Universal Serial Bus (USB). Connect to an additional device such as a USB mouse, CD/DVD burner or USB HDD.
11. Not used.
12. Not used.
13. Connect to a keyboard (KTD-405 shown).
14. Alarm.
15. Alarm Output 1-4.
16. Ground.
17. Video-in.

5. Connect to an optional eSATA device such as SATAN HDD, CD/DVD-RM.
6. Connect to a power cord.
7. Connect to speakers for audio output.
8. Connect to a VGA monitor.
9. Connect to an HDTV. The HDMI connection supports both digital audio and video.
14. Connect up to 16 alarm inputs.
15. Connect up to four alarm relay outputs.
16. Connect to ground.
17. 8/16 PoE ports.


## Wiring the keypad

The keypad uses RS-485 simplex wiring. The signal is transferred by a single twisted pair line. A shielded STP CAT5 network cable is recommended. Ground one end of the cable, either the first or last device on the RS-485 line.

The maximum number of devices that can be installed in one bus is 255, with a maximum cable length of 1200 m. The cable length can be expanded using a signal distributor.

Both the first and the last device in series should be terminated with 120 Ohm resistance to minimize line reflections. See Figure 2 below.

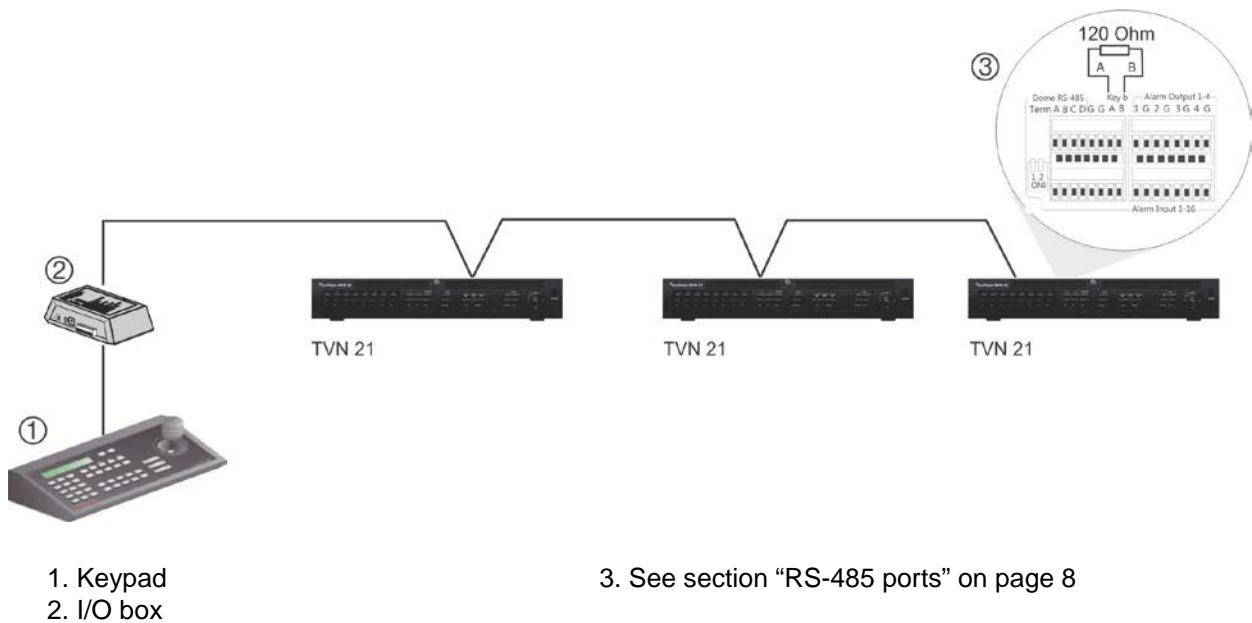
**Figure 2: RS-485 bus serial wiring (KTD-405 keypad shown)**



Use an RS-485 signal distributor for a star wiring configuration. See Figure 3 on page 7.

Figure 3: Star wiring with RS-485 signal distributor


**Correct:**

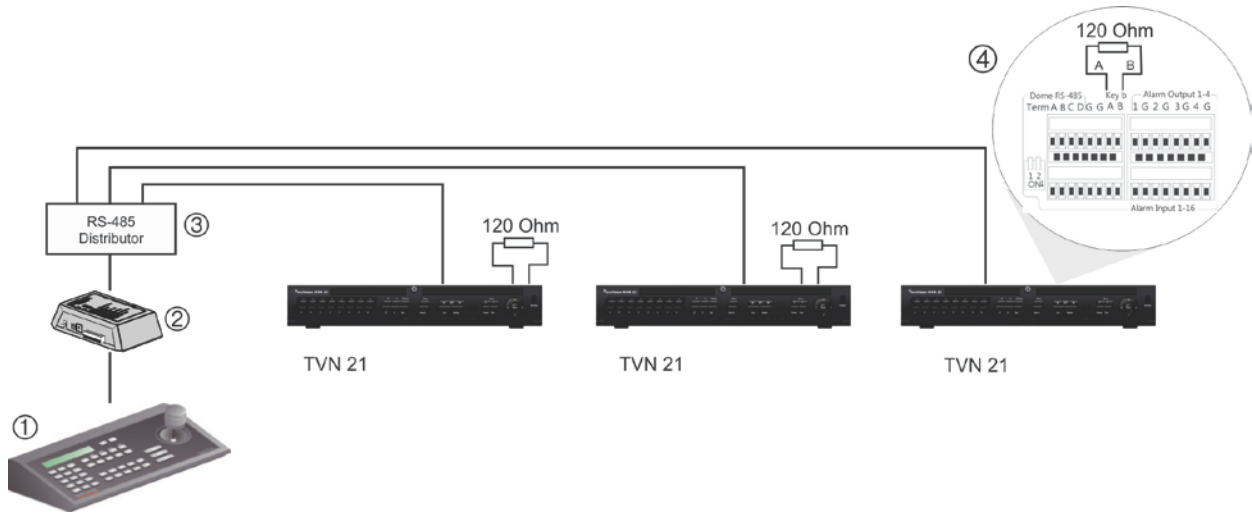

- 1. Keypad
- 2. I/O box

- 3. RS-485 distributor
- 4. See section "RS-485 ports" on page 8

**Incorrect:**

 


- 1. Keypad
- 2. I/O box

- 3. See section "RS-485 ports" on page 8

Use an RS-485 signal distributor to increase the maximum number of devices on the bus as well as the total range. Each distributor output provides another RS-485 bus, extending the output an additional 1200 m. Up to 31 recorders can be connected to each output. See Figure 4 below.

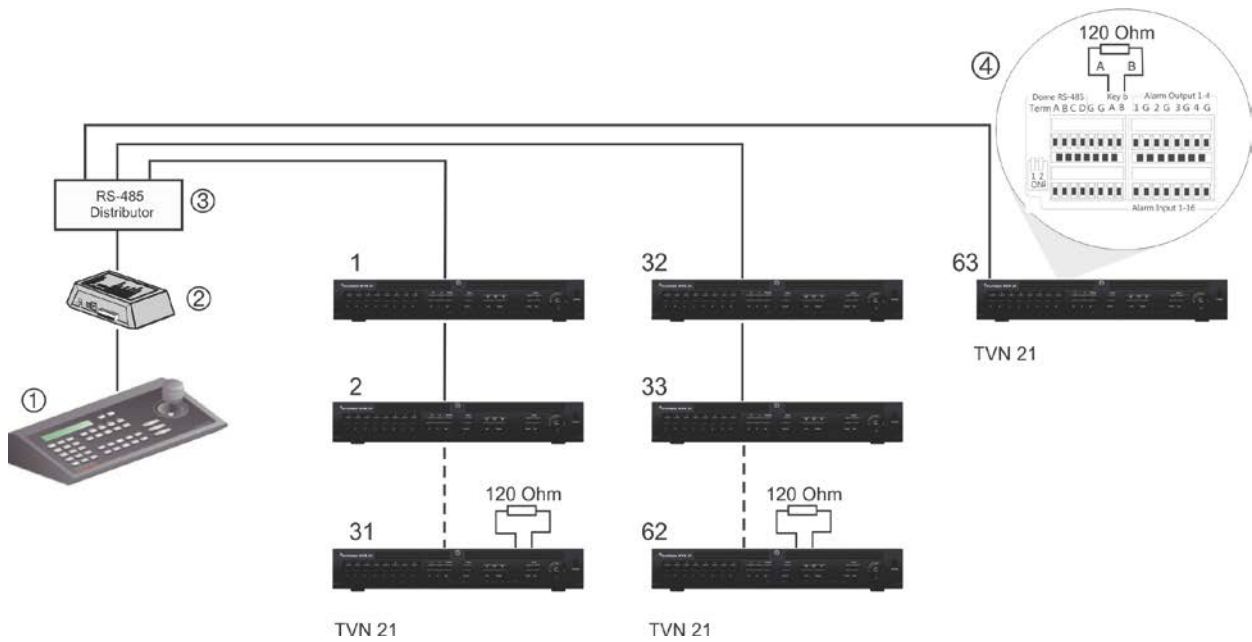**Figure 4: Expanding the system with an RS-485 signal distributor**



- 1. Keypad
- 2. I/O box

- 3. RS-485 distributor
- 4. See section "RS-485 ports" on page 8

**Caution:** Most signal distributors are unidirectional. This means that the signal only flows from the input towards the outputs. Consequently it is not possible to connect several keypads.

See section "RS-485 ports" below to configure the RS-485 port communication settings.

## RS-485 ports

There are two RS-485 ports on the rear panel of the recorder. See Figure 5 below for the serial pin outs.

- **Dome RS-485:**

A and B: Connect pan, tilt, zoom control of PTZ dome cameras. A = +, B = -


C and D: Not used

G: Ground of dome camera

G: Ground of keypad

- **Keyb:** Connect the keypad.

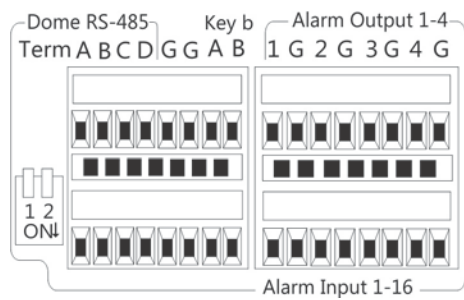Figure 5: RS-485 pins



## RS-232 port

Use the RS-232 port to connect CBR-PB3-POS (point-of-sale) and ATM devices to the recorder.

## PoE ports

Connect up to eight or 16 IP cameras to the embedded PoE ports depending on the TVN 21S model.

## Monitor connections

Connect the unit to a monitor via a 75-ohm video coaxial cable with the BNC connector. The unit provides a 1 Vp-p BNC signal. See Figure 1 on page 5 for connecting a monitor to a recorder.

The recorder supports at least 1024 × 768 / 60 Hz resolution in VGA. Adjust your monitor accordingly to this resolution.

## Audio inputs and output

The unit is equipped with 1 audio input and two audio outputs. Both the audio input and the audio outputs are line-level

Audio input	RCA jack, 315 mV, 40 kohms. Unbalanced
Audio output	RCA jack, 315mV, 600 ohms. Unbalanced


**Note:** Line-level audio requires amplification.

## Brackets

The recorder is easily rack-mountable with the purchase of the TVR-RK-1 rack-mount kit. Contact your local supplier to order the kit.

The TVN 21S has a 1.5U 19-inch chassis and the TVN 21P has 2U 19-inch chassis. See Figure 6 below.

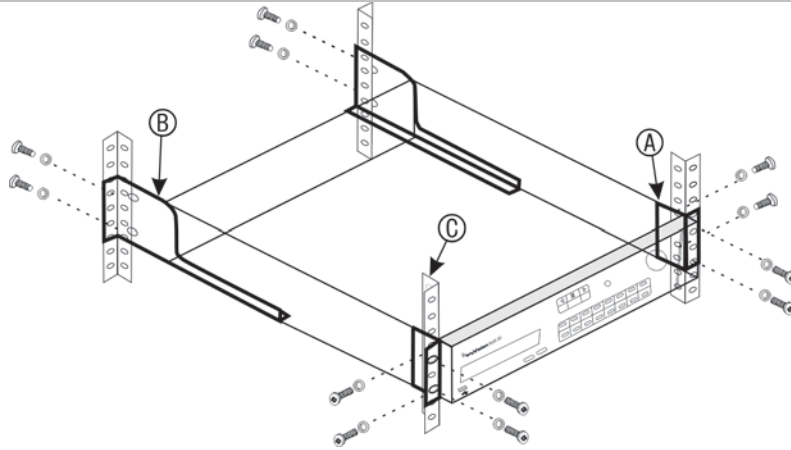**Figure 6: Rack-mount installation**



Attach the small front rack ears to the unit (screws supplied)

Attach the recorder to the front rails (screws not included)

### To install the racks:

1. Attach the two small front-rack mount ears to the recorder (A). The screws are supplied.
2. Attach the two large rear support brackets (screws are not supplied) to the rear rails (B).
3. Attach the recorder to the front rails (C). The screws are not supplied.

### Caution:

Do not rack-mount the recorder without the rear rails installed. Failure to install the rear rails can damage the recorder.



# Chapter 3

## Getting started

### Turning on and off the recorder

Before starting the power up process, connect at least one monitor to the video out or the VGA interface. Otherwise, you will not be able to see the user interface and operate the device.

The recorder auto-detects the video mode (PAL or NTSC) on startup.

It is equipped with an universal power supply that will auto-sense 100/240 V, 60/50 Hz.

**Note:** It is recommended that an uninterruptible power supply (UPS) is used in conjunction with the device.

#### To turn on the recorder:

Turn on the recorder using the power switch on the back panel. The power LED illuminates. A splash screen appears indicating that the recorder is starting up.

The Start Up Wizard window will appear.

#### To turn off the recorder:

1. In live view mode, right-click the mouse and click **Menu**. The main menu screen appears.
2. Select the **Power Manager** icon.
3. In the Shutdown popup menu, select **Shutdown**. Click **Yes** to confirm shutdown.

#### To reboot the recorder:

1. In live view mode, right-click the mouse and click **Menu**. The main menu screen appears.
2. Select the **Power Manager** icon.
3. In the Shutdown popup menu, select **Reboot**. Click **Yes** to confirm reboot.

## Using the setup wizard

The recorder has an express installation wizard that lets you easily configure basic recorder settings when first used. It configures all cameras simultaneously. The configuration can then be customized as required.

By default the setup wizard will start once the recorder has loaded. It will walk you through some of the more important settings of your recorder.

Any changes you make to a setup configuration page are saved when you finish the page and return to live view.

**Note:** If you want to set up the recorder with default settings only, click Next in each screen until the end.

### To quickly set up the recorder:

1. Connect all the devices required to the back panel of the recorder. See Figure 1 on page 5.
2. Turn on the unit using the power switch on the back panel.
3. Select the screen resolution from the dropdown list and then click **Next**.
4. Select the preferred language for the system from the dropdown list and then click **Next**.
5. Enable or disable the option to start the wizard automatically when the recorder is turned on. Click **Next**.
6. **Administrator configuration:**

Navigate to the Admin Password edit box and click the edit box with the mouse, or press Enter on the front panel or remote control, to display the soft keyboard. Enter the default admin password, 1234.

**Note:** You must enter an admin password. To change the Admin password, check **New Admin password** and enter the new password and confirm it.

---

**Caution:** It is strongly recommended that you change the password of the administrator. Do not leave 1234 as the default password. Write it down in a safe place so that you do not forget it.

If you should forget the password to your recorder, contact your supplier with the serial number of your recorder to obtain a secure code to reset your recorder.

---

If you wish to limit the admin rights to only one computer, enter the MAC address of the user's computer. Otherwise leave the MAC address unchanged.

Click **Next**.

7. **Time and date configuration:**

Select the desired time zone, date format, system time, system date, and manual DST.

The screenshot shows a 'Wizard' window with a green header. The configuration is as follows:

Time Zone	(GMT+01:00) Amsterdam, Berlin, Rome, Paris
Date Format	MM-DD-YYYY
Time Format	24-hour
System Date	07-23-2014
System Time	14:57:58
Enable DST	<input checked="" type="checkbox"/>
From	Mar last Sun 2 :00
To	Oct last Sun 3 :00
DST Bias	60 Minutes

Buttons at the bottom: Previous, Next, Cancel, and an Apply button.

**Note:** The system time and date are visible on screen. However, they do not appear in recordings.

Click **Next** to move to the next page, or **Previous** to return to the previous page.

## 8. Network configuration:

Configure your network settings such as the NIC type, enable or disable DNCP, IP address, subnet mask, default gateway, and UPnP. Enter the preferred DNS server address as well as the alternate one to use.

The screenshot shows a 'Wizard' window with a green header. The configuration is as follows:

Working Mode	Net Fault-tolerance
Select NIC	bond0
NIC Type	10M/100M/1000M Self-adaptive
Enable DHCP	<input type="checkbox"/>
IPv4 Address	192 . 168 . 222 . 160
IPv4 Subnet Mask	255 . 255 . 255 . 0
IPv4 Default Gateway	192 . 168 . 222 . 1
Preferred DNS Server	195.238.2.21
Alternate DNS Server	195.238.2.22
Main NIC	LAN1

Buttons at the bottom: UPnP, Previous, Next, and Cancel.

Click **Next** to move to the next page, or **Previous** to return to the previous page.

## 9. HDD management:

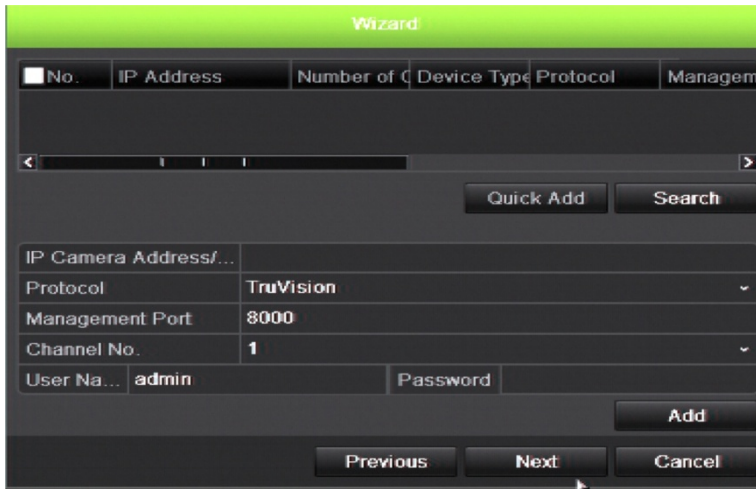
Configure your HDD settings as required.

You can group HDDs and assign cameras to a group. See “Setting up HDD groups” on page 116 for further information. You can also set up a drive for redundant recording. See “Configuring redundant recording” on page 91.

After configuring your HDD settings, click **Initialize** and **Next** to move to the next page, or **Previous** to return to the previous page.


### 10. Adding IP Camera:

Click **Search** to find any online cameras. Select the IP camera to be added, enter User name and Admin password, then click the **Add** button. Click, **Next** to move to the Recording Configuration screen.



### 11. Recording configuration:

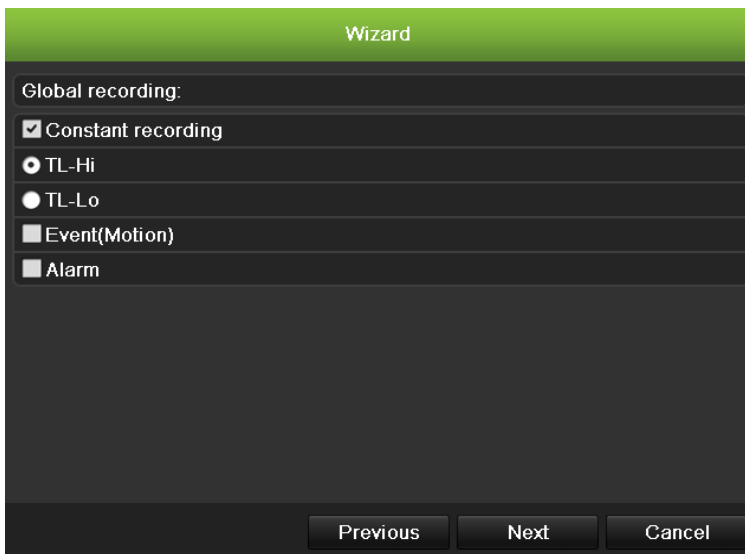Configure your recording settings as required. The settings apply to all cameras connected to the recorder.



Check the **Constant Recording** check box for the recorder to record continuously all day. If left unchecked, the recorder will not record.

Check the desired time lapse check box, **TL-Hi** or **TL-Low**.

To record motion detection events, check **Event (Motion)**.

To record alarm events, check **Alarm**.

12. When all the required changes have been entered, a page appears showing all the settings.



Click **Finish** to exit the Wizard. The recorder is now ready to use.



# Chapter 4

## Operating instructions

### Controlling the recorder

There are several ways to control the recorder:


- Front panel
- Mouse
- IR remote
- KTD-405 keypad (see Appendix)
- Web browser
- TVK-800 (see the TVK-800 user manual)
- TruVision Navigator (see the TruVision Navigator user manual)
- TVRmobile (available on app stores)

You can use your preferred control method for any procedure, but in most cases we describe procedures using mouse terminology. Optional control methods are given only when they differ substantially from mouse control methods.

### Using the front panel

The function buttons on the front panel control can be used to operate many, but not all, of the main functions of the recorder. The LED indicators light up or flash to alert you of various conditions. The functions available can be limited by setting passwords. See Figure 7 below for more information.

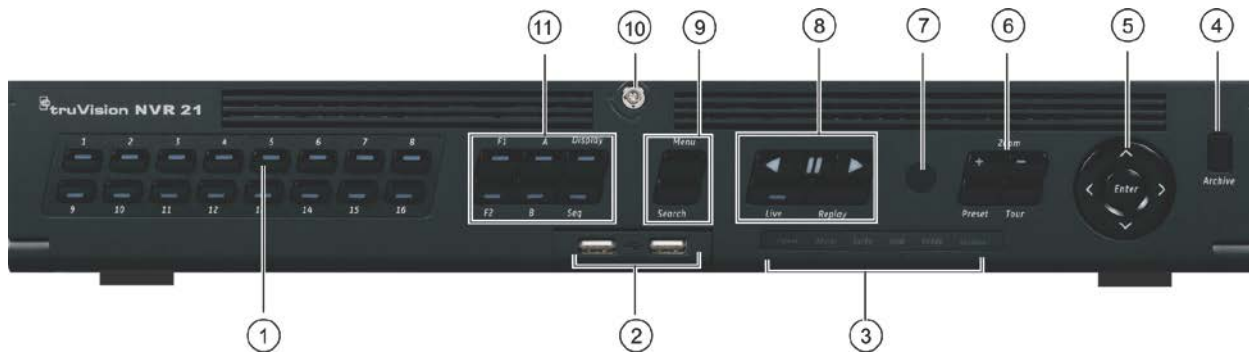Figure 7: Front panel






The controls on the front panel include:

Table 2: Front Panel Elements

 

 
 

 
Item	Name	Description
1.	Channel buttons	Switch between different cameras in live, PTZ control or playback modes. Use the soft keyboard to enter numerals 0 to 9.
2.	USB Interfaces	Universal Serial Bus (USB) ports for additional devices such as a USB mouse, CD/DVD burner, and USB Hard Disk Drive (HDD).
3.	Status LEDs	<b>Power:</b> A flashing green light indicates the recorder is working correctly. Red indicates a fault. <b>Alarm:</b> A steady red light indicates that there is a sensor Alarm In or another alarm such as motion or tampering. A steady green light means there is no alarm. <b>Tx/Rx:</b> Flashing green indicates a normal network connection. No light indicates that it is not connected to a network. <b>HDD:</b> HDD indicator blinks red when data is being read from or written to the HDD. A steady red light indicates an HDD exception or error. <b>Ready:</b> A steady green light indicates that the recorder is functioning properly. <b>Archive:</b> Blinking green indicates archiving is in progress.
4.	Archive button	Press once to enter quick archive mode. Press twice to start archiving. Indicator blinks green when data is being written to backup device.
5.	Direction  Enter button	The DIRECTION buttons are used to navigate between different fields and items in menus.  The ENTER button is used to confirm selection in any of the menu modes. See Table 3 on page 20 for a detailed description of these buttons by different tasks.
6.	PTZ buttons	<b>Zoom +/-:</b> In live view mode, playback mode, and PTZ control mode use this button to zoom in and out. Also use them to navigate within menus. <b>Preset:</b> In PTZ Control mode, press Preset and a numeric button to call the specified preset. Also use to edit holiday mode, video search mode, HDD





Item	Name	Description
		<p>selection mode, user management mode, bookmark management, and bookmark search.</p> <p>Tour: In PTZ Control mode, press Tour and a numeric button to call the specified shadow tour.</p> <p>Also use to scroll between calendar months and to navigate in a text field.</p> <p>See Table 3 on page 20 for a detailed description of all these buttons for different tasks.</p>
7.	IR receiver	<p>Receiver for IR remote.</p> <p>To connect the remote control to the recorder, press the Device button, enter the device address, and press Enter. See “Using the IR remote control” on page 23 for more information.</p>
8.	Menu and Search buttons	<p>Menu: Enter/exit the main menu.</p> <p>Search: In live view, enter the advanced search menu.</p>
9.	Playback buttons	<p>See Table 3 on page 20 for a detailed description of all these buttons for different tasks.</p> <p> <b>Reverse:</b> In live view mode, use to play back the earliest video. In playback mode, playback a camera in the reverse direction.</p> <p> <b>Pause:</b> In live view, freeze the last image of the live display for all active cameras displayed. In playback mode, stop playback.</p> <p> <b>Play:</b> In live view mode, play all-day playback of the current camera (upper-left video tile if in multiview mode). In playback mode, play back a camera in the forward direction. In search mode, play back a selected video or view a snapshot. In PTZ mode, do an auto tour.</p> <p><b>Live:</b> Switch to live view mode.</p> <p><b>Replay:</b> In playback mode, start playing the current file. Starts at the beginning of the file.</p>
10.	Front panel lock	<p>You can lock or unlock the front panel with a key.</p>
11.	Display buttons	<p>See Table 3 on page 20 for a detailed description of all these buttons for different tasks.</p> <p><b>Display:</b> In multiview mode, toggle through the various multiviews (full, quad, 1+5, 1+7, 9, and 16).</p> <p>In HDD information mode and user management mode delete a selected item. In PTZ mode, delete a selected key point. In Log Search mode, display the details of a log file in Log Search result.</p> <p><b>Seq:</b> In Live View mode, start/stop sequencing cameras on the current monitor.</p> <p><b>A:</b> In Live View mode, select the main monitor.</p> <p><b>B:</b> In Live View mode, select the event monitor.</p> <p><b>F1:</b> In Playback mode, click to start and stop video clipping. For audio, press F1 and a numerical button to play the audio of the specified camera in live view.</p> <p>In System Information mode, get the DDNS URL. In User Management mode, pop up the Permission screen of a selected item in User Management &gt; User &gt; User Management. Delete a selected item from USB flash drive. Exit the virtual keypad.</p>

Item	Name	Description
		<b>F2:</b> In live view mode, all-day playback, and playback modes press to display or hide the time or control bar. In PTZ mode, stop all ongoing operations. Select or deselect an item. Enter a selected folder of the external storage device, such as a USB flash drive used for archiving.

**Table 3: Front panel button functions by task**

Task	Button	Button function
Live view mode	Direction	Press to cycle through channels.
	Enter	Press to show the PTZ control toolbar.
	Zoom +/-	Press + to digitally zoom in the current camera (upper-left video tile if in multiview mode) and press – to exit.
	 Reverse	Press to play the earliest video file of the current camera (upper-left video tile if in multiview mode).
	 Pause	Press to freeze the last image of the live display for all active cameras displayed.
	 Play	Press to play all-day playback of the current camera (upper-left video tile if in multiview mode).
	Live	Press to switch to live view mode;
	Seq	Press to start/stop sequencing cameras on the current monitor. Hold the Seq button for three seconds to start and stop sequencing on the even monitor.
	A	Press to select the main monitor.
	B	Press to select the event monitor.
Playback mode	F2	Press to display/hide the time bar.
	Menu	Lock or unlock the front panel by holding it for five seconds. Press to enter the advanced search menu.
	Direction	The left and right buttons are used to speed up and slow down recorded video. The up and down buttons are used to jump recorded video forwards or backwards by 30 s.
	Enter	Press to pause the video. Press again to restart the video. In single-frame Playback mode, press to advance the video by a single frame.
	Zoom +/-	Press + to zoom in the current camera (upper-left video tile if in multiview mode) and press – to exit.
	 Reverse	Press to play back a camera in reverse direction. In Picture Playback mode, view pictures in reverse direction.
	 Pause	In Playback mode, stop playback.
	 Play	In Playback mode, play back a camera in the forward direction.
	Replay	Press to start playing the current file. Starts at the beginning of the file.
	F1	Press to click to start and stop video clipping.

Task	Button	Button function
	F2	Press to hide the control panel.
Pause mode	Direction	The left and right buttons are used to jump recorded video forwards or backwards by one frame. The up and down buttons are used to jump recorded video forwards or backwards by one second.
PTZ control mode	Direction	Press to control the movement of the PTZ camera.
	Zoom +/-	Press to zoom in and out.
	Preset	Press Preset and a numeric button to call the specified preset.
	Tour	Press Tour and a numeric button to call the specified shadow tour.
	 Play	Press to do an auto tour.
	Display	Press to delete a selected key point from the PTZ Setting > More Settings> Tour > Key Point list.
	F2	Press to stop all ongoing operations.
Menu navigation	Direction	Press to navigate between different fields and items in menus.
	Menu	Enter/exit the main menu.
	Enter	Press to confirm the selection in any of the menu modes.
	Zoom +/-	Press Zoom + and – to switch between different tabs in a menu screen.
	Preset	Press to navigate in a text field, press to move the cursor to the left.
	Tour	Press to navigate in a text field, press to move the cursor to the right.
	F1	Press to exit the virtual keypad.
	F1	Select all or deselect all options in a menu.
Multiview mode	F2	Press to select or deselect an item.
	Display	Press to toggle through the various multiviews: full, quad, 1+5, 1+7, 9, and 16.
Calendar mode	Zoom +/-	Press Zoom+ and then the Up/Down buttons to scroll between months. Use the Left/Right buttons to scroll between years. Press Zoom+ again to quit the calendar mode.
	Tour	Press Tour and then the Up/Down buttons to scroll between months. Use the Left/Right buttons to scroll between years. Press Tour again to quit calendar mode.
	Menu	Press Menu and then Up/Down buttons to scroll between weeks. Press Menu and then Left/Right buttons to scroll between days.
Search mode	 Play	Play a selected video from the Event Search results. Play a selected video from the Log Search results. Play a selected video from the Normal Search results. View a selected picture from the Picture Search results. Play a selected video from the Bookmark Search results. Play a selected video on the USB flash drive.
Holiday mode	Preset	Press to edit a holiday listed under Display Mode Setting >

Task	Button	Button function
		Holiday > Holiday Setting.
Video search mode	Preset	Press to lock or unlock a selected video file in the Video Search results list.
User management mode	Preset	Press to edit a user selected from the list under User Management > User > User Management.
	Display	Press to delete a selected item in the User Management > User > User Management.
	F1	Press to pop up the Permission screen of a selected item in User Management > User > User Management.
Log search mode		Press to display the details of a log file in Log Search result.
HDD selection mode	Preset	Press to edit the selected HDD listed under System Setting > Hard Disk > HDD information.
HDD information mode	Display	Press to delete an item from System Settings > Hard Disk > HDD Information.
System information mode	F1	Press to get the DDNS URL.
Audio	F1	Press F1 and a numerical button to play the audio of the specified camera in live view.
USB flash drive	F1	Press to delete a selected item from USB flash drive.
	F2	Press to enter a selected folder of the external storage device, such as a USB flash drive used for archiving.

## Using the mouse

The USB mouse provided with the recorder can be used to operate all the functions of the recorder, unlike the front panel which has limited functionality. The USB mouse lets you navigate and make changes to settings in the user interface.

Connect the mouse to the recorder by plugging the mouse USB connector into the USB port on the front or back panel. The mouse is immediately operational and the pointer should appear.

**Note:** Use a USB 1.1 or higher mouse.

Move the pointer to a command, option, or button on a screen. Click the left mouse button to enter or confirm a selection.

You can purchase a spare mouse by ordering part number TVR-MOUSE-1.

See Table 4 below for a description of the mouse buttons.

**Table 4: Mouse buttons**

Item	Description	
Left button	Single-Click	<p><b>Live view:</b> Select a camera to display the quick access toolbar (see “Accessing frequently used commands” on page 34).</p> <p><b>Menu:</b> Select a component of a menu, such as a button or an input field. This is similar to pressing the Enter button on the remote/front panel controls.</p>
	Double-Click	<p><b>Live view:</b> Switch between single screen and multi-screen mode in live/ playback mode.</p>
	Click and Drag	<p><b>Live view:</b> Drag channel/time bar.</p> <p><b>PTZ control:</b> Adjust pan, tilt and zoom.</p> <p><b>Tamperproof, privacy masking and motion detection functions:</b> Select the target area.</p> <p><b>Digital zoom-in:</b> Drag and select target area.</p>
Right button	Single-Click	<p><b>Live view:</b> Display menu.</p> <p><b>Menu:</b> Exit the current menu and return to higher level.</p>
Scroll-wheel	Scroll Up	<p><b>Live view:</b> Return to the previous screen.</p> <p><b>Menu:</b> Move the selection to the previous item.</p>
	Scroll Down	<p><b>Live view:</b> Move to the next screen.</p> <p><b>Menu:</b> Move the selection to the next item.</p>

## Using the IR remote control


The recorder is supplied with an infrared (IR) remote control unit. Like the mouse, it can be used to operate all of the main functions of the recorder.

The IR remote control can be programmed with a unique device ID address so that the controller will only be able to communicate with recorders with that address. No programming is necessary if using a single recorder.

The device ID address only applies when using a remote control and not when using a keypad.

You can purchase a remote control by ordering part number TVR-REMOTE-1 IR Remote Control.

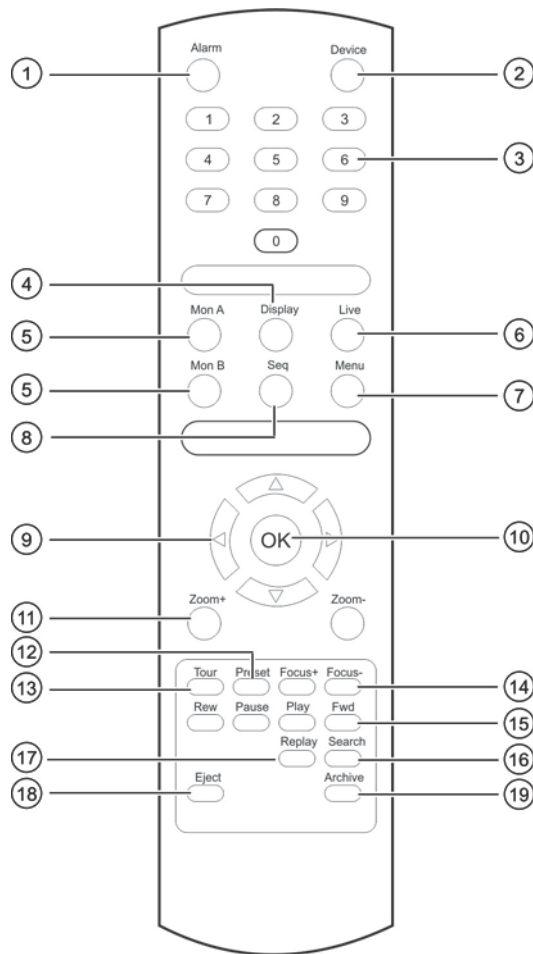**Figure 8: IR remote control**



Item	Description
1. Alarm	Acknowledge an alarm.
2. Device	Enable/disable the IR remote control to control the recorder.
3. Numeric buttons	Select a camera, and enter a number in a menu option.
4. Display	Switch between the different multiviews.
5. Mon A and Mon B	Switch between monitors A and B.
6. Live	Return to live view mode.
7. Menu	Activate the main menu.
8. Seq	Start /stop sequencing.
9. <, >, ^, v	In Menu mode: Use left or right arrow buttons to select and up or down arrow buttons to edit entry. In PTZ mode: Use to control PTZ. In Playback mode: Use to control playback speed.
10. OK	Confirm selection.
11. Zoom + and -	Use to control zoom of camera lens.
12. Preset	Enter preprogrammed three-digit code to call up a preset.
13. Tour	Enter preprogrammed one-digit code to call up a tour.

Item	Description
14. Focus + and -	Use to control focus of camera lens.
15. Playback control	Use to control playback (Rewind, Pause, Play, and Fast Forward).
16. Search	Open the Search menu.
17. Replay	Replay the selected file from the beginning.
18. Eject	Eject the CD or DVD disk.
19. Archive	Press once to enter quick archive mode. Press twice to start archiving.

Aim the remote control at the IR receiver located at the front of the unit to test operation.

#### To connect the remote control to the recorder:

1. Press the **Menu** button on the front panel or right-click the mouse and select the **Menu** button. The main menu screen appears.
2. Click **Display Mode Settings > Monitor**.
3. Check the device address value. The default value is 255. This device address is valid for all IR controls.
4. On the remote control press the **Device** button.
5. Enter the device address value. It must be the same as that on the **recorder**.
6. Press **OK** on the remote control.

#### To place batteries into the IR remote control:

1. Remove the battery cover.
2. Insert the batteries. Make sure that the positive (+) and negative (-) poles are correctly placed.
3. Replace the battery cover.

#### Troubleshooting the remote control:

If the IR remote control is not functioning properly, perform the following tests:

- Check the battery polarity.
- Check the remaining charge in the batteries.
- Check that the IR remote control sensor is not masked.

If the problem still exists, please contact your administrator.


# Menu overview

The recorder has an icon-driven menu structure that allows you to configure the unit's parameters. Each command icon displays a screen that lets you edit a group of settings. Most menus are available only to system administrators.

The screen is divided into three sections. The currently selected command icon and submenu item are highlighted in green. See Figure 9 below.



You must be in live view mode to access the main menu.

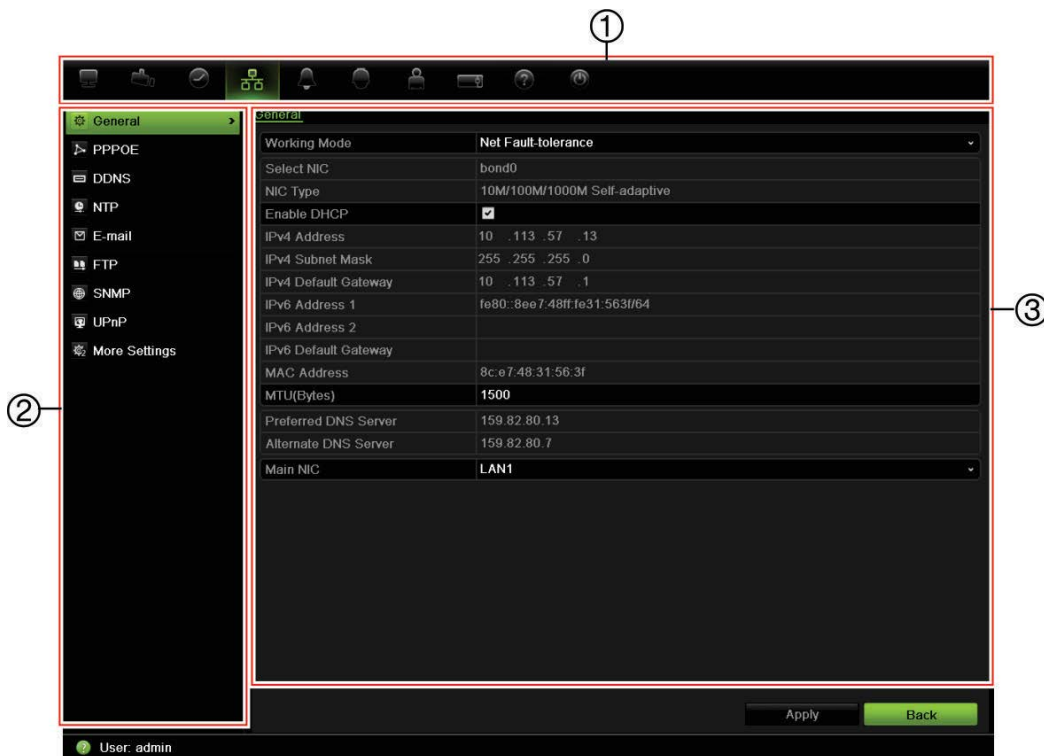Figure 9: Menu structure











1. **Menu toolbar:** Setup options available for the selected menu function. Move the mouse over a command icon and click to select it. See Table 5 below for a description of the icons.
2. **Submenu panel:** Submenus for the selected menu function are displayed. Click an item to select it.
3. **Setup menu:** All the details for the selected submenu are displayed. Click a field to make changes.

Table 5: Description of the menu toolbar icons

Icon	Name	Description
	Display mode settings	Configures display settings including system date and time, audio output, device name, dwell time, language, and display formats. See “Configuring live view” on page 36 and “Holiday schedules” on page 87.
	Camera management	Configures camera settings including OSD display, motion detection, privacy masking, video image adjustments, video loss, add/edit camera, tamper-proof, covert camera, and copy settings to other cameras. See Chapter 14 “Camera settings” on page 121.



Icon	Name	Description
	Video schedule	Configures recording settings including recording schedules, record quality, auto delete mode, recording mode, manual record, overwrite, hot spare, and event priority. See Chapter 10 "Recording" on page 83.
	Network settings	Configures standard network settings including IP address, e-mail notifications, DDNS setup, and advanced network settings. See Chapter 12 "Network settings" on page 105.
	Alarm settings	Configures alarm settings including alarm input, relay output, buzzer time, and remote alert. See Chapter 11 "Alarm settings" on page 95.
	PTZ settings	Configures PTZ settings including RS-485 settings. See Chapter 6 "Controlling a PTZ camera" on page 43.
	User management	Configures users, passwords, and access privileges. See Chapter 16 "User management" on page 135.
	System settings	Export/import configuration file, display system information, and configure system settings including RS-232 settings, firmware upgrade, hard drive settings, text insertion, and boot log. See Chapter 13 "Storage management" on page 115 and Chapter 15 "Recorder management" on page 129.
	Help information	Provides reference information to the various toolbars, menus, and keys within the interface.
	Power manager	Provides access to logout, reboot and shutdown options. See "Turning on and off the recorder" on page 11.


### To access the main menu:

- In live view press the **Menu** button on the remote control or front panel.  
- Or -  
Right-click the mouse and select **Menu** from the pop-up menu.  
The main menu screen appears. The Display screen appears by default.
- Click the required menu icon to display its submenu options. Modify the configuration parameters as required.
- Click **Apply** to save the settings.
- Click **Back** to return to live view.

## Using the soft keyboard

A keyboard will appear on-screen when you need to enter characters in a screen option. Click a key to input that character.

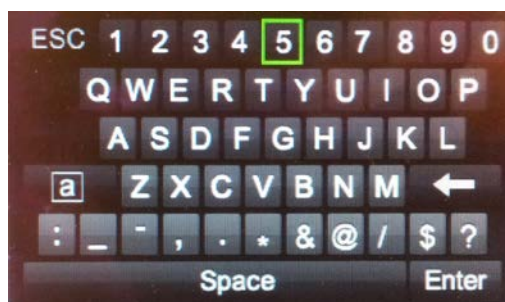Figure 10: The soft keyboard



Description of the keys in the soft keyboard:

	Switch to lowercase/uppercase
	Space
	Exit the soft keyboard
	Alphanumeric characters
	Backspace
	Confirm selection

## Exiting the main menu

Press the **Menu** button on the front panel to exit the current menu screen and return to live view or click **Back** in a main menu.

# Chapter 5

## Live view







### Description of live view

Live view mode is the normal operating mode of the unit where you watch live images from the cameras. The recorder automatically enters into live view mode once powered up. On the viewer, you can see the current date and time, camera name, and whether a recording is in progress.

### Status information

Information on the system and camera status is displayed as icons on the main and spot monitors. The camera status icons are shown for each camera. Each icon represents information on a specific item. These icons include:

 **Table 6: Description of the on-screen status icons**

 Icon	Description
	Indicates a sensor alarm.
	Indicates recording (such as constant recording, motion detection or alarm-triggered recording).
	Indicates a motion detection event.
 No Video Link	Indicates a video loss event.
	Indicates alarms and system notifications. Clicking the icon opens a screen that lists the alarms and notifications.
	Indicates manual recording.

More than one icon can be displayed at the same time.

The system status is displayed on the front panel by the status LEDs.

## Video output

The recorder can be connected to up to three monitors. However, only one monitor can be controlled at a time.

The recorder automatically checks the monitor outputs used. If more than one monitor is connected, it then defines which monitor is the main one and which is the auxiliary.

If a HDMI monitor is used, it will be the main output. If HDMI and VGA monitors are both connected to the recorder, both will be main monitors; they will both show the same view. However, you will not be able to control each individually.

### To select the video output of the main monitor:

1. From the menu toolbar, click **Display Mode Settings > Layout > General**.
2. From **Video Output Interface**, select which monitor will be the main monitor: HDMI (depends on recorder model), VGA, or main BNC. HDMI is default, if connected.

### To control a monitor:

On the front panel press button A to select the main monitor. Press button B to select the event monitor.

## Monitor output

The decoding capabilities for the recorder in live view are:

- 1 × 1 main stream
- 2 × 2 main stream
- 1 main stream and 5 substreams
- 1 main stream and 7 substreams
- 3 × 3 substreams
- 4 × 4 substreams

The number of cameras that can be played back together depends on the camera resolution. See Table 7 on page 31.

**Table 7: Monitor output for playback**


Resolution (NTSC/PAL)	Number of recorder channels		
	32 (TVN 21P only)	16	8
4CIF/VGA	16	16	8
1280 × 720	16	16	8
1280 × 960	8	8	8
1920 × 1080	8	8	8
2048 × 1536 (15/12f)	4	4	4
2560 × 1920 (6f)	2	2	2
3072 × 2048	1	1	1

## Audio output

The HDMI monitor connector on the back panel outputs both video and audio signals. There is an audio output on the back panel for speakers.

## Controlling live view mode

Many features of the live view mode can be quickly accessed by placing the cursor on a live image and clicking the right-button of the mouse. The mouse menu appears (see Figure 11 below).

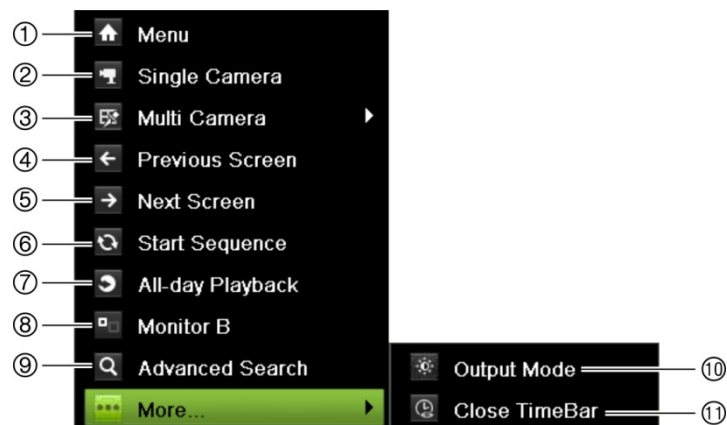**Figure 11: The mouse menu for the main monitor**

The list of commands available depends on which monitor is active; main or event (monitor B). See Table 8 below. The default settings of these commands are provided in Appendix G, “Default menu settings” on page 157.

**Table 8: Mouse menu for monitor A (main monitor)**

Item	Name	Description
1.	Menu	Enter the Main menu. This option is not available from monitor B.
2.	Single camera	Switch to a full-screen view for the selected camera from the dropdown list.
3.	Multi camera	Switch between the different multiview options from the dropdown list.
4.	Previous screen	Displays the previous camera.
5.	Next screen	Displays the next camera.
6.	Start sequence	Turn on sequence mode. The screen automatically sequences between cameras. See “Viewing in multiview” on page 33. Go to Menu > Display Mode Settings > Layout > Dwell Time to set up.
7.	All-day playback	Playback the recorded video of the selected day from the selected camera. The current day is selected by default. See “All-day playback” on page 55 for more information.
8.	Monitor B	Switch between monitors A (main) and B (event).
9.	Advanced search	Enter the advanced video search menu. See ““Searching recorded video” on page 56” for more information.
10.	Output mode	Select Standard, Bright, Soft, or Vivid.
11.	Close timebar	Open/close the time bar.

**Note:** When the monitor B is active, the main monitor commands are unavailable.

**Table 9: Mouse menu for monitor B (spot monitor)**

Item	Name	Description
1.	Single camera	Switch to a full-screen view for the selected camera from the dropdown list.
2.	Multi camera	Switch between the different multiview options from the dropdown list.
3.	Previous screen	Displays the previous camera.
4.	Next screen	Displays the next camera.
5.	All-day playback	Playback the recorded video of the selected day from selected cameras. See “All-day playback” on page 55 for more information.
6.	Monitor A	Switch between monitors A (main) and B (spot).

## Multiview format

The recorder has full screen display format as well as five multiview formats.

### Viewing in full screen

Press the numeric button on the front panel to switch to the corresponding camera display. For example, press button 10 to view camera 10.


Right-click the mouse and select **Single Camera** from the menu. Select the camera required from the list.

### Viewing in multiview

A video tile is any cell in a multiview display. A camera image can only be shown in one video tile at a time. The recorder has up to five multiview display formats available (depending on recorder model) as well as full screen. See Figure 12 below.

To change the multiview display that appears by default, go to the Display menu. See “Changing the camera sequence” on page 37 for more information.

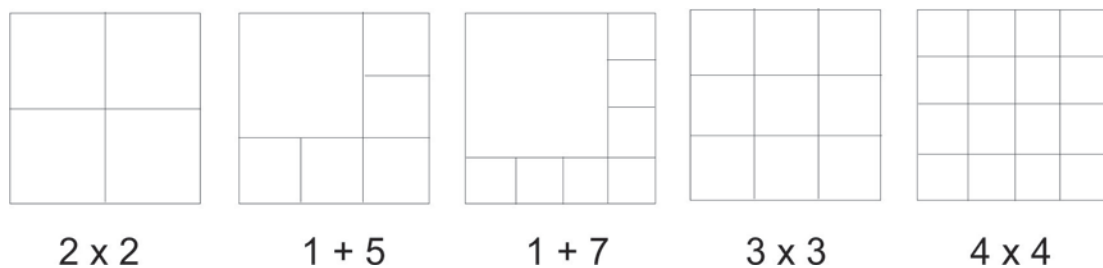Figure 12: Multiview display formats



#### To select a multiview format:

1. Press the Display button on the front panel to cycle through different display formats.

You can also right-click the mouse and select **Multi Camera** from the menu. Select the desired multiview display layout.

## Sequencing cameras

The sequencing feature allows a camera to be displayed briefly on screen, before advancing to the next camera in the sequence list.

The default sequence displays each camera in numerical order. However, each camera on the main and spot monitors can have a pre-programmed dwell time and sequence order. See “Changing the camera sequence” on page 37 for more information.

### Sequencing live view mode using the front panel:

1. Select the camera where you want to start sequencing.
2. Press the **Seq** button on the front panel to start sequencing.
3. Press the **Seq** button again to stop the sequencing.

### Sequencing live view mode using the mouse:

1. Select the camera where you want to start sequencing.
2. Right-click the mouse and select **Start auto-switch** to start the sequencing.
3. Right-click the mouse and select **Stop auto-switch** to stop the sequencing.






 

## Accessing frequently used commands

The quick access toolbar in live view lets you quickly access regularly used commands. Position the cursor over a video image and left-click the mouse. The toolbar appears (see Figure 13 below).




 
 
Figure 13: Quick access toolbar



Table 10: Description of the quick access toolbar icons

Icon	Description
	<b>Freeze:</b> Freeze the live image of the selected camera. Although the image pauses, time and date information does not. The system clock continues to run.
	<b>Manual recording:</b> Start/stop manual recording. The icon is red when manual recording is enabled. See “Manual recording” on page 88 for information on setting up this function.
	<b>Instant playback:</b> Playback the recorded video from the last five minutes (default time). If no recording is found, then there was no recording made. Click the icon and select the desired camera. Click OK. See “Instant playback” on page 54 for information on programming this time.
	<b>Audio:</b> Enable/Disable audio output. The audio option must already have been setup in the Display menu.
	<b>Quick snapshot:</b> Capture a snapshot of a video image. The image is saved on the unit.
	<b>PTZ control:</b> Enter PTZ control mode.
	<b>Digital zoom:</b> Enter digital zoom. See “Digital zoom” below for further information.



Icon	Description
	<p><b>Image settings:</b> Enter the image settings menu to modify the image lighting levels. There are two options:</p> <p><b>Customize:</b> Modify brightness, contrast, saturation, and hue values.</p> <p><b>Restore:</b> Restore image settings to previous values.</p> <p>These settings can also be modified from the Camera&gt;Image menu (see page “Adjusting video image settings” on page 127).</p>
	<p><b>Text show:</b> Display inserted text on screen. Color of the text can be changed: Black, white, or pink.</p>
	<p><b>Auxiliary focus:</b> Automatically focus the camera lens for the sharpest picture.</p>
	<p><b>Lens initialization:</b> Initialize the lens of a camera with a motorized lens, such as PTZ or IP cameras. This function helps to maintain lens focus accuracy over prolonged periods of time.</p>
	<p><b>Close toolbar:</b> Close the shortcut toolbar.</p>

## Digital zoom

You can easily zoom in or out of a camera image in live view mode and playback using the digital zoom command. The zoom command magnifies the camera image four times. See Figure 14 on page 35.

Figure 14: Digital zoom screen



### To quickly zoom in/out on a camera image:

1. Select the camera you wish to use.
2. Left-click the mouse and select the digital zoom icon, or on the front panel press the **Zoom+** button. The digital view screen appears.

3. Left-click the mouse and drag the red square to the area of interest, or press the directional buttons on the front panel to position the red square. The selected area is magnified.
4. To exit digital zoom, right-click the mouse or press the **Zoom-** button on the front panel.

## Configuring live view

The setup of live view can be modified from the main menu to suit different needs, such as the different monitors, multiview layout, and dwell time options. You can also enable audio output.

Figure 15: Layout screen



Table 11: Description of the layout screen

Submenu name	Description
<b>General tab</b>	
Video output interface	Select which monitor will be the main monitor: HDMI (depends on recorder model), VGA, and main CVBS. Default is VGA, if connected.
Live view mode	Select which multiview layout will be default in live view mode. Default is 3x3 multiview layout for the 8-channel recorder and 4x4 for the 16 or 32-channel recorder.
Dwell time	Set the length of time for which a camera image is displayed on the selected monitor before moving to the next camera during sequencing. Default is off (“No switch”).
Enable audio out	Check the box to enable/disable audio output. Default is disable.
Event output	Designates which monitor will be the output to show the event. Default is HDMI.
Event full screen monitoring dwell time	Set the length of time for which an event appears on the output monitor before moving to the next camera during sequencing. Default is 10 seconds.

Submenu name	Description
<b>General tab</b>	
Alarm full screen monitoring dwell time	Set the length of time for which an alarm appears on the output monitor before moving to the next camera during sequencing. Default is 10 seconds.

### To set up the display options:

1. Click the **Display Mode Settings** icon in the menu toolbar.
2. Select **Layout > General**.
3. Specify the desired settings for each of the menu options.
4. Click **Apply** to save the settings.
5. Click **Back** to return to live view.


## Changing the camera sequence

The cameras are sequenced in numeric order by default. You can change the sequence order of the cameras for all monitors.

You can switch the channel of a camera with that of another camera in the system. This lets you, for example, have the images of camera 1 appear on channel 10, and the images of camera 10 appear on channel 1. This feature is useful when you want to watch the sequence of images from specific cameras so that they are next to each other on-screen.

See Figure 16 below. Each video tile displays both the order of the camera in the sequence and the camera number.

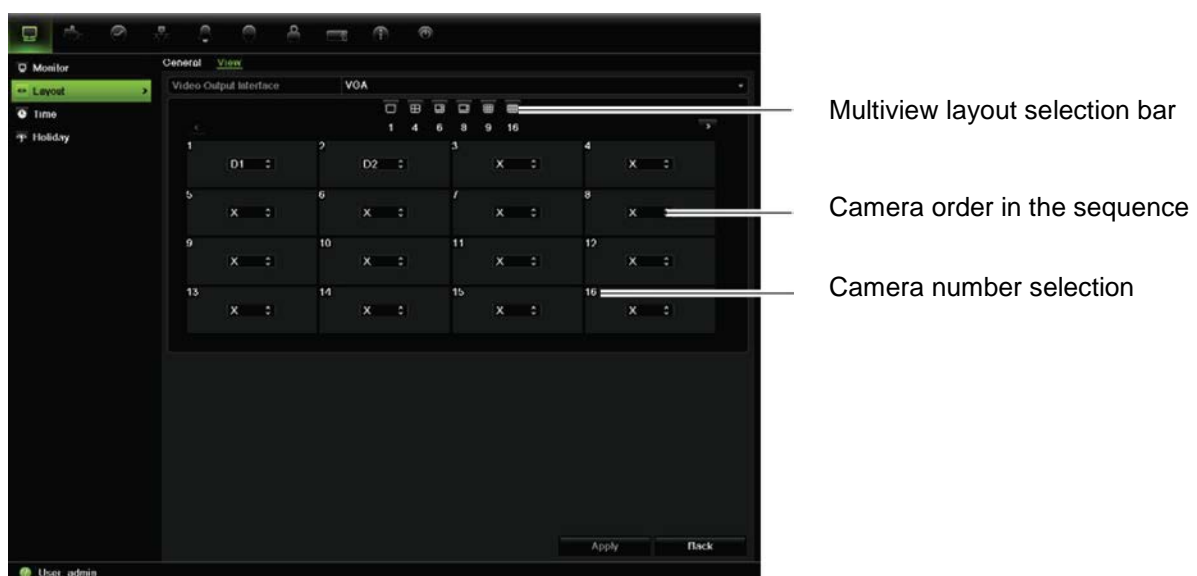Figure 16: Camera layout and sequence screen



**To set the camera sequencing:**

1. From the menu toolbar, click **Display Mode Settings > Layout > View**.
2. From **Video Output Interface**, select the desired monitor from the drop-down list.
3. From the multiview layout selection bar, select the desired multiview layout.
4. Select the video tile of the camera whose order you want to change. The selected tile is highlighted green.
5. In the selected tile, select the new camera sequence order by scrolling through the list of available camera numbers.

**Note:** “X” means that the camera is not displayed.

6. Click **Apply** to save the settings.
7. Click **Back** to return to live view.

## General settings

Use this screen to configure the monitor image, GUI language, login password requirement, monitor resolution as well as to configure the recorder name and address. See Figure 17 below.

The recorder can support NTSC or PAL video output. The video format is auto detected.

The changes are immediately implemented once Apply is clicked to save the settings.

**Figure 17: Monitor setup screen: General Settings**



**Table 12: Description of the Monitor setup screen: General Settings**

Option	Description
Language	Change the language of the system. Select the desired language from the drop-down list and click <b>Apply</b> . The language displayed changes immediately.

Option	Description
Device name	Define the recorder name. The default name is TVN 21. Click the edit box and enter the new name from the soft keyboard.
Device address	The device number to use for the recorder when programming the remote control. The default value is 255.
Zone ID	Each recorder in a daisy chain must have a unique zone ID so that it can be controlled by a KTD-405 keypad. The default value is 1.
VGA resolution	Define the VGA resolution. Select one of the options from the drop-down list and click <b>Apply</b> . The selected resolution must be the same as that of the monitor.
HDMI resolution	Define the HDMI resolution. Select one of the options from the drop-down list and click <b>Apply</b> . The selected resolution must be the same as that of the monitor.
Password required	Define whether a login password is required. Check the box to enable/disable and click <b>Apply</b> .
Enable wizard	Define whether the wizard tool starts when the recorder is turned on. Check the box to enable/disable and click <b>Apply</b> .
Display status icons	Define whether the status icons are displayed.

Figure 18: Monitor Setup screen: More Settings



Table 13: Description of the Monitor Setup screen: More Settings

Option	Description
Monitor standard	The video standard used is auto detected but can be manually changed. Modify the video standard used to PAL or NTSC and click <b>Apply</b> .
Output mode	Define the desired output mode. Select one of the options from the drop-down list: Standard, Bright, Soft, or Vivid.
Monitor brightness	Modify the video output brightness. Adjust the scroll bar point to the desired level and click <b>Apply</b> .
Event hint	Define whether the event hint icon appears on screen. See “Status information” on page 29 for more information.

Option	Description
TimeBar transparent	Modify the transparency of the menus on-screen relative to the background to make the menu screens easier to read or less prominent on-screen. Default is non-transparent. Select one of the options from the check box. Check the box to enable or disable and click Apply.
Enable TimeBar	Enable/Disable Time Bar in live view mode.
TimeBar size	Modify the size of the system time bar that always appears on-screen. The sizes available are large, medium, or small.
Instant playback time	Modify the instant playback replay period. The time options are between five to 30 minutes from actual time. Default is five minutes.
Enable logout lock	When the system logs out, the front panel is automatically locked. To unlock the front panel, press the Live button for 5 seconds.
Menu timeout	Define the time in minutes after which the menu screen reverts to live view mode. Select a time from the drop-down list and click Apply.
Mouse pointer speed	Modify the speed of the mouse pointer. Adjust the scroll bar point to the desired level and click <b>Apply</b> .

## Configuring time and date

You can set up the date and time that will appear on-screen. It is not included in recordings. This time and date display is separate from the embedded one that appears for each camera (see “Configuring the camera OSD settings” on page 125 for more information on embedded camera time and date).

The start and end time of daylight saving time (DST) in the year can also be set. DST is deactivated by default. See Figure 19 below for the Time settings screen.

Figure 19: Time and date settings screen



Table 14: Description of the time and date settings screen

Option	Description
Time zone	Select the time zone of the recorder from the drop-down list.
Date format	Select the date format from the drop-down list. Default format is MM-DD-YYYY.
Time format	Select the time format from the drop-down list. Default format is 24-hour format.
Display week	Display the day of the week in the monitor time bar. Check the box to enable/disable. Default format is Disable.
System date	Define the system date. Default date is the current date.
System time	Define the system time. Default time is the current time.
Auto DST adjustment	Define DST is automatically. It depends on the time zone selected. Default format is Disable.
Enable DST	Manually define DST. If this option is selected, the Auto DST adjustment option is disabled. Default format is Disable. Click the check box to enable or disable daylight savings time (DST).
From	Enter the start date and time for daylight savings.
To	Enter the end date and time for daylight savings.
DST bias	Set the amount of time to move DST forward from the standard time. Default is 60 minutes.

**To set up the system time and date:**

1. From the menu toolbar, click **Display Mode Settings > Time**.
2. Modify the settings to the desired values.
3. Click the **Apply** button to immediately implement the changes.



# Chapter 6

## Controlling a PTZ camera

You can control PTZ dome cameras using the buttons on the front panel, the keypad, and IR remote control as well as using the PTZ control panel accessed with the mouse. Access to PTZ commands may require a password.

### Changing PTZ camera settings

You can easily change the PTZ protocol and address of the camera.

A detailed list of the PTZ commands available for many different camera protocols is available in Appendix F on page 157.

#### To change a PTZ camera settings:

1. From the menu toolbar, click **PTZ Settings > General**.
2. Enter the desired PTZ protocol and address.
3. Click **Back** to return to live view.

### Calling up presets, tours and shadow tours

When in live view you can quickly call up the list of existing presets, preset tours, and shadow tours by using the front panel, remote control, mouse, and keypad.

Front panel	Press Enter. PTZ control panel appears.
Mouse	Left-click the mouse on the desired camera image. The quick access toolbar appears. Click the PTZ control icon to enter PTZ mode. The PTZ control panel appears.
Remote control	Press the OK button. The PTZ control panel appears.
Keypad	Press the Enter ↵ button on the keypad. For further information, see Appendix D “KTD-405 keypad” on page 147.

If the display is in multiview format, it changes to full screen format for the selected camera. See Figure 20 below for a description of the PTZ control panel.

Figure 20: PTZ control panel

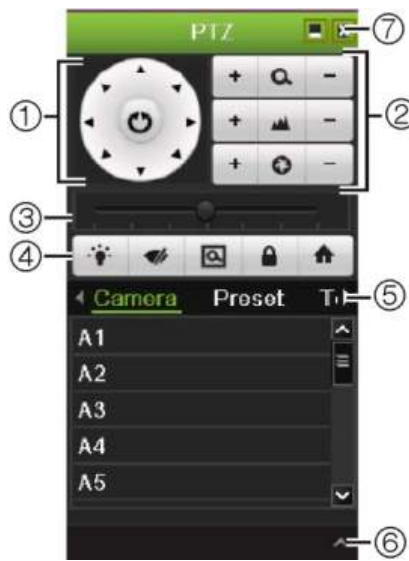







Table 15: Description of the PTZ control panel

Item	Name	Description
1.	Directional pad/auto-scan buttons	Controls the movements and directions of the PTZ. Center button is used to start auto-pan by the PTZ dome camera.
2.	Zoom, focus and iris	Adjusts zoom, focus and iris.
3.	PTZ movement	Adjusts the speed of PTZ movement.
4.	Toolbar	 Turns on/off camera light. This command is not supported on all PTZ cameras.  Turns on/off camera wiper. This command is not supported on all PTZ cameras.  Zoom area.  Centers the PTZ dome camera image. Not all PTZ cameras support this command.  Jumps to the home position.
5.	Select PTZ command	Displays the desired function from the scroll bar: camera, preset, preset tour or shadow tour.
6.	Open/close menu	Opens/closes the PTZ command section of the PTZ control panel.
7.	Exit	Exits the PTZ control panel.

## Setting and calling up presets

Presets are previously defined locations of a PTZ dome camera. It allows you to quickly move the PTZ dome camera to a desired position. They are configured and modified from the PTZ configuration window (see Figure 21 below).

**Note:** The PTZ dome camera used must be able to support a preset command. See Appendix F on page 157 for the complete list of PTZ commands available by camera protocol.

Figure 21: PTZ configuration window












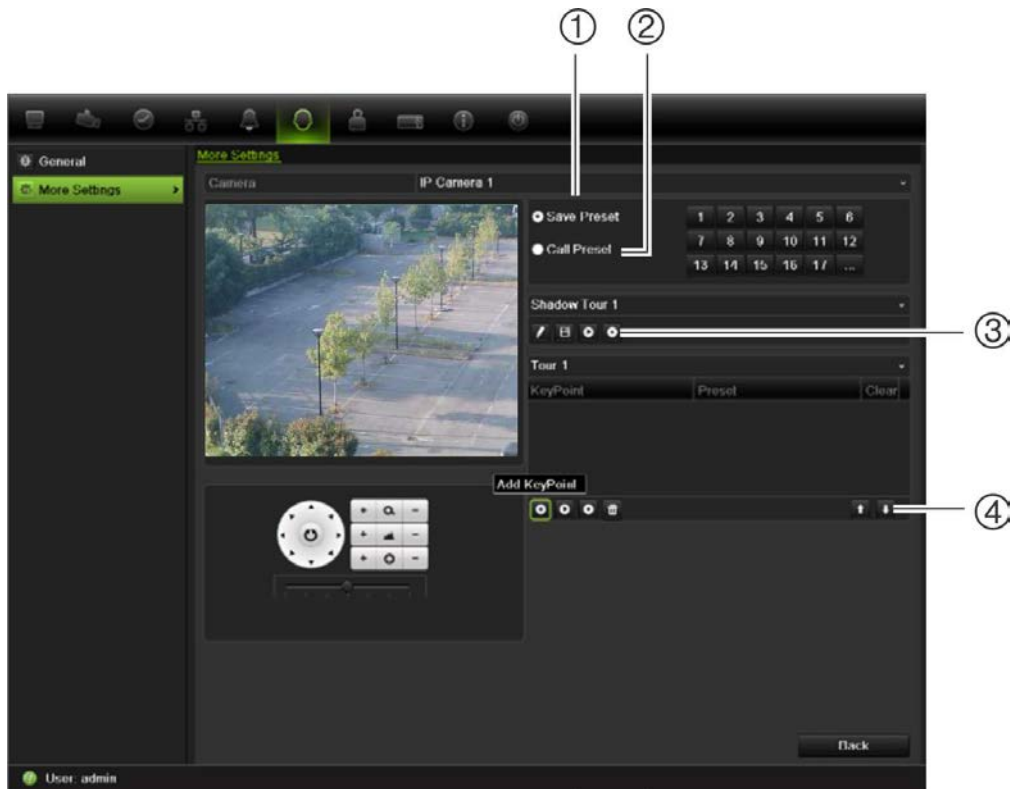

Table 16: Description of the PTZ configuration window

Item	Name	Description
1.	Save preset	Saves preset.
2.	Call preset	Calls up pre-existing preset.
3.	Shadow tour toolbar	 Start recording the shadow tour.
		 Save the shadow tour.
		 Start the selected shadow tour.
		 Stop the selected shadow tour.
4.	Preset tour toolbar	 Add a step to a selected preset tour.
		 Start the selected preset tour.
		 Stop the selected preset tour.
		 Delete all the preset tour steps.
		 Move the selected preset to an upper level.
		 Move the selected preset to a lower level.

### To set up a preset:

1. From the menu toolbar, click **PTZ Settings > More Settings**.
2. Use the directional, zoom, focus and iris buttons to position the camera in the desired preset location.

3. Check **Save Preset** and click a preset number. The preset is enabled and stored in the camera.

If the desired preset number is larger than the 17 numbers listed, click [...]. The Preset screen appears. Select a preset number by scrolling through the list of available presets and click the **OK** button to save changes.

**Note:** Presets can be overwritten.

4. Click **Back** to return to live view.

#### To call up a preset:

- **PTZ control panel:**

1. In live view left-click the mouse and select the PTZ control icon in the quick access toolbar. The PTZ control panel appears. Select the desired camera from the toolbar.

– Or –

On the front panel, select the desired camera and press **Enter** to call up the quick access toolbar. The PTZ control panel appears.

2. Scroll the toolbar to **Preset** and double-click the desired preset from the list. The camera immediately jumps to the preset position.

- **Menu toolbar:**

1. From the menu toolbar, click **PTZ Settings > More Settings**. The PTZ configuration window appears.
2. Check **Call Preset** and enter the preset number to call up. The camera immediately moves to that preset position.
3. Click **Back** to return to live view.

## Setting and calling up preset tours


Preset tours move a PTZ dome camera to different steps (called “Keypoint” in the interface). The camera stays at a step for a set dwell time before moving on to the next step. The steps are defined by presets (see “Setting and calling up presets” on page 44).

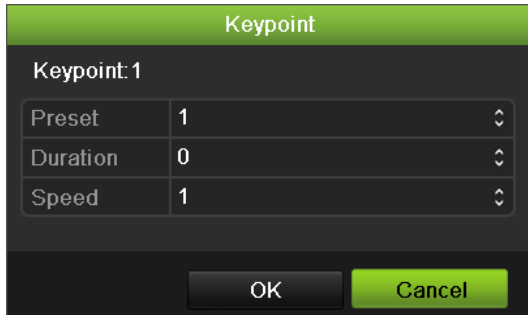
Each preset tour consists of steps. A step consists of a step number, a dwell time, and a speed.

The step number is the order the camera will follow while cycling through the preset tour. The dwell time is the length of time for which a camera stays at a step before moving to the next one. The speed is the rate at which the camera will move from one key point to the next.

**Note:** The PTZ dome camera used must be able to support a preset tour command. See Appendix F on page 157 for the complete list of PTZ commands available by camera protocol.


### To set up a preset tour:

1. From the menu toolbar, click **PTZ Settings > More Settings**.
2. Select the preset tour number.
3. In the preset tour toolbar, click  to add a step to the preset tour. The Keypoint window appears. Select the preset number, dwell time and speed of the step. Click **OK** to save the settings.




**Note:** A preset tour should have at least two presets.

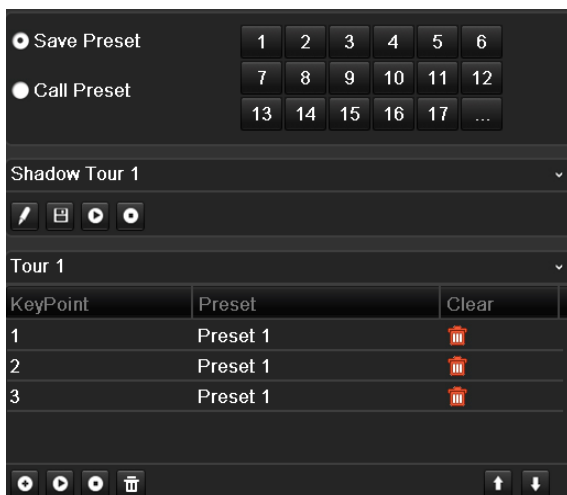4. Repeat step 3 to configure other steps (Keypoints) in the preset tour.



5. Click **Back** to return to live view.

### To delete a preset tour:

1. From the menu toolbar, click **PTZ Settings > More Settings**.
2. From the preset list, select a tour number and click  to delete the selected the preset tour.

– Or –

In the preset tour toolbar, click  to delete all the presets for the selected tour.

3. Click **Back** to return to live view.

### To call up a preset tour:

- **PTZ control panel:**



1. In live view left-click the mouse and select the PTZ control icon in the quick access toolbar. The PTZ control panel appears. Select the desired camera from the toolbar.

– Or –

On the front panel, select the desired camera and press **Enter** to call up the quick access toolbar. The PTZ control panel appears.

2. Scroll the toolbar to **Tour** and double-click the desired preset tour from the list. The camera immediately carries out the preset tour movement.

- **Menu toolbar:**



1. From the menu toolbar, click **PTZ Settings > More Settings**.
2. Select the desired preset tour from the list and click  to start the tour. Click  to stop the preset tour.
3. Click **Back** to return to live view.

## Setting and calling up a shadow tour

The shadow tour command remembers the manually-controlled PTZ dome camera movement track. One shadow tour can be set up.

**Note:** The PTZ dome camera used must be able to support a shadow tour command. See Appendix F on page 157 for the complete list of PTZ commands available by camera protocol.

### To set up a shadow tour:

1. From the menu toolbar, click **PTZ Settings > More Settings**.
2. Select the shadow tour from the list.
3. To record a new shadow tour, click  and use the directional buttons on the PTZ control panel to move the camera along the desired path.
4. Click  to save the shadow tour.

**Note:** The shadow tour can be overwritten.

5. Click **Back** to return to live view.

### To call up a shadow tour:

- **PTZ control panel:**



1. In live view left-click the mouse and select the PTZ Control icon in the quick access toolbar. The PTZ control panel appears. Select the desired camera from the toolbar.

– Or –

On the front panel, select the desired camera and press **Enter** to call up the quick access toolbar. The PTZ control panel appears.

2. Scroll the toolbar to **Shadow Tour** and double-click the shadow tour from the list. The camera immediately carries out the shadow tour movement.

- **Menu toolbar:**

1. Click the **PTZ Settings** icon on the menu toolbar and select **More Settings**.
2. Select the shadow tour from the list and click  to start the tour. Click  to stop the shadow tour.
3. Click **Back** to return to live view.





# Chapter 7

## Playing back a recording

The recorder lets you quickly locate and play back recorded video. There are four ways to play back video:

- Instant playback of the most recently recorded video
- All-day playback of the day's recorded video
- Search the video archives by specific time, events, bookmarks, or snapshots
- Search the system log

The recorder continues to record the live view from a camera while simultaneously playing back video on that camera display. You must have the access privilege to play back recordings (see “Customizing a user’s access privileges” on page 136 for more information).


Cameras in multiview mode play back simultaneously. This means, for example, that it is easy to follow the path of an intruder who has passed in front of several cameras.

### Overview of the playback window

It is easy to manage playback from the playback window.

The playback video can be set up to display a time/date stamp for evidentiary purposes (see “Configuring the camera OSD settings” on page 125).

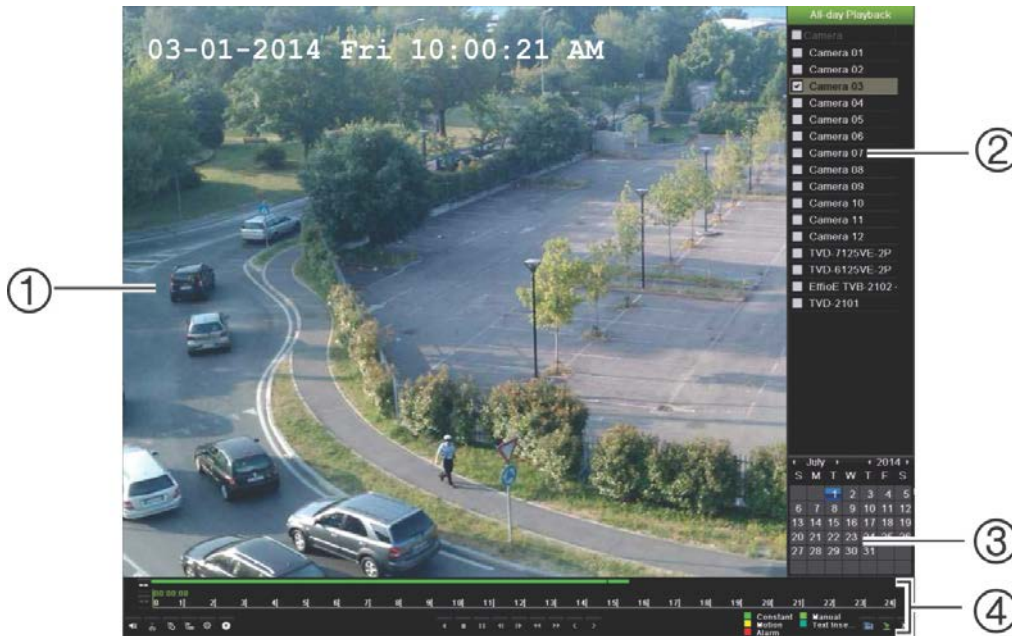**Figure 22: Playback window**




1. Playback viewer.
2. Camera panel. Select the cameras for playback. Move the mouse over the area to display the list of cameras available.
3. Calendar panel.  
Blue: Current date  
Green/Yellow/Red: Recordings available on the recorder.
4. Playback control toolbar. See Figure 23.

## The playback control toolbar

It is easy to manually control playback using the playback control toolbar. See Figure 23 below.

**Note:** The control toolbar does not appear for instant playback.



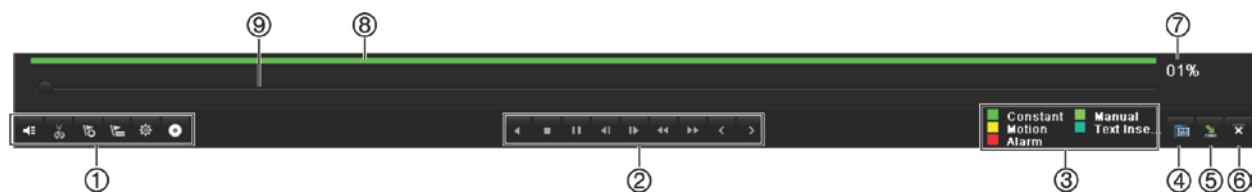







**Figure 23: Playback control toolbar (search playback example shown)**



### Description

1. **Audio and video control toolbar:**


- / Audio on/off.
- / Start/stop a video clip during playback. Sections of a recording can be saved to an external storage device.
- Add default bookmark
- Add customized bookmark
- Bookmark management.  
Click to see the list of bookmarks and their times. They can be renamed or deleted.

	Description
	Archive files
2.	<b>Playback control toolbar:</b>
	Reverse play the recording. Click again to pause.
	Stop playback. Timeline jumps back to 00:00 time (midnight).
	Play and pause recording.
	Forward Skip: Fast forward playback by the configured skip time.
	Reverse skip: Reverse playback by the configured skip time.
	Decrease playback speed. Options available are: single frame, 1/8 speed, 1/4 speed, 1/2 speed, normal, 2X speed, 4X speed, 8X speed, 32X speed, 100X speed, 300X speed.
	Increase playback speed. Options available are: single frame, 1/8 speed, 1/4 speed, 1/2 speed, normal, 2X speed, 4X speed, 8X speed, 32X speed, 100X speed, 300X speed.
	Play previous file/day/event recording.
	Play next file/day/event recording in the search result.
3.	<b>Recording type:</b> Description of the color coding of recording types that appear in the playback progress bar. Green indicates continuous recording. Red indicates alarm/event recording. Yellow indicates motion recording. Pale green indicates manual recording. Pale blue indicates TextIn recording.
4.	<b>Video search:</b> Call up the Search window to search for recorded video files.
5.	Hide the playback control toolbar.
6.	For all-day playback mode, quit playback and return to live view. For playback from search mode, quit playback and return to the search screen.
7.	<b>Time bar:</b> Time of actual playback. This is only displayed in all-day playback.
8.	<b>Playback progress bar:</b> This bar displays how far playback of the recording has progressed. It also indicates the type of recording.
9.	<b>Timeline:</b> Allows you to jump forwards or backwards in time. The timeline moves left (oldest video) to right (newest video). Click a location on it for where you want playback to start. In all-day playback the cursor shows the actual time. In search playback, the cursor is a ball.

## Playback pop-up menu

You can quickly access playback functions by placing the cursor on a playback image on screen and clicking the right-button of the mouse. The playback pop-up menu appears (see Figure 24 below).

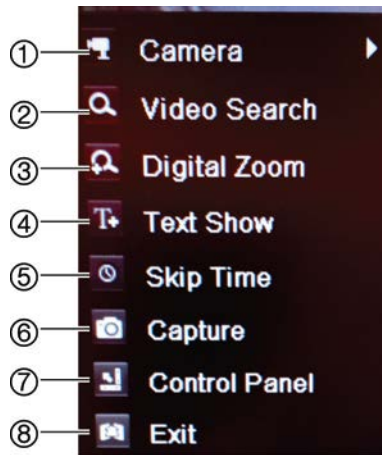**Figure 24: The all-day playback pop-up menu**




Name	Description
1. Camera	Select a camera for playback. <b>Note:</b> This option is not available if you play back a video file from the list of a search result.
2. Video Search	Call up the Search window to search for recorded video files.
3. Digital Zoom	Enter the digital zoom function for the selected camera.
4. Text Show	Display inserted text on screen.
5. Skip Time	Modify the playback skip time. See “Playback skip time” on page 56 for more information.
6. Capture	Capture a snapshot of the video playing back.
7. Control Panel	Hide the playback control toolbar.
8. Exit	Return to live view.


## Instant playback



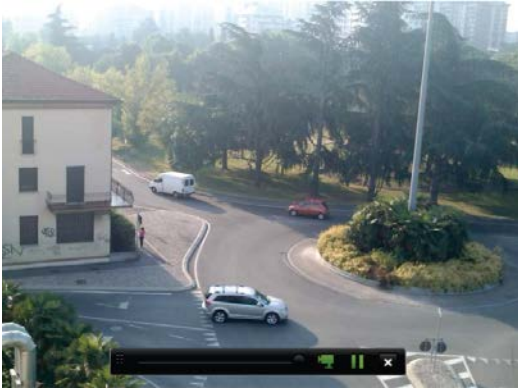
Use the quick access toolbar to quickly replay recorded video from the last programmed period (default time is five minutes). This can be useful to review an event that has just happened. Only one camera at a time can be selected. See Table 10 on page 34 for more information.

### To instantly replay recorded video:

1. In live view mode left-click the mouse on the desired camera image. The quick access toolbar appears. Click **Instant Playback** .
2. Select the desired camera from the drop-down list and click **OK**.

Playback starts immediately. The Instant Playback scroll bar appears under the selected camera.



3. Click **Pause**  on the toolbar to pause playback.  
Click **Play**  to restart playback.  
Click **Stop**  to stop playback and return to live view.

## All-day playback

Use this option to play back recorded video from the past 24 hours. Playback starts at midnight and runs for the 24-hour period. All-day playback is shown in full screen view. See Figure 23 on page 52 for a description of the playback control toolbar.

### • Using the mouse:


1. In live view mode right-click the mouse on the desired camera image. In the mouse toolbar click **All-day Playback**.

The playback screen appears. By default, the camera is in full-screen mode.

2. To select more than one camera for multiview playback or to select playback from a different day, move the mouse to the right edge of the screen. The camera list and calendar appear. Check the desired cameras and/or another day.

Playback starts immediately.

**Note:** A message appears if there are no recordings found during this period.

3. Use the playback control toolbar to manually control playback.
4. Click **Exit**  to return to live view.

– Or –

Right-click the mouse and click **Exit** from the mouse menu to return to the previous screen.

### • Using the front panel:

1. Select the camera for playback and press the **Play** button. Playback from the selected camera starts immediately.

**Note:** Multiview playback is only available using the mouse. If live view was showing multiview, only the camera in the top-left channel on screen will be played back.

2. To select a different camera for playback, press the numerical button of the desired camera.
3. Press **Live** to return to live view.

## Playback skip time

By pressing the direction buttons left or right on the front panel during playback, you can jump forwards or backwards by a defined skip time period.

### To change the playback skip time:

1. In playback mode, right-click the mouse and click **Skip Time** on the pop-up menu. The Skip Time menu appears.
2. Select a skip time between 10 and 300 seconds. The default skip time is 30 seconds.

## Searching recorded video

You can easily search and play back recorded videos by time, events, bookmarks, and picture.

The Search window has four submenus that allow you to carry out different searches by theme:


Search type	Description
Normal	Search all recorded video by cameras, recording type, type of file protection (locked or unlocked) and time period.
Event	Search only event recorded files. Files can be searched by alarm inputs, motion detection, or POS/ATM text insertion. <b>Note:</b> Only motion detection and POS/ATM text insertion that have been recorded as events will be listed in this search. Motion and text insertion that is recorded as a non-event can be searched under the Normal menu.
Bookmark	Search only recorded files with bookmarks.
Picture	Search snapshots.

## Search results

A search will usually produce a list of files, which may extend to several pages. The files are listed by date and time. The latest file is listed first. See Figure 25 on page 57 for an example of a search.

Only one file can be played back at a time.

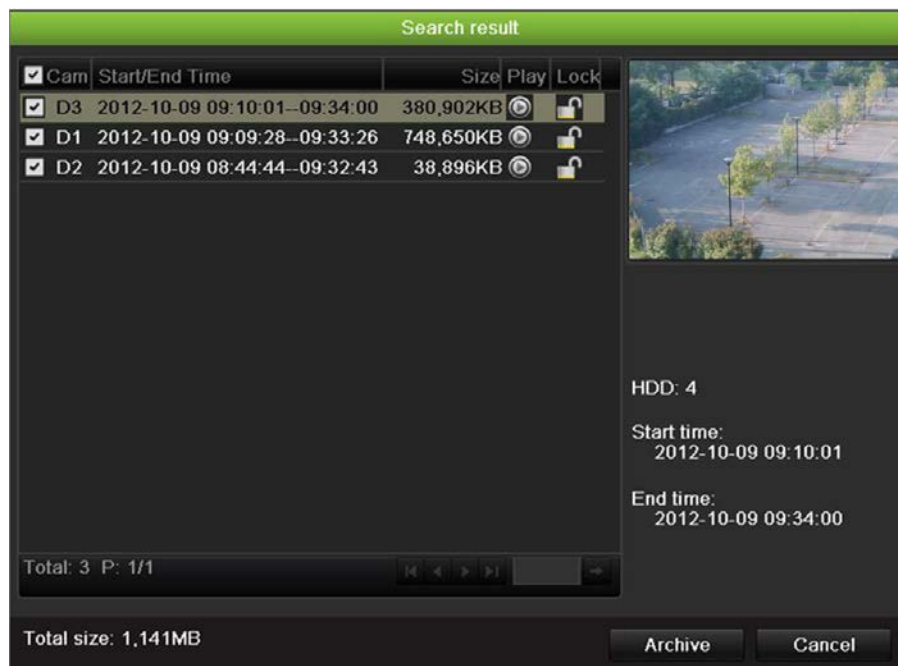Figure 25: Example of a search result list



## Playing back recordings by time and video type

You can search recorded video by time and video type, such as continuous recordings, motion, text insertion, alarm and all recordings. Video can be played back simultaneously across several cameras.

### To play back search results:

1. In live view mode right-click the mouse and in the mouse menu select **Advanced Search > Normal**.
2. Select the desired cameras, record type, file type as well as start and end time of the recording.
3. Click **Search**. The list of search results appears.
4. Play back the search results:

If there is only one camera in the search result, click its playback button. Playback starts.

If there is more than one camera listed, click the playback button of one of the cameras. In the window that appears, select the cameras you want to play back simultaneously and click **OK**. Playback starts.

5. To hide the playback control toolbar during play back, right-click the mouse and select **Control Panel** from the list. Click again for the panel to reappear.
6. Use the playback control toolbar to manually control playback.
7. To play back another camera, move the cursor to the right edge of the screen to display the list of cameras and select the desired camera.

8. To do another search:

Click **Exit**  in the playback control toolbar to return to the search results screen.

- Or -

Right-click the mouse and select **Exit** from the list to return to the search results screen.

- Or -

Right-click the mouse and select **Video Search** from the list to return to the search screen.

- Or -

Click **Video Search** in the playback control toolbar to return to the search results screen.

## Playing back recordings by event

You can search recorded video by event type: motion, alarm input and POS/ATM text insertion. Video can be played back simultaneously across several cameras.

### To play back search results:

1. In live view mode right-click the mouse and in the mouse menu select **Advanced Search > Event**.


2. Select the desired event type as well as start and end time of the recording.

3. Select the desired alarm inputs.

If you selected “Motion” or “Text insertion” as the event type, select the required IP cameras. If you selected “Text insertion”, also enter the desired keyword.

4. Click **Search**. The list of search results appears.

5. Select the desired video from the list.

6. Play back the search results: Click the playback  button of one of the cameras. Playback starts.

7. To hide the playback control toolbar during playback, right-click the mouse and select **Control Panel** button from the list. Click again for the panel to reappear.

8. Use the playback control toolbar to manually control playback.

9. To play back another event video, move the cursor to the right edge of the screen to display the list of event videos and select the desired video.

10. To do another search:

Click **Exit**  in the playback control toolbar to return to the search results screen.

- Or -

Right-click the mouse and select **Exit** from the list to return to the search results screen.



- Or -

Right-click the mouse and select **Video Search** from the list to return to the search screen.



- Or -

Click **Video Search** in the playback control toolbar to return to the search results screen.

## Creating and playing back bookmarked recordings

You can bookmark the important scenes in a recorded file for later reference.

Bookmarks flag the start of a scene. Up to 64 bookmarks can be saved in a video file. There are two types of bookmarks:


- **Default bookmark** : All default bookmarks have the same generic name, "BOOKMARK".
- **Customized bookmark** : The bookmark is given a name for easy identification. The same name can be used for several bookmarks.

Both types can be searched.

### To create a bookmark:

1. Open an all-day playback screen or the playback screen from a search result.
2. In the all-day playback recording, click the timeline bar where you want the bookmark to be. The green time line jumps to this position. Click the button for the type of bookmark you want, and enter the bookmark name if required.

In the playback recording from a search, click the scroll bar where you want the bookmark to be. The scroll bar ball jumps to this position. Click the button for the type of bookmark you want, and enter the bookmark name if required. The bookmark is saved.

3. Click the bookmark management  button to see the list of bookmarks saved. The name of a bookmark can be edited. The bookmark can also be deleted.

### To play back a bookmark:

1. In live view mode right-click the mouse and select **Advanced Search > Bookmark** in the mouse menu.
2. Select the desired cameras as well as start and end time of the recording to be searched. Also select the type of bookmark to be searched.

If searching for customized bookmarks, enter a keyword from the bookmark name.

Click **Search**. The list of bookmarks appears.





3. Select the desired bookmark from the list.

4. Select a bookmark and do one of the following:  
Click the **Edit** button to edit a bookmark's name.  
Click the **Delete** button to delete a bookmark.  
- Or -  
Click the **Play** button to play back a bookmark.
5. When finished, click **Exit**.

## Slideshow of snapshots

You can search video snapshots. See "Accessing frequently used commands" on page 34 on how to create snapshots.


### To play back search results:

1. In live view mode right-click the mouse and in the pop-up menu select **Advanced Search > Picture**.
2. Select the desired cameras as well as start and end time of the recording to be searched.
3. Click **Search**. The list of snapshots appears.
4. Select a snapshot to see it in the thumbnail window. Click its **Play**  button to see it in full-screen mode.
5. When in full-screen mode, move the cursor to the right edge of the screen to see the complete list of snapshots found in the search. Click their Play buttons to see them in full-screen mode.
6. To see a slideshow of all the snapshots found, click the  or  buttons on the snapshot toolbar to sequence forwards or backwards through the shots.
7. To do another search:  
Click **Exit**  in the snapshot toolbar to return to the search results screen.  
- Or -  
Right-click the mouse and select **Exit** from the list to return to the search results screen.  
- Or -  
Right-click the mouse and select **Picture Search** from the list to return to the search screen.  
- Or -  
Click **Picture Search** in the snapshot toolbar to return to the search results screen.

## Playing back recordings from the system log

You can also playback recordings from the system log. The system log provides a much wider range of options for playback than Advanced Search, which deals with video detection and alarms only.

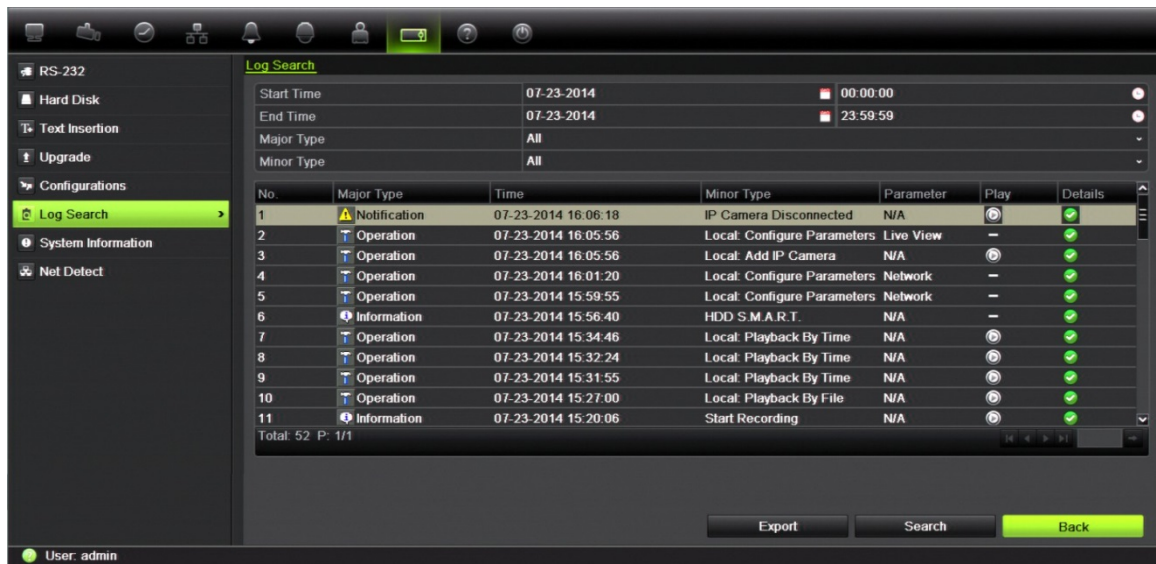Figure 26: View log screen



### To play back video from the system log:

1. Click **System Settings > Log Search** in the menu toolbar.
2. Select the search start and end times.
3. Under **Major Type** and **Minor Type**, select an option from the drop-down list. The minor type list of options available depends on the option selected under major type.
4. Click the **Search** button. A list of results appears.
5. Select a file and click:
  - **Details:** Displays information on the log or recording. For a recording, it lists such information as start time, type of information, camera number, and gives a description on the types of events recorded and when record time was stopped.
  - **Play:** Click to start playback of the selected recording.
  - **Export:** Click to archive the selected file to a USB device. The export screen appears.
  - **Back:** Click to return to live view.


## Playing back frame-by-frame

You can easily play back a selected video at different speeds. This allows you to carefully examine an event frame-by-frame as it happens.

The current frame rate is shown on the right of the playback control toolbar.

### To play back frame-by-frame:

#### • Using a mouse:

1. In playback mode click the **Speed Down**  button in the playback control toolbar until the speed changes to single frame.
2. Click the **Pause** button to advance the video frame by frame.

#### • Using the front panel:

1. In playback mode move the left direction button to left to scroll down through the speed changes until single frame.
2. Press **Enter** to advance the video frame by frame.

## Digital zoom in playback

You can easily zoom in on an image during playback to see it in greater detail.

### To digitally zoom-in during playback:

1. In playback mode right-click the mouse and click **Digital Zoom** in the pop-up menu. The playback control toolbar disappears.
2. Click the screen with the cursor.  
The image zooms in and the digital view screen appears.
3. Left-click the mouse and drag the red square to the area of interest, or press the direction buttons on the front panel to position the red square. The selected area is magnified.
4. Right-click the mouse to quit the digital zoom mode and to return to full-screen playback mode. The playback control toolbar reappears.

# Chapter 8

## Archiving recorded files

Archive recorded files on an external device such as a USB flash drive, USB HDDs, eSATA HDD or a DVD writer.

Before starting to archive files, ensure that you have the backup device connected to the recorder. It can be detected automatically by the recorder.

It is important that the external storage device is set to the Export option in order to be able to archive. See “Using an external recording device” on page 85.

**Note:** The USB port on the rear panel does not support USB CD/DVD burners or USB HDDs.

### Archiving files

There are two ways to archive files:

**Quick Archive:** Quick archive lets you archive recorded files quickly by using the Archive button on the front panel. The recorder then downloads all the recorded files on the unit to fill the available memory space on the media. This option is not available via the mouse.

**Advanced Search screen:** You can specify archiving settings such as a specific time and date period, recording type, start and end times, as well as cameras.

### Using Quick Archive

**To archive recorded video using Quick Archive:**

1. Insert the backup device into the **recorder**.

If using a USB memory drive, insert the device into the USB port on the front panel. If using a digital video disk (DVD) or eSATA drive, insert the disc into the DVD drive. If more than one media type is found in the **recorder**, the USB device takes precedence over the others.

2. Press **Archive** on the front panel or remote control to open the quick archive screen.

3. Click **Start**. The unit starts to download all the files listed.

**Note:** If there is a capacity limitation on the backup device, only the most recent files will be backed up.


A message will appear to confirm when the download is complete.

## Exporting recorded files to a backup device

You can insert a mini-USB hub to the USB port to attach a mouse for navigation or a USB drive for archiving. However, the unit may not support all types of USB hubs.

The Archive options available may depend on the type of backup device selected.

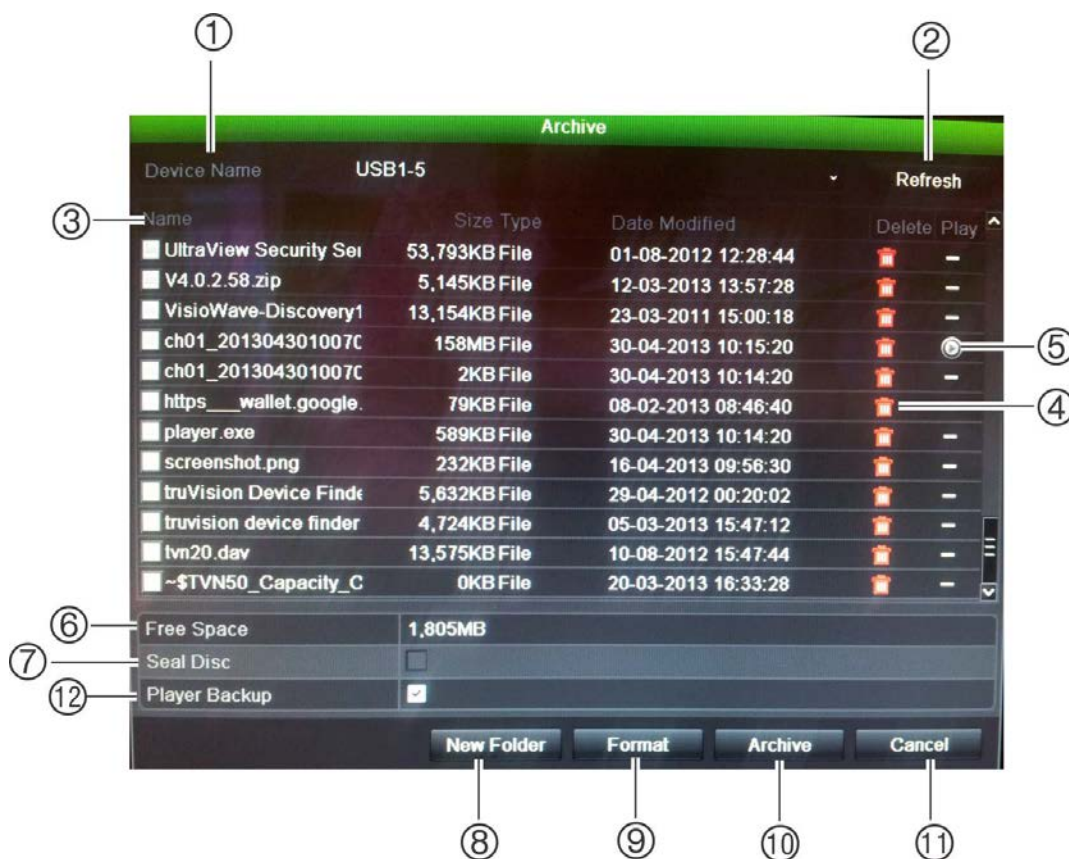Figure 27: Example of an archive



Item	Function	Description
1.	Device Name	Select one of the storage media for archiving. If the backup device is not recognized: <ul style="list-style-type: none"> <li>• Click the Refresh button</li> <li>• Reconnect device</li> <li>• Check for compatibility from vendor</li> </ul>
2.	Refresh	Refresh the search results if any parameters have been modified.
3.	Name	Files found on the backup device are listed.
4.	Delete	Click to delete a selected file from the backup device.
5.	Play	Click to play selected file.

Item	Function	Description
6.	Free Space	Free space available on the backup device is displayed.
7.	Seal Disc	Select to prevent other files being recorded onto the disc.
8.	New Folder	Create a new folder on the backup device. Files from the recorder can be archived to a specific folder.
9.	Format	Format the USB/eSATA drive.
10.	Archive	Start downloading selected files onto the backup device.
11.	Cancel	Cancel archive and return to the previous menu.
12.	Player Backup	Select to include a backup player.

### To export recorded files to a backup device:

1. Connect the backup device to the recorder.

If using a USB memory drive, insert the device into the USB port on the front panel. If using a digital video disk (DVD) or eSATA drive, insert the disc into the DVD drive. If both media are found in the **recorder**, the USB device takes precedence over the DVD.

2. In live view mode, press the **Search** button on the front panel or remote control.

- Or -

Right-click the mouse and select **Advanced Search**.

The Advanced Search screen appears.

3. Select the cameras and search parameters required.

**Record type:** All, constant, motion, text insertion, or alarm.

**File type:** All, locked, or unlocked.

4. Select the desired start and end times and dates for the recordings.

5. Click **Search**. The list of results appears.

6. Select the files to export.

**Note:** You can click the Play button to verify that the selected files are the files to export.

7. Click **Archive**. The Archive screen appears.

8. Select the storage medium to export from the drop-down list.

9. Click **Archive** to begin the backup process.

10. Click **OK** when archiving is completed. Click **Cancel** until you return to live view.

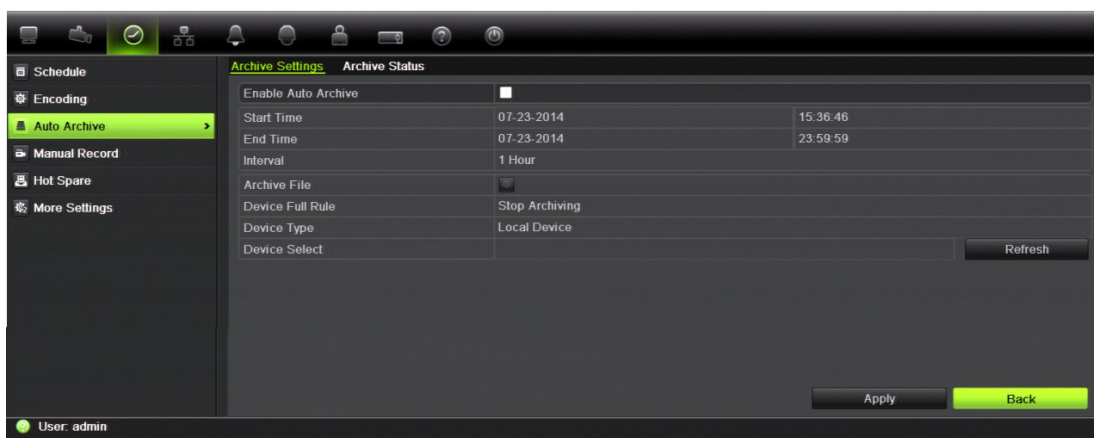
## Auto archiving

You can schedule the recorder to automatically archive recordings at set interval times to an external storage device. You can also select the cameras and recording types to auto archive as well as define how the system responds when the HDD becomes full.

It is easy to see the time of the most recent and next archive recording. Simply select the Archive Status tab and the information is displayed.

### To schedule automatic archiving:

1. Connect the backup device to the recorder.
2. In the configuration menu, click **Video Schedule > Auto Archive > Archive Settings**.



3. Check **Enable Auto Archive**.
4. Select the start and end date and time periods during which archiving can occur automatically.
5. Under Interval Time, select the desired interval time for archiving.

The interval time options available are: 1 hour, 2 hours, 4 hours, 8 hours, 24 hours, or once only. Default is 1 hour.

6. Click **Archive** file. In the screen that appears, select the cameras and search parameters required:

**Record Type:** Picture, manual, constant, motion, text insertion, or alarm.

**File Type:** All, locked, or unlocked.

**Note:** You can copy these selected parameters to other cameras. Click **Copy** and select the desired cameras.

Click **OK** and **Apply** to save, and return to the Archive Settings screen.

7. Select how the recorder responds if the backup device becomes full. There are two options: Stop Archiving or Overwrite.

If overwrite is selected, the oldest files are overwritten.

8. Under **Device Select**, select the backup device used.



9. If you change any options, click **Refresh**.
10. Click **Apply**.


 
## Creating and archiving video clips

You can save important scenes in a recorded file for later reference by creating video clips of selected portions of the file during playback. When an intruder, for example, crosses in front of several cameras you can save the video clip of the intruder's path across these cameras in a single file.

Up to 30 video clips can be made from a recording.

**Note:** This feature is only available using the mouse.

### To export video clips during playback:

1. Connect the backup device to the recorder.
2. Search for the required files to play back. See "Searching recorded video" on page 56.
3. Select the file or files to play back and click **Play**. Playback starts immediately.
4. Click the playback timeline where you want the video clip to start and click the **Start Clip**  button.
5. Click the playback timeline where you want the video clip to stop and click the **End Clip**  button.
6. Repeat for additional clips.
7. Exit playback mode. A message appears asking if you want to save the video clips.
8. Click **Yes** to archive the clips. The Export screen appears.  
Click **No** to exit and return to the previous screen. The clips are not saved.
9. In the Archive screen, select the backup device to be used from the drop-down list.
10. Click **Start**. File downloading starts.

**Note:** You can create a new folder for the video clips. Press the **New Folder** button and enter the folder name.

## Archiving snapshots

You can save all the video snapshots recorded to a backup device.

### To archive snapshots:

1. Connect the backup device to the recorder.

2. Search for the required snapshot files to play back. See “Slideshow of snapshots” on page 60. The list of snapshots appears.
3. Select the snapshots to backup.
4. Click **Archive**. Select the archiving device, if different from that listed.
5. Click **Archive**. Export starts immediately.
6. When completed, click **OK**. Click **Cancel** to return to the previous screen.

## Managing backup devices

You can manage backup devices from the Export screen (see Figure 27 on page 64.)

The Export screen allows you to:

- **Create New Folder:** Create a new folder on the backup device.
- **Delete:** Delete a file or folder from the backup device.
- **Play:** Play the selected video file from the backup device.
- **Format:** Format the backup device.
- **Erase:** Erase files from a re-writable CD/DVD.

## Playing back archived files on a PC

Use the standard file player software to play back the archived video on your PC. It is downloaded from the recorder when archiving files onto a backup device.

# Chapter 9

## Using the web browser

This chapter describes how you can use the web browser interface to configure the device, play back recorded video, search through event logs, and control a PTZ dome camera. You can also specify settings on the web browser interface to optimize video playback and recording performance when operating in a low or limited bandwidth environment.

### Windows 7 and 8 users

Internet Explorer for Windows 7 and Windows 8 operating systems have increased security measures to protect your PC from any malicious software being installed. When using the recorder web browser interface, you can install ActiveX controls to connect and view video using Internet Explorer.

To have complete functionality of the web browser interface and the recorder player with Windows 7 and Windows 8, do the following:

- Run the Browser interface and the recorder player application as an administrator in your workstation
- Add the recorder's IP address to your browser's list of trusted sites

#### **To add the recorder's IP address to Internet Explorer's list of trusted sites:**

1. Open Internet Explorer.
2. Click **Tools**, and then **Internet Options**.
3. Click the Security tab, and then select the Trusted Sites icon.
4. Click **Sites**.
5. Clear the "Require server verification (https:) for all sites in this zone" box.
6. Enter the IP address or DDNS name in the "Add this website to the zone" field.
7. Click **Add**, and then click **Close**.
8. Click **OK** in the Internet Options dialog screen.
9. Connect to the recorder for full browser functionality.

## Accessing the web browser

To access the recorder, open a web browser and enter the IP address assigned to the recorder as a web address. On the logon screen, enter the default user ID and password.

**Note:** Only one recorder can be viewed per browser.

User ID: admin

Password: 1234

The default values for TVN 21(S/P) network settings are:

- IP address - 192.168.1.82
- Subnet mask - 255.255.255.0
- Gateway address - 192.168.1.1
- Ports:

When using the browser:

RTSP port: 554

HTTP port: 80

When using TruNav:

RTSP port: 554

Server/Client software port: 8000

For more information on port forwarding, see Appendix C “Port forwarding information” on page 145.








## Web browser overview






The recorder web browser lets you view, record, and play back videos as well as manage all aspects of the recorder from any PC with Internet access. The browser’s easy-to-use controls give you quick access to all recorder functions. See Figure 28 below.

Figure 28: Live view in the web browser interface



Table 17: Description of live view in the web browser

Item	Name	Description
1.	Camera	View video and record video from the selected camera.
2.	Menu toolbar	Lets you do the following: <ul style="list-style-type: none"> <li>• View live video</li> <li>• Play back video</li> <li>• Search for event logs</li> <li>• Configure settings</li> <li>• Log out of the interface</li> </ul>
3.	Viewer	View live or playback video.
4.	Display format	Define how you want video to be displayed in the viewer: Multiview or full screen. <div style="margin-left: 20px;">  Multiview   Full screen </div>
5.	Video function toolbar	Lets you do the following in live view: <div style="margin-left: 20px;">  Switch between main stream and substream.   Start/stop all viewing from selected cameras.   Start/stop recording from selected cameras.   Digital zoom.   Turn POS/ATM text insertion on/off. </div>

Item	Name	Description
		 Take a video snapshot.
		 View previous and next camera respectively.
		 If viewing in multiview format, live view moves to the next group of cameras for the selected number of video tiles.
		 Turn audio on/off
		 Turn microphone on/off
6.	PTZ panel	Hide/display the PTZ panel.

## Using the web browser to configure the device

Click **Configuration** on the browser menu bar to display the configuration screen. There are two ways to configure the recorder: Local and Remote.

### Local configuration

Local configuration lets you define communication and network parameters such as protocol type, maximum file size, stream type and network transmission settings. You can also specify the directory locations for saving recorded and playback video, captured images, and downloaded files.

### Remote configuration

See Figure 29 below for an example of the Configuration screen. See Table 18 on page 73 for an overview of the different browser menu functions. Please refer to the specific sections on the OSD menu functions for more information on configuring these functions.

**Note:** The configuration settings defined remotely are different from those that can be defined locally.

Figure 29: Remote browser configuration screen (Display Settings shown)

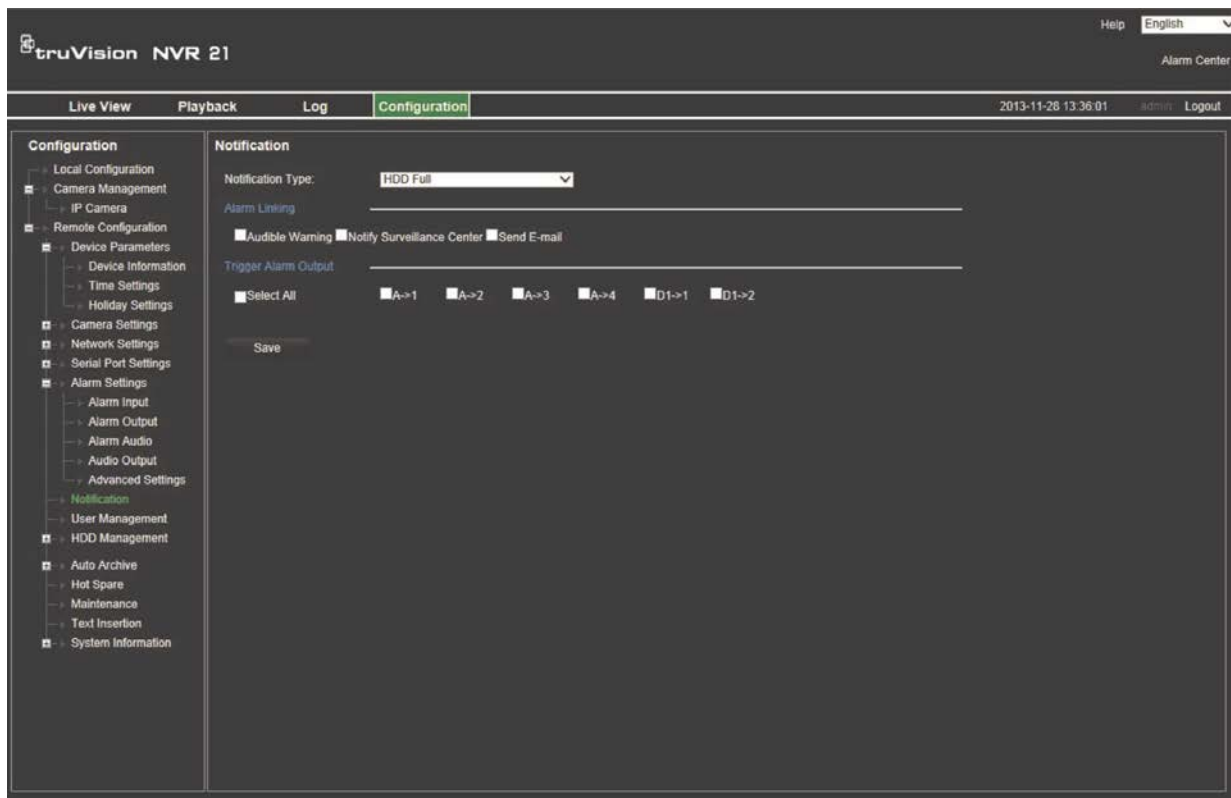


Table 18: Description of remote configuration menus

Menu	Function	Description
Device Parameters	Device Information	<p><b>Device name:</b> Define the recorder name. The default name is TVN 21.</p> <p><b>Device No.:</b> The device number to use for the recorder when programming the remote control. The default value is 255.</p> <p><b>Zone ID:</b> Each recorder in a daisy chain must have a unique zone ID so that it can be controlled by a KTD-405. The default value is 1.</p> <p><b>Overwrite:</b> Enable or disable. Enabling this setting causes recorded files to be overwritten once the HDD is full.</p> <p><b>eSATA:</b> Define how an external recording device saves records. See “Using an external recording device” on page 85 for more information.</p> <p><b>Event Priority:</b> Define the priority between text insertion event and motion alarm if both are triggered at the same time. Default is Motion alarm (Text In &lt; Motion).</p>
	Time Settings	Define time and date. See “Configuring time and date” on page 40 for more information. See “Configuring an NTP server” on page 108 for information on setting up NTP time settings.
	Holiday Settings	Define how recordings occur during holiday periods. See “Holiday schedules” on page 87 for more information.
Camera Settings	Display Settings	Define which information is displayed on-screen. See “Configuring the camera OSD settings” on page 125 for more information.

Menu	Function	Description
	Video Settings	Define general recording settings. See “Configuring recording schedules” on page 85 for more information.
	Recording Schedule	Define the recording schedules. See “Configuring recording schedule” on page 85 for more information.
	Motion Detection	Define motion detection parameters. See “Setting up motion detection” on page 98 for more information.
	Privacy Mask	Define the on-screen privacy mask areas. See “Setting up privacy masking” on page 126 for more information.
	Tamper-proof	Define the video tampering detection settings. See “Detecting video tampering” on page 104 for more information.
	Video Loss	Define the video loss detection settings. See “Detecting video loss” on page 103 for more information.
	Text Overlay	Add extra lines of text on screen. See “Text overlay” on page 82 for more information.
	Covert Camera	Define the cameras whose images cannot be displayed by those not logged in. See “Hiding a camera image from view” on page 128 for more information.
	OSD Capture Settings	Define the image quality of snapshots.
	Manual Record	Define which cameras can manually record. See “Manual recording” on page 88 for more information.
Network Settings	General	Define the general network settings. See “Configuring general network settings” on page 105 for more information.
	PPPoE	Define the PPPoE settings. See “Configuring PPPoE” on page 107 for more information.
	DDNS	Define the DDNS settings. See “Configuring DDNS” on page 107 for more information.
	Email	Define the settings to send an e-mail. See “Configuring e-mail” on page 109 for more information.
	Network Storage	Define the remote storage system for recorder recordings. See “Using a network storage system” on page 82 for more information.
	UPnP	Enable this function so that the recorder can automatically configure its own port forwarding. See “Configuring UPnP” on page 110 for more information.
	FTP	Define the FTP settings. See “Configuring an FTP server to store snapshots” on page 111 for more information.
	SNMP	Define the SNMP settings. See “Configuring SNMP” on page 109 for more information.
	More Settings	Define a remote alarm host, multicast IP as well as the server, HTTP, and RTSP ports. See page 111 for more information.
Serial Port Settings	232 Serial Port	Define the RS-232 parameters. See “Configuring the RS-232 port” on page 129 for more information.
	485 Serial Port	Define the RS-485 parameters.



Menu	Function	Description
Alarm Settings	Alarm Input	Define the alarm input parameters for when an external alarm is triggered. See "Setting up external alarms" on page 101 for more information.
	Alarm Output	Define the response when an external alarm is triggered. See "Setting up external alarms" on page 101 for more information.
	Alarm Audio	Define the parameters to import an alarm audio file. See "Alarm audio messages" on page 96.
	Audio Output	Define the parameters to import an alarm audio file. See "Alarm audio messages" on page 96.
	Advanced Settings	Define the warning buzzer time. See "Modifying the warning buzzer" on page 97 for more information.
Notification		Define the notification parameters when irregular events occur such as HDD full. See "Description of alarm notification types" on page 95 and "Setting up system notifications" on page 100.
User Management		Define, modify, and delete users. See Chapter 16 "User management" on page 135 for more information.
HDD Management	Basic Settings	Define the HDD basic settings and Initialize the HDD. See "Initializing HDDs" on page 115 for more information.
	Storage Mode	Define the storage mode of the HDD. See "Controlling disk storage mode on the HDD" on page 116 for more information.
	S.M.A.R.T.	List the S.M.A.R.T. information on the HDD.
Auto Archive	Archive Settings	Define archive scheduling as well as camera and recording type selection. See "Auto archiving" on page 66 for more information.
	Archive Status	Review archive status. See "Auto archiving" on page 66 for more information.
Hot Spare		Define the hot spare and normal units. The hot spare is the failover HDD that is on active standby in case an HDD fails. See "Failover and recovery" on page 92 for more information.
Maintenance		Remotely update the recorder firmware, restore default factory settings, restart the recorder, and import/export parameters remotely. See Chapter 15 "Recorder management" on page 129 for more information.
Text Insertion		Define access device, access mode, and start string. See "Capturing text insertions" on page 80.
System Information	Camera, Record, Alarm, and Network	Review the status of the cameras, recordings, alarms, and network. See "Viewing system information" on page 131 for more information.

## Searching and playing back recorded video







 

To search and play back recorded video, click Playback on the menu bar to display the Playback window shown in Figure 30 below.

Figure 30: Browser playback window



### Description

1. Selected camera.
2. **Calendar:** Selected day is highlighted.
3. **Search:** Click to start searching recorded files for the selected camera.
4. **Main stream/substream:** Switch between main stream and substream. Default is main stream.
5. Display format: Click to change the display format - full screen or multiview display.
6. **Playback control toolbar:**
  - Reverse:** Click to reverse playback.
  - Play/pause:** Play or pause playback.
  - Stop playback.** Playback is stopped and the screen changes to black.
  - Playback slow forward:** Click to scroll through the different speeds available: 1/8 speed, 1/4 speed, 1/2 speed, normal, X2 speed, X4 speed, X8 speed. Current speed is displayed under the camera name on top right of window.
  - Playback fast forward:** Click to scroll through the different speeds available: 1/8 speed, 1/4 speed, 1/2 speed, normal, X2 speed, X4 speed, X8 speed. Current speed is displayed under the camera name on top right of window.
  - Single frame:** Click to play back one frame at a time.
7. **Stop all playback:** Click to stop all cameras in playback.
  - Multiple playback:** Click to play back several cameras at the same time.
8. **Timeline:** The timeline moves left (oldest video) to right (newest video). Click a location on the timeline to move the cursor to where you want playback to start.

	Description
9.	<b>Audio and video control toolbar:</b>
	<b>Digital zoom:</b> Access digital zoom. See “Digital zoom in playback” on page 62 for further information.
	<b>Text in On/Off:</b> Click to enable/disable POS/ATM text display in playback.
	<b>Capture:</b> Capture a snapshot of the video.
	<b>Start/stop clipping:</b> Start/stop video clip during playback. Sections of a recording can be saved to a local computer folder.
	<b>Download:</b> Download video clips.
	<b>Backup:</b> Click to make back up of recorded files to save locally on the recorder. A list of the recorded files appears
	<b>Audio On/Off:</b> Click to enable/disable audio.
	<b>Bookmark management:</b> Manage bookmarks.
10.	<b>Type of recording:</b>
	<b>Green:</b> Indicates video recorded based on the recording schedule defined.
	<b>Red:</b> Indicates video recorded triggered by an alarm event.
	<b>Yellow:</b> Indicates video recorded triggered by motion detection.
	<b>Blue:</b> Indicates video recorded triggered by a POS/ATM text recording.
	<b>Pale green:</b> Indicates manually recorded video.
11.	<b>Jump start:</b> Enter a precise time in the box and click the Go To button to jump start the playback from this selected time.

## Searching for event logs

The recorder compiles a log of events, such as the start or end of video recording, recorder notifications, and alarms, through which you can easily search. Logs are categorized by the following types:

- **Alarm:** Includes motion detection, tamper detection, and other alarm events
- **Notifications:** Includes system notifications such as video loss, HDD failures, and other system-related events
- **Operations:** Includes users access to the web interfaces and other operational events
- **Information:** Includes general information on the recorder actions, such as the start and end of video recording, etc.

To search for logs, click Log on the menu bar, select a log type, specify a date and time range, and then click Search.

## Recording from the browser

Videos and snapshots that are recorded via the browser are saved on your computer and not on the recorder.

Select a camera and a day to search from on the calendar displayed, and then click Search. The timeline below the page indicates video recorded for the specified day. The timeline also classifies by color the type of recording.

Click and drag the marker across the timeline on where you want video playback to begin, and then click Play on the playback control toolbar. You can capture a snapshot of a video image, save the video clips, or download the recorded video.

## Dual stream recording

The recorder allows dual streaming if the camera supports it.

Dual streaming allows high quality video to be viewed in one stream (Main stream) and lower quality video to be viewed in another stream (substream), which can be easily streamed through a narrow bandwidth.

The normal main stream has the frame rate, quality, and resolution as configured in the encoding menu. However, in a substream data thinning has been carried out so that it has a lower frame rate, quality, and resolution. This allows more video to be recorded on the HDD.

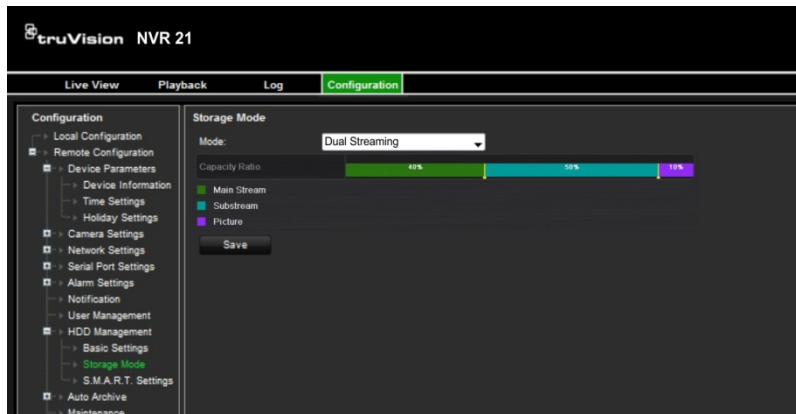
Dual streaming is available in both live and recording modes.

**To select dual streaming type in playback:**



### To record dual streaming:

1. In the browser toolbar, click **Configuration > HDD Management > Storage Mode**.



2. Under **Mode**, select **Dual Streaming**.
3. Specify which percentage of the HDD should be used to store main streams substreams, and pictures.

Using the mouse, drag the markers between the colored sections to the desired values. The minimum and maximum values for each recording type are:

Main stream: 20 to 50%


Substream: 30 to 60%

Picture: 0 to 20%

4. Click **Save** to save the settings.

## Controlling a PTZ dome camera in the web browser

The web browser interface lets you control the PTZ functions of a dome camera. Select a PTZ dome camera and use the PTZ controls on the browser interface to control the PTZ functions. See Figure 31 on page 80.

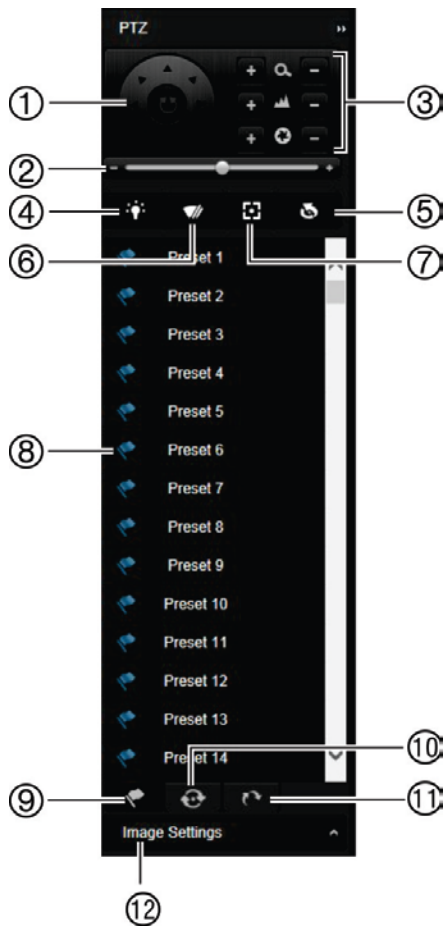**Figure 31: PTZ controls**

1. Directional pad/auto-scan buttons: Controls the movements and directions of the PTZ. Center button is used to start auto-pan by the PTZ dome camera.
2. Adjust speed of PTZ dome camera.
3. Adjust zoom, focus, and iris.
4. Turn on or off the camera light (if available on the camera).
5. Lens initialization: Initialize the lens of a camera with a motorized lens, such as PTZ or IP cameras. This function helps to maintain lens focus accuracy over prolonged periods of time.
6. Start or stop camera wiper (if available on the camera).
7. Auxiliary focus: Automatically focus the camera lens for the sharpest picture.
8. Start selected preset/tour/shadow tour (depending on function selected).
9. List presets available.
10. List preset tours available.
11. List shadow tours available.
12. Modify brightness, contrast, saturation, and hue values.

## Capturing text insertions

Text insertion lets you insert or display text from a point-of-sale (POS) system on the video display of the recorder. The text is saved and time-stamped together with the video. You can then search the text for specific video clips. The text is displayed during playback.

The recorder supports POS and ATM text insertion via the UTC ProBridge accessory connected to the RS-232 port on the recorder. This feature is currently only available using the browser.

In both live view and playback, a camera set up for text insertion will display the video with the POS text overlay.

See Figure 32 below for an example of a video image in live view with text insertion.

Figure 32: Example of a video image with text insertion

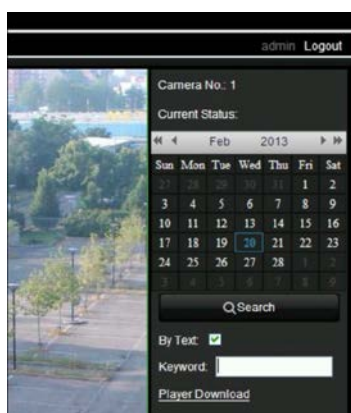


### To set up text insertion:

1. Click the **Configuration** tab in the browser toolbar and then select **232 Serial Port**.
2. Under Usage, select **ProBridge**.
3. In the submenu panel, select **Text Insertion**.
4. Check **Enable Text Insertion**.
5. Select the access device from the drop-down list.
6. Select the access mode. Only “ProBridge” is listed.
7. Under Start String, enter the desired transaction text, such as an ATM transaction number.
8. Click **Save** to save the settings.

### To search text insertion in recorded video:

1. In playback, check the **By text** check box.



2. In the keyword text box that appears, enter the text for which you want to search.

## Text overlay

You can add up to four lines of text on screen via the browser. This option can be used, for example, to display emergency contact details. By default these lines of text are positioned along the top of the screen. The strings follow each other consecutively.

**Note:** This option is not available via the recorder.

### To add on-screen overlay text:

1. Click the **Configuration** tab in the browser toolbar and then select **Camera Settings > Text Overlay**.
2. Select the desired camera.
3. Check the string box **1** for the first line of text.
4. Enter the text for string 1 in the column alongside. Up to 44 alphanumeric characters can be used.
5. Repeat steps 3 and 4 for each extra line of text, selecting the next string number.
6. Click **Save**.

## Using a network storage system

You can use a network storage system (NAS) or storage area network (SAN) to remotely store recorder recordings.

The recommended brands of storage system to use are:

- Seagate BlackArmor NAS 220
- Iomega StorCenter ix2-dl
- NETGEAR ReadyNAS Pro 2
- QNAP TS-219 II Turbo NAS

### To set up a network storage system:

1. Click the **Configuration** tab in the browser toolbar and then select **Network Settings > Network Storage**.
2. Under **Server IP**, enter the IP address of the desired remote storage system.
3. Under **File Path**, enter the file path name to define where on the remote storage system you want to store the files.

**Note:** If using the NAS storage systems Seagate BlackArmor NAS 220 or Iomega StorCenter ix2-dl, you must add the prefix “/nfs” to the NAS path.

4. Under **Type**, select type of storage system to be used: NAS or SAN. Default is NAS.
5. Up to eight remote storage systems can be set up.
6. Click **Save**.



# Chapter 10

## Recording

This chapter provides instructions on how to define the recording settings of your recorder. This chapter covers how you can configure your initial recording settings, schedule recordings, protect your recorded files, and set up your HDD for redundancy.

Enter menu mode by pressing the Menu button on the front panel or use the mouse menu to select Menu (see “Controlling live view mode” on page 31). See “Menu overview” on page 26 for a list of the menu icons.

## Configuring recording settings

Before you can set up your recorder to begin recording, you must first configure general recording settings for the IP cameras.

Ensure that the HDD has been installed and initialized before configuring the recording settings. See Chapter 13 “Storage management” on page 115 for more information.

### To configure recording settings:

1. From the menu toolbar, click **Video Schedule > Encoding > Record**.



2. Select the camera you want to configure.

## 3. Configure the following recording settings:

- **Encoding parameters:** Select one of the stream types: Mainstream (TL-Hi, Mainstream (TL-Lo), Mainstream (Event), Mainstream (Alarm), or Substream.
- **Stream type:** Select the type of stream to record, either video or video and audio.
- **Resolution:** Select the resolution of the recording.
- **Bitrate type:** Select Constant or Variable.
- **Video quality:** Select the quality at which to record. If “Constant” was selected as the bit rate type, this option is unavailable.
- **Frame rate:** Select the recording frame rate.
- **Max bit rate mode:** Select the general default or customized option.
- **Max bit rate (kbps):** If the customized maximum bit rate mode was selected, enter the value here. It is calculated from the frame rate and time required.
- **Pre-record:** This is the time the camera starts recording before the event. Select the time in seconds to start pre-recording before the event.

The maximum pre-recording times available depend on the constant bit rate. See “Maximum pre-recording times” on page 155 for more information.

- **Post-record:** This is the time the camera continues to record after the event. Select the time in seconds to stop post-recording after the event.
- **Auto-delete (day):** Select the number of days after which recorded video from the specified camera is permanently deleted from the HDD. A “day” is defined as the 24-hour period from when the auto delete mode (ADM) was set.

The maximum number of days that can be set is 60. However, the actual number of days permitted depends on the HDD capacity. If the value is set to ‘0’, the option is disabled.

**Note:** Both main stream and substream recordings are deleted in auto-delete mode.

- **Record audio:** Select **Yes** to record sound with the images.

4. Click **Apply** to save the settings.5. Click the **Capture** tab and configure the settings for captured image, such as resolution. Click **Apply** to save the settings.6. Click **Back** to return to live view.

## Configuring overwrite

You can select how the recorder responds when the HDDs become full and there is no longer sufficient space to save new data.

**To configure for overwrite when the HDDs are full:**

1. Click the **Video Schedule** icon in the menu toolbar.
2. Select **More Settings**.
3. Under **Overwrite**, select **Yes**.

## Using an external recording device

You can use an external storage device, such as an eSATA HDD, to backup video or to add its recording capacity to that of the recorder itself. If you change this option, you must reboot the recorder to implement the change.

**To define how the external recording device is used:**

1. From the menu toolbar, click **Video Schedule > More Settings**.
2. Under eSATA, select one of the two options:

**Record and Capture:** Extend the recording capacity of the recorder.

**Export:** Backup data onto an eSATA backup device.

**Note:** If the external storage device is part of the total internal capacity of the recorder, then it is no longer available for backing up video.

3. Click **Apply**.

## Configuring recording schedules

Configuring a recording schedule lets you specify when the recorder records video and under what circumstances. Each camera can be configured to have its own recording schedule.

The schedules are visually presented on a map for easy reference. See Figure 33 below for an example.

Figure 33: Description of the Schedule screen

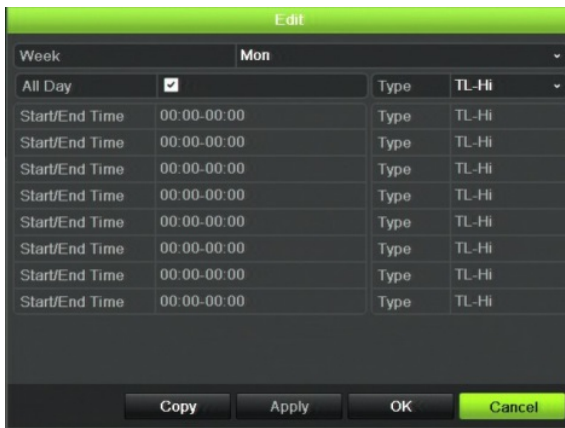


1. **Camera.** Select a camera.
2. **Schedule time.** Represents the 24-hour cycle during which a schedule is selected.
3. **Schedule day.** There are seven days to select: Sunday (Sun), Monday (Mon), Tuesday (Tue), Wednesday (Wed), Thursday (Thu), Friday (Fri), and Saturday (Sat).
4. **Recording type.** There are five recording types to select, which are color-coded:
  - TL-Hi (Dark green): High quality time lapse. Records high quality video.
  - TL-Lo (Bright green): Low quality time lapse. Records low quality video. This could be used, for example, for night recordings when few events or alarms are expected. Saving the video in low quality helps save resources on the HDD.
  - Event (Yellow): Records only events, such as motion detection and POS/ATM text insertion.
  - Alarm (Red): Records only alarms.
  - None (Grey): No recording during this period.
5. **Timeline.** There is a 24-hour time line for each day. Up to eight recording periods can be scheduled during the 24-hour period.

## Daily schedules

### To set up a daily recording schedule:

1. From the menu toolbar, click **Video Schedule > Schedule**.
2. Select a camera.
3. Check the **Enable Schedule** box.
4. Click **Edit**. The following screen is displayed (by default, **All Day** is selected):



5. Select the day of the week for which you want to set up the schedule.  
You can define a schedule for each day of the week.
6. Set the start and end time for recording.  
Define a time period by entering a start (left column) and end (right column) time. You can schedule up to eight time periods. Check **All Day** to record all day.  
**Note:** Time periods defined cannot overlap.
7. Select a recording type.  
This setting instructs the recorder to begin recording when an alarm is triggered. The recording type can be based on time and triggered by motion detection and/or an alarm. If set to TimeLapse (TL-Hi or TL-Lo), the recorder records continuously.
8. Click **Apply** to save settings
9. Repeat steps 5 to 8 for other days of the week or to copy the schedule settings to another day.  
To copy the current schedule settings to another day of the week, click **Copy**. Select the day of the week to which to copy the schedule and click **OK** to save changes and return to the Edit screen.
10. Repeat steps 2 to 9 for other cameras.
11. Click **Apply** to save the settings and then **OK** to return to the schedule screen.

## Holiday schedules

As well as being able to schedule when recordings occur during the week, you can also schedule them for specific holidays in the year such as the first of January, or the second Wednesday of every month. You can schedule up to 32 holiday periods.

A holiday period can be scheduled for a particular day or as a block of days.

### To set up a holiday recording schedule:

1. From the menu toolbar, click **Display Mode Settings > Holiday**.

2. Select a holiday period from the list and click **Edit** to modify the settings. The Edit screen appears.

Edit	
Holiday Name	Holiday1
Enable	<input type="checkbox"/>
Mode	By Month
Start Date	Jan 1
End Date	Jan 1

3. Enter the name of the holiday period and click **Enable**.
4. Select whether the holiday period will be categorized by date, week or month and then enter the start and end dates.
5. Click **Apply** to save the settings and then **OK** to return to the Edit screen.
6. Repeat steps 2 to 5 for other holiday periods.
7. Click **Back** to return to live view.

## Manual recording

The recorder lets you manually record video during live view. This can be useful if you know that the recorder is not currently recording and you see something of interest on a camera screen that should be recorded.

Once a manual recording is started, the recording continues until it is manually stopped. If an alarm occurs during a manual recording, the alarm recording has priority over the manual recording. If a scheduled recording is already in progress when a manual recording is started, it continues to record as scheduled.

You can check to see if a camera is recording manually by looking at the icon on the quick access toolbar. The icon is red when manually recording. Default is off.

Manually recorded video is identified in the color-coded timeline shown in playback (see “Searching and playing back recorded video” on page 76).

There are two ways to start and stop a manual recording:

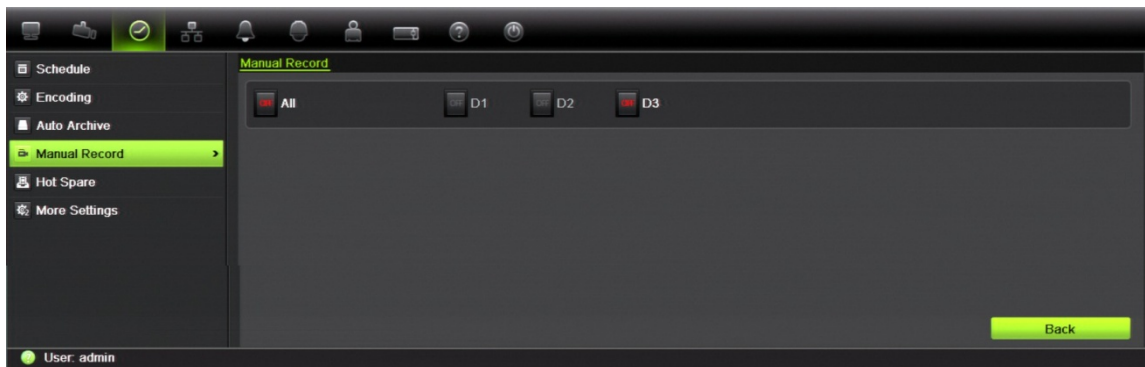
- **Use the quick access toolbar**

You can start/stop manual recording for each camera individually. Position the cursor over a camera image and left-click the mouse to display the quick access

toolbar. Click the manual record icon to start or stop manual recording. The icon is red when recording.

- **Use the configuration menu**

This option lets you select more than one camera at a time. Go to **Video Schedule > Manual Record** to access the manual recording menu and check the boxes of the cameras to start or stop manual recording.



## Motion detection schedules

For IP cameras you can configure from the recorder the schedule when the camera can be triggered by motion. However, you need to configure the area of the video display sensitive to motion from the camera itself.

For information on scheduling motion detections, see “Motion detection set up” on page 98.

## External alarm schedules

The recorder can be scheduled to record when an alarm is triggered by an external alarm device such as a PIR detector or dry contacts. For information on scheduling external alarms, see “Setting up external alarms” on page 101.

## Protecting recorded files

There are two methods to prevent recorded files from being inadvertently overwritten or deleted off the HDD. We highly recommend that important recorded events be protected from deletion. Recorded files can either be *locked* or the HDD that the files reside on can be set to *read only*.

## Locking and unlocking recorded files

Lock files to protect them against being overwritten or deleted.

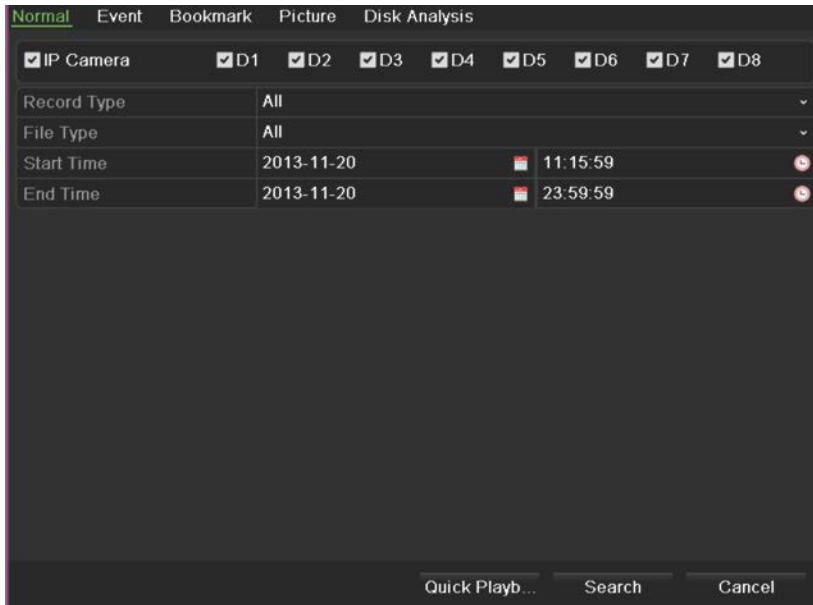
**To lock or unlock a recorded file:**

1. In live view enter the video search screen by pressing the **Search** button on the front panel or remote control, and then enter Advanced Search.

— Or —


In live view right-click the mouse to display the pop-up menu and select **Advanced Search**.


The Search screen appears.



2. Search for the desired recording by entering the search parameters, which include the camera number, record type, file type, and start time and end time.
3. Click **Search**.

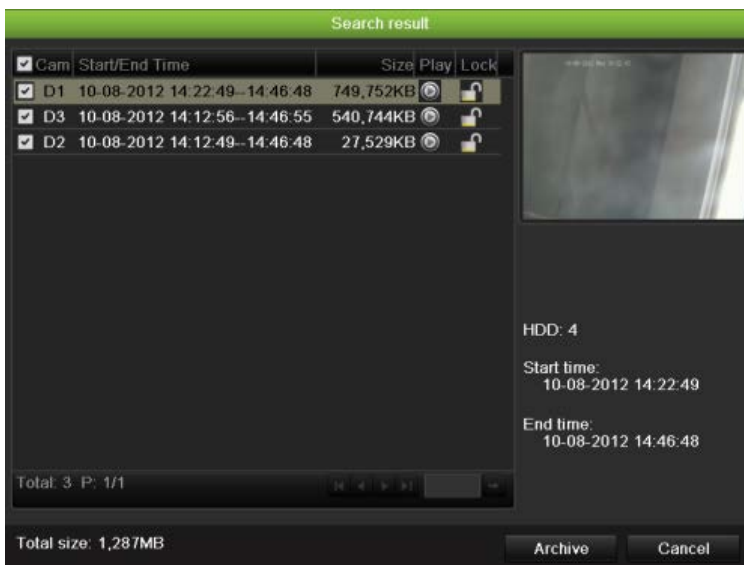A list of recordings, similar to the figure below, matching the search parameters is displayed.



4. Select the file you want to lock/unlock.
5. Click  to lock a file. Click again to unlock.



The Locked column indicates whether a file is locked or not. Closed lock icons indicate locked files while opened lock icons indicate unlocked files. The Lock button toggles between Lock and Unlock, depending on the file.

6. Click **Cancel** to return to search screen.

## Setting the HDD to read-only

When you set an HDD to *read-only*, recorded video files cannot be written to the HDD. If multiple HDDs are used, the recorder automatically records to the next HDD not set to *read-only*

### To set an HDD to read-only:

1. From the menu toolbar, click **System Settings > Hard Disk**.
2. Select the HDD you want to set to read-only.
3. Click the **Edit** button
4. Check **Read only**.
5. Click **Apply** to save the settings. The HDD is now read-only.

**Note:** In order to enable recordings on that particular HDD again, you must set the HDD status back to R/W (Read/ Write). Make sure the HDD storage mode is "Group" before setting the HDD to read-only.

6. Click **Back** to return to live view, or continue configuring the NVR settings.

## Configuring redundant recording

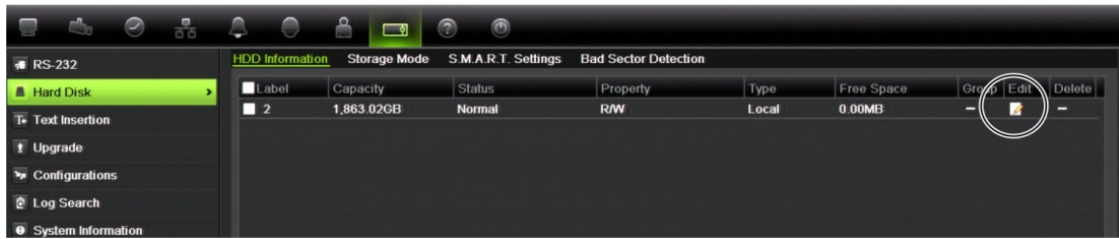
Setting up HDD redundancy lets your recorder redundantly record a copy of the videos onto multiple drives as a safeguard against losing all your files in case of disk failures. This process is also known as *mirroring*. You must have more than one HDD in your recorder to set up HDD redundancy.

Redundancy significantly reduces the storage capability of the HDDs. As a result you need to double your capacity to record video over a given time.

**Note:** You must set the storage mode of the HDD to Group before configuring the redundancy. See "Setting up HDD groups" on page 116 for more information.

### To set up HDD redundancy:

1. From the menu toolbar, click **System Settings > Hard Disk > HDD Information**.
2. Select the HDD to be used for redundancy and click **Edit**.



3. In the Local HDD Settings screen, select **Redundancy**.  
Verify at least one other HDD is set to R/W (read/write).
4. Click **Apply** to save the settings and then **OK** return to the previous screen.
5. In the menu toolbar, click the **Video Schedule > Encoding**.
6. Select the camera to be used for redundancy.
7. Under **Redundant Record/Capture**, select **Yes** from the drop-down list.
8. Click **Apply** to save the settings.
9. Repeat steps 6 to 8 for other cameras whose files you would like to be redundantly recorded.
10. Click **Back** to return to live view.

## Capturing text insertions

The recorder supports Point-of-Sale (POS) and ATM text insertion via the UTC ProBridge accessory connected to the RS-232 port on the recorder.

The feature is currently only available via the browser (see “Capturing text insertions” on page 80).

## Failover and recovery

You can set up a spare recorder to act as a slave unit (hot spare) for up to four master TVN 21(S/P) master units. This slave unit will continually monitor the master units and if one of the master units should fail, it can then take over recording until the failed unit comes back online. Once the failed unit is back operating normally again, the slave unit will send its recordings to the HDDs of the recovered unit so that no recordings are missing.

The hot spare unit can only backup one master unit at a time. If more than one unit should fail, the hot spare unit will only backup the unit that failed first.

All units must have the same number of channels.

You can mix TVN 21 and TVN 21P units but you cannot include TVN 50s.

---

**WARNING:** Camera connected to the TVN 21S as PoE ports cannot be included in a hot spare function.

---

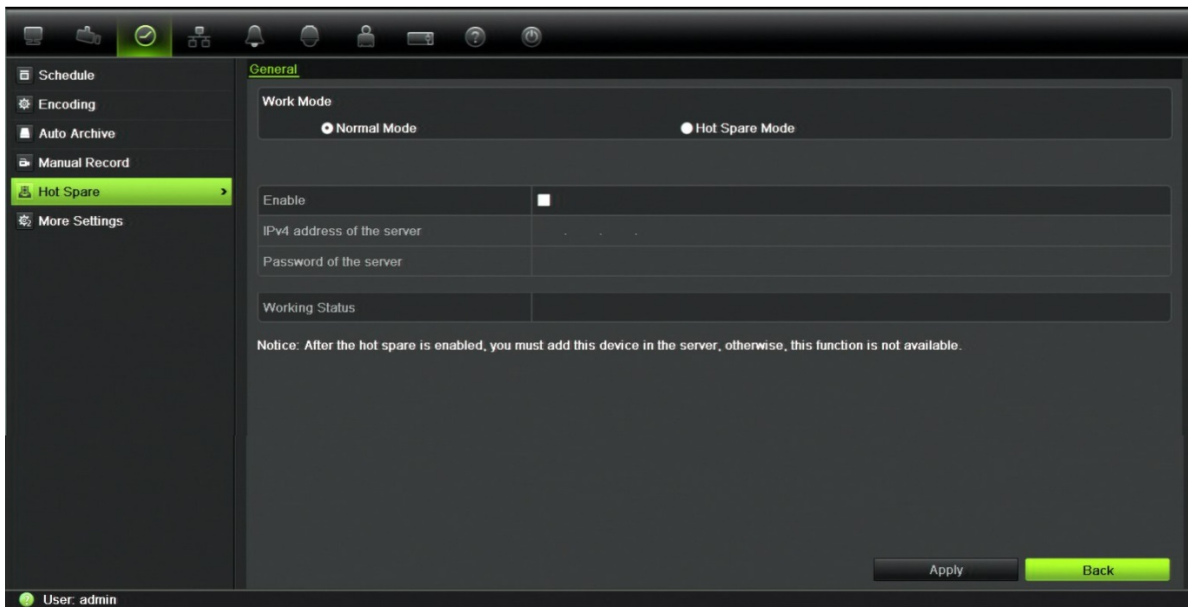
In order to have the failover functionality working properly, the following points must be taken into account:

- A stable network connection is required
- There must be at least 10 Mbps of unallocated bandwidth available with the main recorder. The main and failover recorders must have equal camera counts
- Ideally the failover recorder must have equal storage capacity to the main recorder to accommodate for long outage times of the main recorder.

### To set up a hot spare recorder:

1. From the menu toolbar, click **Video Schedule > Hot Spare**.
2. First set up the master recorders.


For each master recorder, check the **Normal Mode** box and **Enable**. Enter the IP address and password for each recorder.



3. Set up the hot spare recorder.

Check the **Hot Spare Mode** box. Click **Add** to the recorder that will be the hot spare unit.

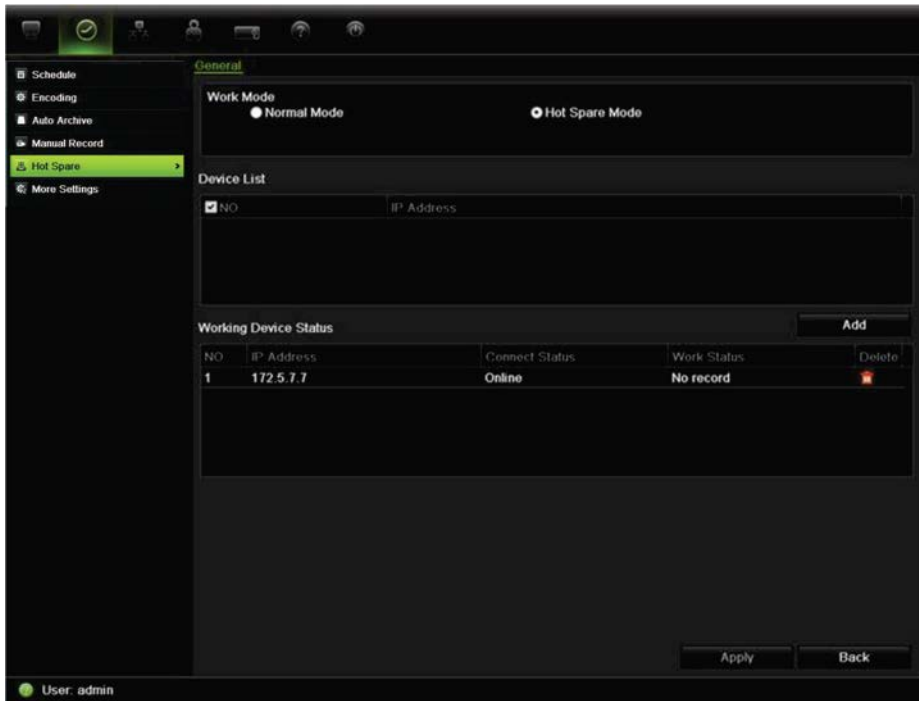**Note:** Once the hot spare is enabled, it must be added to the server in order for it to become available.



4. Click **Apply** to save the settings.
5. Click **Back** to return to live view, or continue configuring the recorder settings.

# Chapter 11

## Alarm settings

This chapter describes setting up how the system will respond when an alarm is triggered.

### Description of alarm notification types

When setting up the rules for alarm detection, you can specify how you want the recorder to notify you about an alarm or event. You can select more than one notification type. Not all notification types are available for all types of alarms.

The alarm notification types are:

- **Full screen monitoring:** When an alarm is triggered, the monitor (VGA or BNC monitor) displays the channel triggered by the alarm in full screen in live view mode. For alarms that are triggered simultaneously, images display one at a time every 10 seconds (default dwell time). You can set a different dwell time using the Dwell Time setting under the Display Settings > Layout screen. When the alarm stops, cycling of the images stops and you return to normal live view mode. This alarm option must be selected for each channel where it is required.
- **Audible warning:** Triggers an audible *beep* when a notification or alarm is detected by the system or a camera.
- **Notify surveillance center:** Sends a signal to TruVision Navigator or other software applications when an alarm or notification is detected.
- **Send e-mail:** Sends an e-mail when an alarm or notification is detected. See “Configuring e-mail” on page 109 for information on how to configure the recorder to send an e-mail.
- **Upload captured pictures to FTP:** Sends snapshots to a designated FTP site. See “Configuring an FTP server to store snapshots” on page 111 for more information.
- **Play audio file:** Plays a pre-recorded audio message when an alarm or event is triggered. See “Alarm audio messages” below for more information.
- **Trigger alarm output:** Triggers an alarm output or multiple alarm outputs when a notification is detected for an external alarm. See “Setting up system notifications” on page 100 for information on configuring an alarm output.

## Alarm audio messages

You can record customized audio messages and upload them onto the recorder to be played back when an alarm is triggered. Up to 16 audio files can be stored on the recorder, including five sample audio file provided by the recorder. The message can be up to 20 seconds long and up to 60 kb in file size. Preferred audio file types are MP3 and WAV.

The administrator uploads the audio files onto the recorder using a web browser or an application supported by the SDK. There are five sample audio files provided in English:

- An alarm has been triggered. Please leave the premises immediately.
- An alarm has been triggered. The police have been notified.
- These premises are monitored by video surveillance.
- You have entered a restricted area. Please exit this area immediately.
- Security breach. The alarm has been triggered.

You can use the Player application to convert an MP3 audio to the audio format supported by recorder. Once converted, you can then upload the file via the browser.

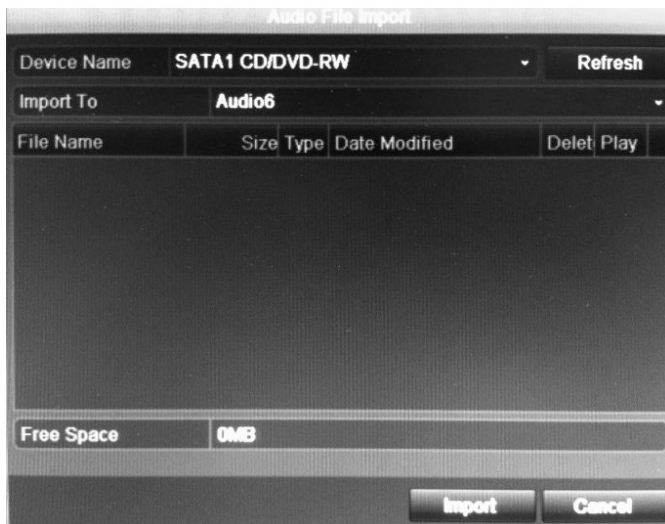
### To import an alarm audio file:

1. From the menu toolbar, click **Alarm Settings > Alarm Audio**.



**Note:** To modify the name of an audio file, click **Edit** for the desired file and enter the new file name. Click **OK**.

2. Click **Import** to import a file. The following screen appears:



3. Under **Device Name**, select the storage device.
4. Under **Import to**, select the audio file number, select the audio file in the file list, and then click **Import** to return to the Alarm Audio screen.

**Note:** As there are already five sample audio files provided, up to 11 audio files can be imported.

#### To delete an alarm audio file:

1. Click the **Alarm Settings** icon in the menu toolbar, and select **Alarm Audio**.
2. Select the file to be deleted, and click **Delete**.

**Note:** There will always be a minimum of five audio files listed.

## Modifying the warning buzzer

When an alarm is triggered by the system or a camera, the recorder can be set up to respond with a warning buzzer. You can modify the time during which the warning buzzer sounds for both system and camera alarm. Select **Alarm Settings > Advanced Settings** and select a buzzer time limit for the system and camera alarms. Default is Constant.

## Setting up motion detection

Motion detection is one of the most important features of a recorder. The recorder can be set up to trigger an alarm if it detects motion and to record it. You can then search these recorded motion activities for specific incidents.

You can mask out any areas of motion on an IP camera display that you do not want to trigger a recording such as a flag on a pole or a moving tree.

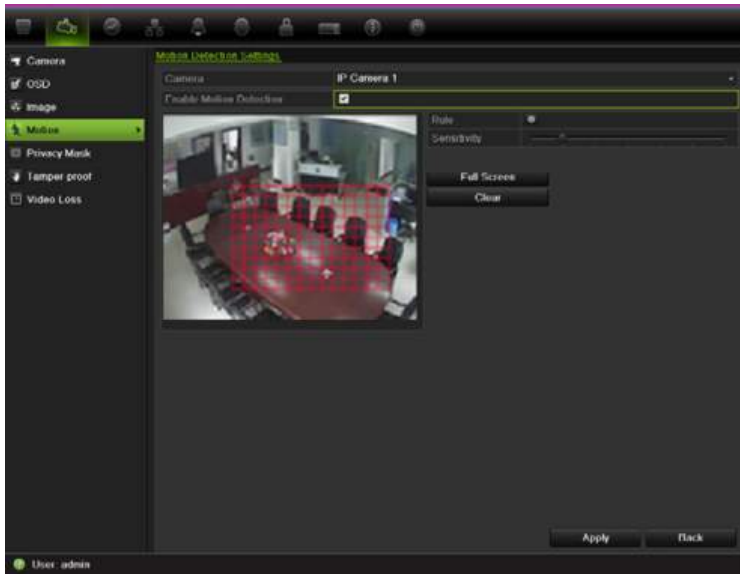
Select the level of sensitivity to motion.

You can set up the schedule from the recorder when the camera can be triggered by motion.

## Motion detection set up

### To set up motion detection:

1. From the menu toolbar, click **Camera Management > Motion**.



2. Select the IP camera to detect motion. Each camera must be set up individually.
3. Check **Enable Motion Detection**.
4. Select the areas sensitive to motion.

Click and drag the mouse cursor across the screen. The area selected appears as a red grid. Areas covered by the red grid are sensitive to motion detection.

Click **Full screen** to activate the whole screen or **Clear** to clear the screen.

**Note:** The motion grid is sensitive to motion during configuration.

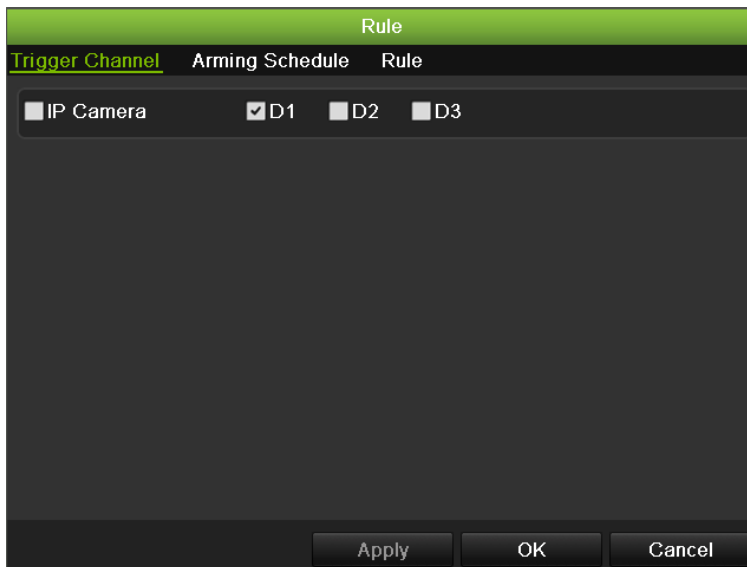
5. Set the sensitivity level.

Drag the Sensitivity scroll bar to the desired sensitivity level. The highest value is on the right of the bar.

6. Select the cameras that will record the motion detected.

Click **Rule**. The Rule screen appears. Click the **Trigger Channel** tab and select the cameras that will record when a motion alarm is triggered. Click **Apply** to save the settings.






7. Select the recording schedules for motion detection.

Click the **Arming Schedule** tab and select the day of the week and the time periods during the day when motion can be detected. You can schedule up to eight time periods in a day. Default is 24 hours.

Click **Apply** to save the settings. Click **Copy** to copy the settings to other days of the week.

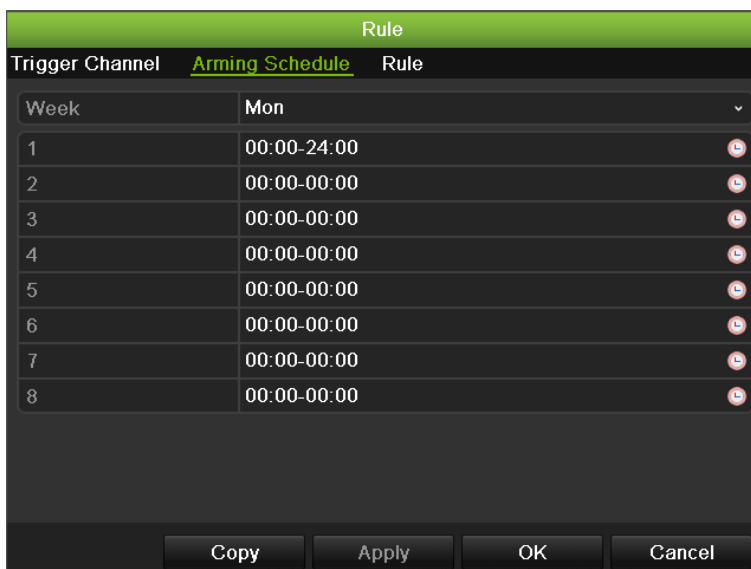**Note:** Time periods defined cannot overlap.



8. Select the response method to motion detection.

Click the **Rule** tab to define the method by which you want the recorder to notify you of the alarm. Click **Apply** to save settings.

9. Click **OK** to return to the motion detection settings screen.
10. Click **Back** to return to live view.

## Video analytics

VCA (video content analysis) is the computerized analysis of video to detect events of interest. This function is only available on the TVN 21S. When the function is enabled, the recorder can handle VCA alarms generated by Interlogix cameras that support the VCA feature.

To enable the function, go to **Camera Management > VCA**. You can then set the trigger channel, schedule, and rules for the analysis. For further information on these options, see “Motion detection schedules” on page 89.

## Setting up system notifications

Setting up system notifications instructs the recorder to alert you when irregular events occur and how to alert you to the event.

You can quickly check the system status by looking at the status LEDs on the front panel. When there is an irregular event with the system, an icon appears on screen to also alert you. See “Status information” on page 29 for further information.

The system notifications include:

- **HDD Full:** One installed HDD is full (overwrite option is disabled).
- **HDD Error:** Errors occurred while files were being written to the HDD, no HDD installed or HDD had failed to initialize.
- **Network Disconnected:** Disconnected network cable.
- **IP Conflicted:** Conflict in IP address setting.
- **Illegal Login:** Wrong user ID or password used.
- **Abnormal Record:** Recording failed due to encoder or HDD problems.
- **Abnormal Array:** Errors occurred with the array.
- **Hot Spare Exception:** Errors occurred with hot spare HDD.

See “Description of alarm notification types” on page 95 for information on the different alarm notification types available.

### To set up system notifications:

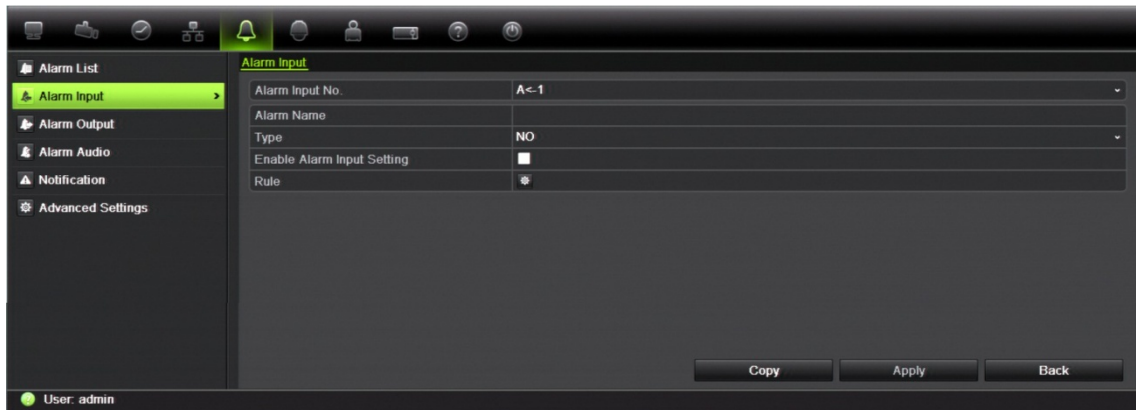
1. Click the **Alarm Settings** icon in the menu toolbar and select **Notification**.
2. Select a notification type. See “Description of alarm notification types” on page 95 for more information.
3. Check one or more response options: Audible warning, notify surveillance center, send e-mail, trigger alarm output.
4. Click **Apply** to save the settings.

## Setting up external alarms

The recorder can be configured to record when an alarm is triggered by an external alarm device (for example, PIR detector, dry contacts, etc.). Using PTZ linking, it can trigger a PTZ camera to call a preset or shadow tour if motion is detected.

### To set up external alarms:

1. From the menu toolbar, click **Alarm Settings > Alarm Input**.



2. Select the alarm input number of a TVN or an IP camera and enter the name of the input, if required.
3. Select the alarm input type, NO or NC.
4. Check the **Enable Alarm Input Setting** box to enable the function and click **Rule** to set up the rules for the cameras to be triggered, their alarm schedules, method of alarm notification and PTZ function. The Rule pop-up window appears.
5. Select the cameras to be triggered when an external alarm is detected.

In the Rule window, click **Trigger channel** and select the cameras to be triggered for recording when an alarm is detected. Click **Apply** to save the settings.

6. Select the arming schedules for the external alarm.

Click the **Arming Schedule** tab and select the day of the week and the time periods during the day when an alarm input can be detected. You can schedule up to eight time periods in a day. Default is 24 hours.

Click **Apply** to save the settings. Click **Copy** to copy the settings to other days of the week and holiday period.

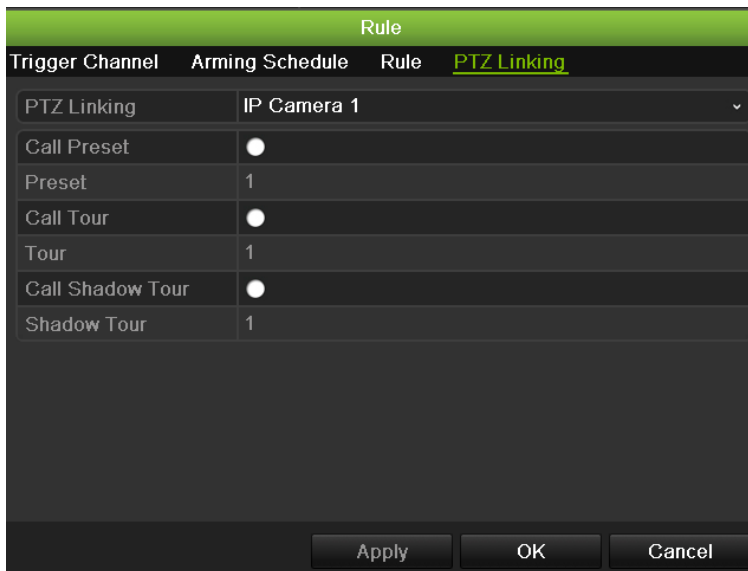
**Note:** The time periods defined cannot overlap.

7. Select the response method to an external alarm.

Click the **Rule** tab to define the method by which you want the recorder to notify you of the alarm. Click **Apply** to save settings.

8. Select the PTZ camera function required in response to an external alarm.

Click the **PTZ Linking** tab. Select the PTZ camera as well as the preset, preset tour, or shadow tour that is triggered when the alarm is detected.



Click **Apply** to save the settings.

9. Click **OK** to return to the alarm input screen.
10. Click **Copy** to copy the settings to other alarm inputs, if required.
11. Click **Back** to return to live view.

#### To set up an alarm output:

**Note:** Not all IP cameras have an alarm output.

1. From the menu toolbar, click **Alarm Settings > Alarm Output**.
2. Select the alarm output.
3. Select a timeout option.

The timeout setting lets you define how long a signal remains active after the alarm has ended.

4. Select the arming schedules for the alarm output.

Click **Rule** and select the day of the week and the time periods during the day when alarm outputs can be detected. You can schedule up to eight time periods in a day. Default is 24 hours.

Click **Apply** to save the settings. Click **Copy** to copy the settings to other days of the week and holiday period.

**Note:** The time periods defined cannot overlap.

5. Click **OK** to return to the alarm output screen.
6. Click **Back** to return to live view.

## Triggering or clearing alarm outputs manually

When an alarm is activated, the recorder can be set up so that the alarm must be manually acknowledged in order to be silenced. See “Setting up external alarms” on page 101 for information on setting up an alarm to be manually cleared.

All user levels (administrator, manager and operator) can manually acknowledge an alarm.

### To trigger or clear alarm outputs manually:

1. From the menu toolbar, click **Alarm Settings > Alarm Output**.
2. Click the **Manual Alarm** tab.
3. Select the desired alarm output and click one of the following buttons:
  - **Clear:** Stop the selected alarm output.
  - **Clear All:** Stop all alarm outputs at once.
  - **Trigger:** Trigger the selected alarm output manually.
  - **Trigger All:** Trigger all alarm outputs at once. This action could be done, for example, when you need to test them.
4. Click **Back** to return to live view. The alarm is silenced.

## Detecting video loss

Video may be lost if the video cable or camera develop a fault or are damaged. You can set up the recorder to detect video loss and trigger a system notification.

**Note:** For the TVN 21S recorder, cameras connected to the PoE ports must be added manually to the system in order that video loss can be reported.

### To setup video loss detection:

1. From the menu toolbar, click **Camera Management > Video Loss**.
2. Select a camera to configure for video loss detection.
3. Check the **Enable Video Loss Alarm** box to enable the feature.
4. Click **Rule** next to the Video Loss Detection box to enter the Rule screen.
5. Click the **Rule** tab and select how you want the recorder to notify you of video loss. Click **Apply** to save the settings.
6. Click the **Arming Schedule** tab and select the schedule of when you want video loss detection to be enabled. Schedule can be set for all week or any day of the week with up to 8 time periods per day.
7. Click the **Apply** button to save settings and then click **OK** to return to the previous screen.
8. Click **Copy** to copy the settings to other days of the week and holiday period.

**Note:** The time periods defined cannot overlap.

9. Click **Back** to return to live view.

## Detecting video tampering

Video tampering, such as moving a camera to a different position, can also be detected and set to trigger an action on the recorder.

Only IP cameras can be selected. However, not all IP cameras may support this feature.

**Note:** It is strongly recommended not to configure for video tampering when using PTZ dome cameras.

### To set up video tampering detection:

1. From the menu toolbar, click **Camera Management > Tamper-proof**.
2. Select a camera to configure for tamper-proof.
3. Check the **Enable Tamper-proof** box to enable the feature.
4. Define a tampering area.

The tamper detection area setup interface lets you define an area on screen where you want camera tampering to be detected. Click and drag the mouse across an area to mark that area for video tampering. You can only set one tampering area with the full screen being the maximum area. Click **Clear** to clear the screen.

5. Select the tamper detection sensitivity level by clicking the sensitivity scroll bar. Higher sensitivity is to the right of the bar.
6. Select the arming schedules for the tamper.

Click **Rule** and then select the **Arming Schedule** tab to select the day of the week and the time periods during the day when tamper can be detected. You can schedule up to eight time periods in a day. Default is 24 hours.

Click **Apply** to save the settings. Click **Copy** to copy the settings to other days of the week and holiday period.

**Note:** The time periods defined cannot overlap.

7. Select the response method to an external alarm.

Click **Rule** and then select the **Rule** tab to select the method by which you want the recorder to notify you of the alarm. Click **Apply** to save settings and then **OK** to return to the previous screen.

8. Click **Back** to return to live view.

# Chapter 12

## Network settings

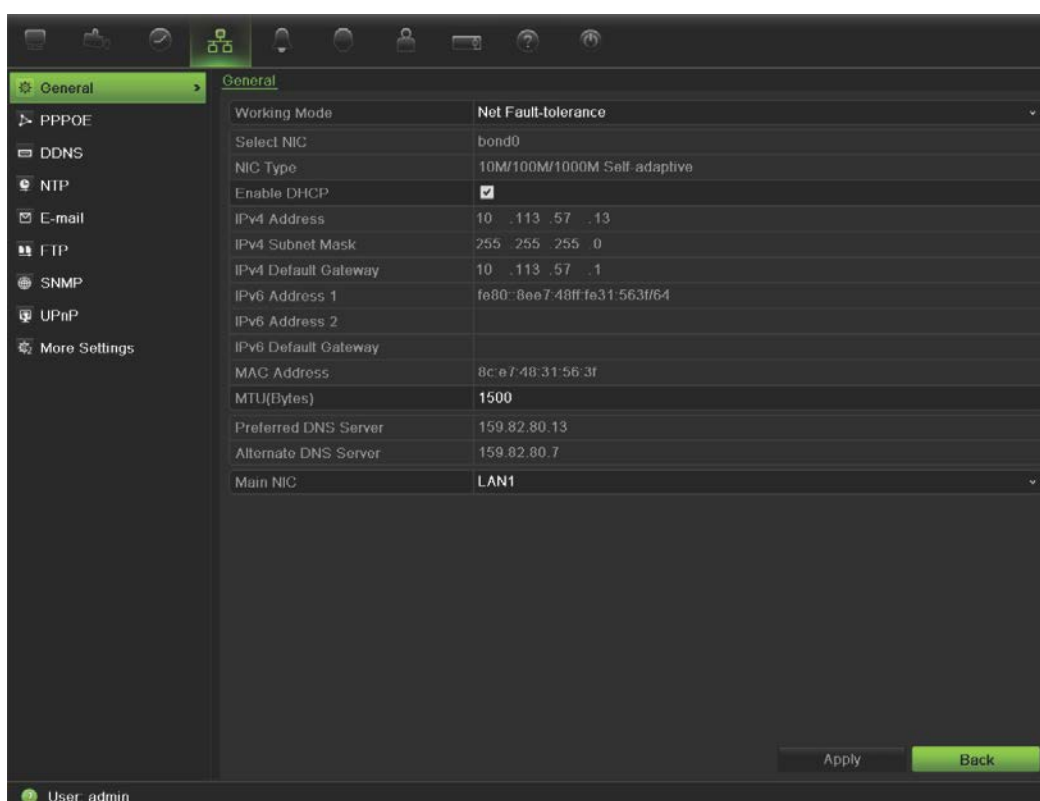
You must configure your recorder's network settings before using it over the network. The recorder must have access to the internet when configuring the network settings.

**Note:** As every network configuration may differ, please contact your Network Administrator or ISP to see if your recorder requires specific IP addresses or port numbers.

### Configuring general network settings

To configure general network settings:

1. From the menu toolbar, click **Network Settings > General**.



2. Enter the required settings:

Option	Description
Working Mode	<p>The recorder has two 10M/100M/1000M NIC cards that support net fault tolerance, load balance, and multi-address modes. Select one of the options:</p> <p><b>Net Fault tolerance:</b> When one LAN port fails, the other one takes over. This is the default option.</p> <p><b>Load Balance:</b> The bandwidth is divided over the two LAN ports with one IP address.</p> <p><b>Multi-address:</b> Each LAN port is separate with its own IP address. This allows one LAN port for the IP cameras and the other for client PCs such as TruNav.</p>
Select NIC	Select which LAN port is being defined.
NIC Type	<p>Network interface card (NIC) is a device used to connect the recorder to a network. Select the NIC type used from the drop-down list.</p> <p>Default value is 10M/100M/1000M self-adaptive.</p>
Enable DHCP	<p>Check this box if you have a DHCP server running and want your recorder to automatically obtain an IP address and other network settings from that server.</p> <p>Default value is Disabled.</p>
IPv4 Address	<p>Enter the IP address for the recorder.</p> <p>Default value is 192.168.1.82.</p>
IPv4 Subnet Mask	<p>Enter the subnet mask for your network so the recorder will be recognized within the network.</p> <p>Default value is 255.255.255.0</p>
IPv4 Default Gateway	<p>Enter the IP address of your network gateway so the recorder will be recognized within the network. This is typically the IP address of your router.</p> <p>Default value is 192.168.1.1</p>
IPv6 Address 1	<p>Enter the IPv6 address for the recorder.</p> <p>Default value is fe80::240:30ff:fe48:2975/64.</p>
IPv6 Address 2	Enter the IPv6 address for the recorder.
IPv6 Default Gateway	<p>Enter the IPv6 address of your network gateway so the recorder will be recognized within the network. This is typically the IP address of your router.</p>
MAC Address	Display the MAC address.
MTU (bytes)	Enter a value between 500 and 9676. Default is 1500.
Preferred DNS Server	Enter the preferred domain name server to use with the recorder.
Alternate DNS Server	Enter the alternate domain name server to use with the recorder.
Main NIC (or DefaultRoute)	<p>Select the main LAN port when net fault tolerance or load balance mode is selected. LAN I is default.</p> <p>Select which LAN is the main route when multi-address mode is selected.</p> <p><b>Note:</b> Not available on the TVN 21S.</p>
Internal NIC IPv4 Address	Enter the IP address of the PoE switch in the recorder. This setting is only available for the TVN 21S.



3. Click **Apply** to save the settings.

## Configuring PPPoE

You can connect the recorder directly to a DSL modem. To do this, you need to select the PPPoE option in the network settings. Contact your ISP to get the user name and password.

### To configure general network settings:

1. From the menu toolbar, click **Network Settings > PPPoE**.
2. Click **PPPoE** and check the **Enable PPPoE** box.
3. Enter your user name and password and confirm the password.
4. Click **Apply** and manually reboot the recorder to save the settings.


## Configuring DDNS

If your recorder is set up to use PPPoE as its default network connection, you can set up Dynamic DNS (DDNS) to be used in conjunction. You need to register with your ISP before configuring your system for use with DDNS.

There are two ways to set up a DDNS:

- **DynDNS:** Manually create your own host name. You will first need to create a user account using the hosting web site, DynDDNS.org.
- **ezDDNS:** Activate the DDNS auto-detection function to set up a dynamic IP address. The server is set up to assign an available host name to your recorder.

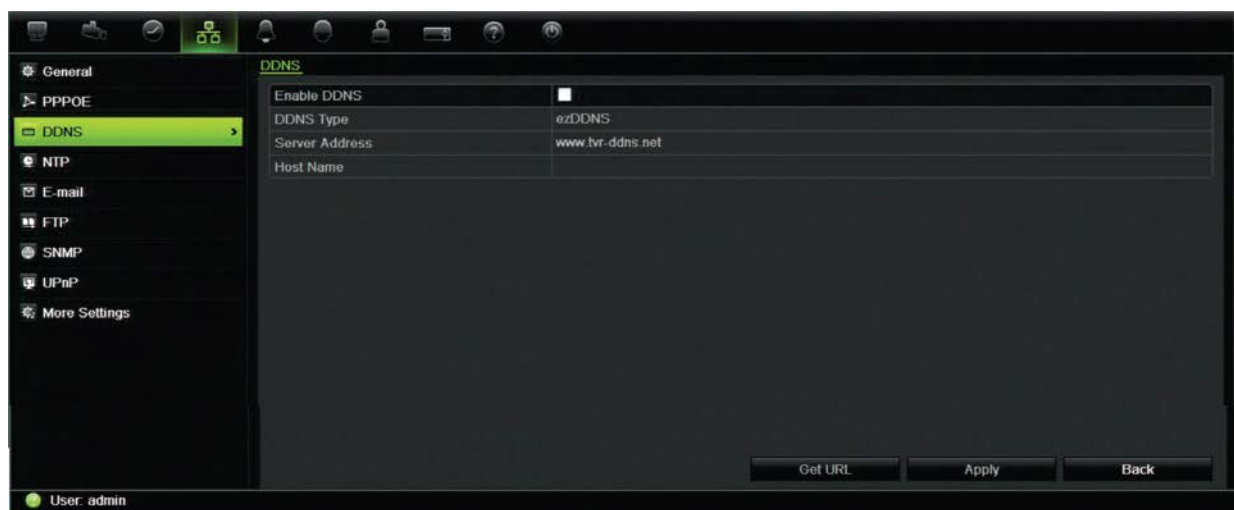Figure 34: ezDDNS setup window



### To set up DDNS:

1. From the menu toolbar, click **Network Settings > DDNS**.
2. Check the **Enable DDNS** box to enable feature.
3. From **DDNS type**, select one of the DDNS types listed:
  - **ezDDNS:** Click the **Get URL** button. The URL address to access the unit is then displayed. If no host name is specified, the DDNS will allocate one automatically.  
  
The maximum length for the host name field is 64 characters. This limit does not include tvn-ddns.net. An example of a host name could be max64chars.tvr-ddns.net.
  - **DynDNS:** Enter the server address for DynDNS (i.e. members.dyndns.org). In the recorder domain name field, enter the domain obtained from the DynDNS web site. Then enter the user name and password registered in the DynDNS network.
4. Click **Apply** to save the settings.

## Configuring an NTP server

A Network Time Protocol (NTP) server can also be configured on your recorder to keep the date and time current and accurate.

**Note:** If the device is connected to a public network, you should use an NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44) or europe.ntp.pool.org. If the device is setup in a more customized network, NTP software can be used to establish an NTP server used for time synchronization.

### To set up an NTP server:

1. From the menu toolbar, click **Network Settings > NTP**.
2. Check the **Enable NTP** box to enable feature. It is disabled by default.
3. Enter the NTP settings:
  - **Interval:** Time in minutes to synchronize with the NTP server. The value can be between 1 and 10080 minutes. Default is 60 minutes.
  - **NTP server:** IP address of the NTP server.
  - **NTP port:** Port of the NTP server.
4. Click **Apply** to save the settings.

## Configuring e-mail

Your recorder can send e-mail notifications of alarms or notifications through the network.

**Note:** Ensure that the DNS address has been set up correctly beforehand.

### To configure e-mail settings:

1. From the menu toolbar, click **Network Settings > Email**.
2. Enter the required settings.

Option	Description
Enable Server Authentication	Check the box if your mail server requires authentication and enter the login user name and password.
SMTP Server	Enter the SMTP server's IP address.
SMTP Port	Enter the SMTP port. The default TCP/IP port for SMTP is 25.
Enable SSL	Check the box to enable SSL if it is required by the SMTP server. This feature is optional.
Sender	Enter the name of the sender of the e-mail.
Sender's Address	Enter the sender's e-mail address.
Select Receivers	Select an e-mail recipient. Up to three receivers can be selected.
Receiver	Enter the name of the receiver of the e-mail.
Receiver's Address	Enter the e-mail address of the receiver.
Enable Attached Picture	Check the Enable Attached Picture box if you want to send an e-mail with attached alarm images.
Interval	Select an interval range in the Interval box. The interval range represents the time range between the alarm images being sent. For example, if you set the interval range at two seconds, the second alarm image will be sent two seconds after the first alarm image.

3. Click **Test** to the test e-mail settings.

**Note:** We recommend that you test the e-mail settings after entering values in the e-mail window.

4. Click **Apply** to save the settings.

## Configuring SNMP

SNMP is a protocol for managing devices on networks. When you enable SNMP in the menu, network management systems can retrieve recorder status information from the recorder via SNMP.

When you set the trap address and trap port in the recorder menu to the network management system's IP address and port number, and set up the network management system as trap receiver, trap notifications (such as startup) are sent from

the recorder to the network management system.

Before configuring this function, you must first install the SNMP software.

#### To configure SNMP protocol settings:

1. From the menu toolbar, click **Network Settings > SNMP**.
2. Enter the required settings.
3. Click **Apply** to save the settings.

## Configuring UPnP

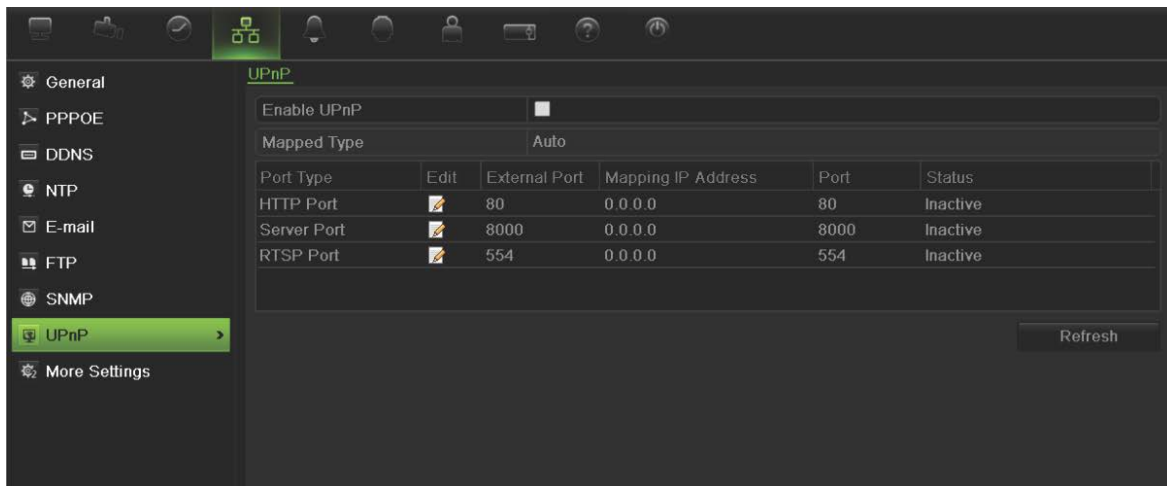
The recorder supports UPnP (Universal Plug and Play). This feature lets the recorder automatically configure its own port forwarding, if this feature is also enabled in the router.

You can select one of two methods to set up UPnP:

**Automatic mapped type:** The recorder automatically uses the free ports available that were set up in the Network Settings menu.

 
**Manual mapped type:** You enter the particular external port settings and IP addresses required to connect to the desired router (see Figure 35 below).

Figure 35: UPnP manual configuration screen



#### To enable UPnP:

1. Connect the recorder to the router.
  - Note:** The router must support UPnP and this option must be enabled.
2. From the menu toolbar, click **Network Settings > UPnP**.
3. Enable the UPnP option.
4. From **Mapped Type**, select Auto or Manual.

If **Manual** is selected, enter the external ports and IP addresses required. Click the Edit icon  to change the values.

3. Click **Apply** to save the settings.

## Configuring an FTP server to store snapshots

You can upload your snapshots to an FTP server for storage.

**Note:** It is not possible to stream video to an FTP site.

**To configure the FTP server settings:**

1. From the menu toolbar, click **Network Settings > FTP**.
2. Check the **Enable FTP** box.
3. Enter the FTP server information.
4. Click **Apply** to save the settings.

## Configuring a remote alarm host

If a remote alarm host is set, the recorder sends a signal to the host when an alarm is triggered. The remote alarm host must have the TruVision Navigator server software installed.

**To set up a remote alarm host:**

1. From the menu toolbar, click **Network Settings > More Settings**.
2. Enter Alarm Host IP and Alarm Host Port.

Alarm host IP represents the IP of the remote PC where the Network Video Surveillance software installed. The alarm host port value must be the same as software's alarm monitor port. Up to three alarm hosts can be set. For each alarm host, the default port is 5001, 5002, and 5003.

## Configuring multicast

Setting up multicasting resolves limitation issues when streaming videos through a network access device. A multicast address spans the Class-D IP range of 224.0.0.0 to 239.255.255.255. We recommend that the IP address range of 239.252.0.0 to 239.255.255.255 be used.

**To set up multicasting:**

1. From the menu toolbar, click **Network Settings > More Settings**.
2. Enter a Multicast IP address.

**Note:** When adding a device to the Network Video Surveillance software, the multicast address must be the same as the recorder's multicast IP.

3. Click **Apply** to save the settings.

## Configuring the server and HTTP ports

You can change the server and HTTP ports from the default settings in the Network Settings screen. The default server port is 8000 while that of the default HTTP port is 80.

**Note:** The server port has a port range of 1024 to 65535 and is used for remote client software access. The HTTP port is used for remote internet browser access.

### To change the default ports:

1. From the menu toolbar, click **Network Settings > More Settings**.
2. Enter the new Server Port and HTTP Port values.
3. Click **Apply** to save the settings.

## Configuring the RTSP service port

The RTSP (Real Time Streaming Protocol) is a network control protocol designed for use in entertainment and communications systems to control streaming media servers.

### To configure RTSP service port:

1. From the menu toolbar, click **Network Settings > More Settings**.
2. Enter the RSTP port value. The default value is 554.
3. Click **Apply** to save the settings.

## Telnet set up

For Technical Support only.

## Checking network status

You can easily check network traffic in order to obtain information about the recorder such as its linking status, MTU, sending/receiving rate, MAC address, and NIC type.

You can also check the network connection status by testing its delay and packet loss.

### To check network traffic:

1. Click the **System Settings** icon in the menu toolbar and then click **Net detect** to display the Traffic screen. The information displayed is refreshed once a second.



### To check network delay and packet loss:

1. From the menu toolbar, click **System Settings > Net Detect**.
2. Select the **Network Detection** tab.
3. Under the section “Network Delay, Packet Loss Test”, enter the destination address and click **Test**.

The test result appears in a pop-up screen.

4. If you need to check the current network parameters, click the **Network** button to get an overview.

### To check network statistics:

1. From the menu toolbar, click **System Settings > Net Detect**.
2. Select the **Network Stat.** tab.
3. The latest information is displayed on the bandwidth used by remote live and playback as well by Net Receive Idle and Net Send Idle. Click **Refresh** to update the information.
4. You can change the **Send Bandwidth** limit. Click the Edit button and enter the new bandwidth value. Click **OK** to confirm and to return to the Net Detect window. Click **Refresh** to update the information displayed.

## Exporting network packet data

When the recorder is connected to a network, you can export the captured data packet to a USB-flash disk, SATA/eSATA, CD-RW, and other local backup devices.

### To export network packet data:

1. From the menu toolbar, click **System Settings > Net Detect**.
2. Select the **Network Detection** tab.
3. Under the section “Network packet export”, click **Refresh** to get a list of the local backup devices available. Select one from the list.
4. Click **Export**. Up to 1M of data can be exported at a time.
5. Click **Back** to return to live view, or continue configuring the NVR settings.

## Port forwarding

When using an internet connection make sure that ports are open or forwarded as follows:

- **When using TruNav:** Port 8000 and 554
- **When using a web browser:** Port 80 and 554

See “Accessing the web browser” on page 70 for more information.



# Chapter 13

## Storage management

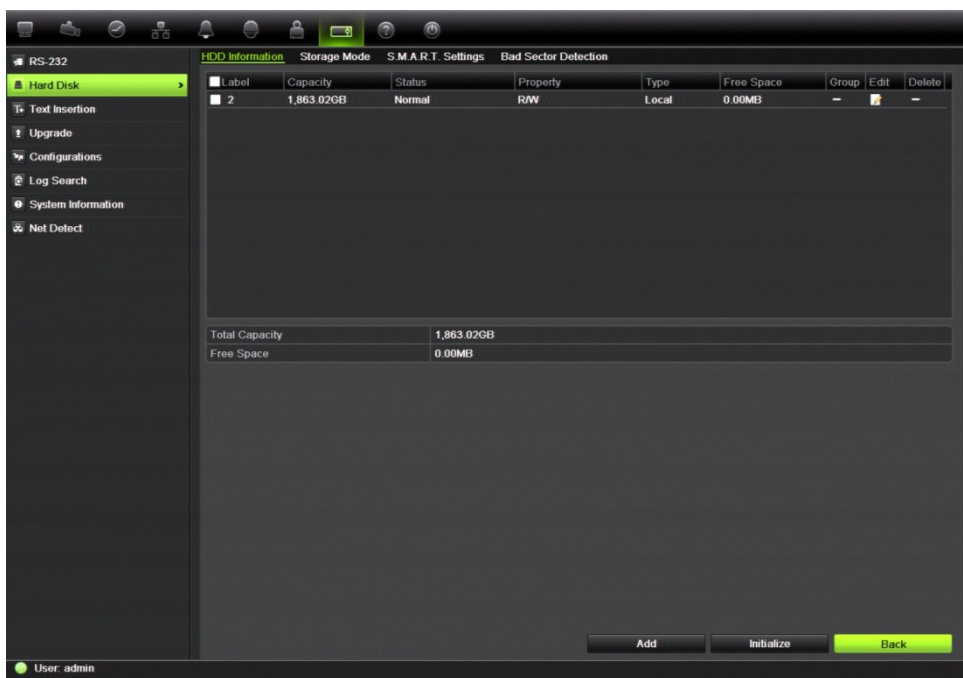
This chapter describes how to handle HDDs.

### Initializing HDDs

The in-built HDD must be initialized before it can be used. You can also re-initialize the HDD. However, all data on the HDD will be destroyed.

#### To initialize an HDD:

1. From the menu toolbar, click **System Settings > Hard Disk**.
2. Select the HDD to be initialized.
3. Click the **Initialize** button to begin initialization.



After the HDD has been initialized, the status of the HDD changes from Abnormal to Normal.

## Controlling disk storage mode on the HDD

You can allocate on an HDD the maximum permitted storage and snapshot capacities from each camera.

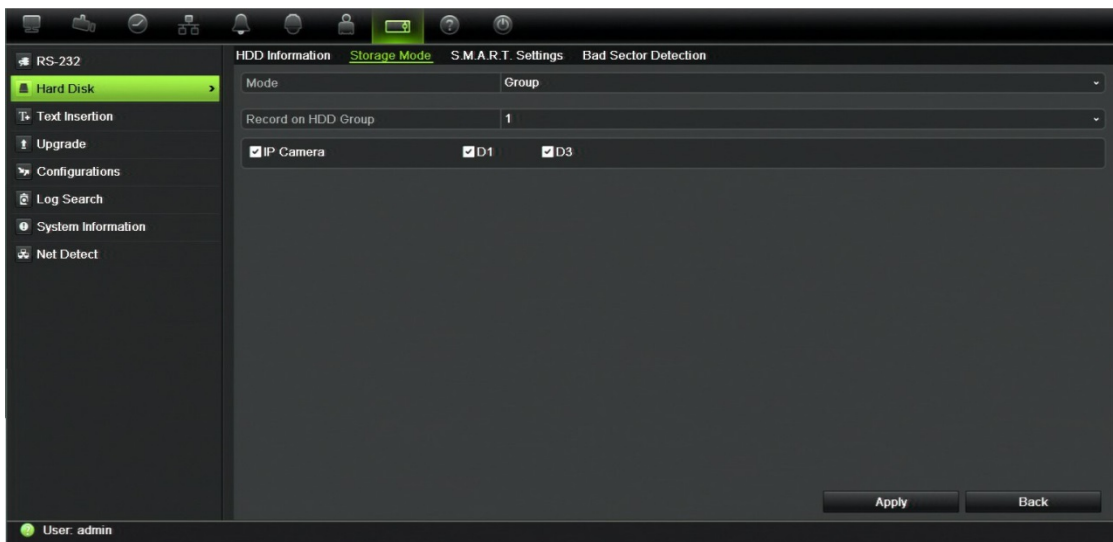
1. Click **System Settings > Hard Disk > Storage Mode**.
2. Under the Mode option, select **Quota**.
3. Select a camera whose storage capacity you want to change and enter the values in GB for maximum record capacity and maximum picture capacity. The Used Record/Picture Capacity and the maximum storage capacity of the HDD are listed.
4. Click **Apply** to save the settings.
5. If you want to copy these values to other cameras, click **Copy** and select the cameras. Click **OK**. Click **Apply** to save the settings.

## Setting up HDD groups

Your recorder can organize multiple HDDs into groups. Videos from specified channels can be set to be recorded onto a particular HDD group. You could, for example, save the records from a couple of high priority cameras to one HDD, and save the recordings from all the other cameras to another HDD.

### To set up an HDD group:

1. From the menu toolbar, click **System Settings > Hard Disk > Storage Mode**.
2. Under **Mode**, select **Group**.



3. Under **Record on HDD Group**, select the HDD group number.
4. Check the channels to be added to this group.  
**Note:** By default, all channels belong to HDD group 1.
5. Click **Apply** to save the settings.

## Setting the HDD property

 
You can change the behavior of your HDD by changing its property. It can be set to redundancy, read-only or read/write (R/W).

AN HDD can be set to read-only to avoid important recorded files from being overwritten when the HDD becomes full.

Before changing the HDD property to “Redundancy”, there must be at least two HDDs installed in the recorder, you need to set the storage mode to “Group” and one of the other HDDs must be set to R/W. See “Setting up HDD groups” on page 116 for more information.

**Note:** Ensure that the HDD storage mode is "Group" before setting the HDD to read-only.

### To change an HDD status property:

1. From the menu toolbar, click **System Settings > Hard Disk > HDD Information**.
2. Select the HDD whose property you want to change.
3. Click the **Edit** icon . The Local HDD Settings screen appears.
4. Click the desired HDD property for the selected HDD.
5. Click the group number for this HDD.
6. Click **Apply** to save and exit the screen.

**Note:** Once set to read-only, the HDD cannot be used to save recorded files until it is set back to read/write (R/W). If the HDD that is currently being written to is set to read-only, the data is then recorded to the next HDD. If there is only one HDD present, setting it to read-only means the recorder cannot record.

7. Click **Back** to return to live view, or continue configuring the NVR settings.

## Checking HDD status

You can check the status of any of the installed HDDs on the recorder at anytime.

### To check the status of an HDD:

1. Click **System Settings > Hard Disk**.
2. Note the status of the HDDs listed under the Status column.

If the status is listed as Normal or Sleeping, the HDD is in working order. If it is listed as Abnormal and has already been initialized, the HDD needs to be replaced. If the HDD is Uninitialized, you need to initialize it before it can be used in the recorder.

Refer to “Initializing HDDs” on page 115 for more information.

**Note:** This information is also available under **System Settings > System Information > HDD** screen.

## Configuring HDD alarms

HDD alarms can be set to trigger when an HDD is uninitialized or in an abnormal state.

### To set HDD alarms:

1. From the menu toolbar, click **Alarm Settings > Notification**.
2. Select the notification event to configure under **Notification Type** box.
3. Select **HDD Full** and check the desired notification method. See “Description of alarm notification types” on page 95 for more information.

Select **HDD Error** and check the desired notification method.

4. Click **Apply** to save the settings.

## Managing eSATA

If you are using an external e-SATA device connected to the recorder, you can configure the e-SATA to record/capture or export video.

Select the Export option when using the eSATA as a backup. See “Using Quick Archive” on page 63 for further information.

Select the Record/Capture option to record and capture video. Information on the eSATA for this purpose can be seen under **System settings > Hard Disk > HDD Information**.

### To set up the e-SATA device:

1. Click the **Video Schedule** icon in the menu toolbar and select **More Settings**.
2. Under **eSATA**, select the desired option: **Record/Capture** or **Export**.
3. Click **Apply** to save the settings.

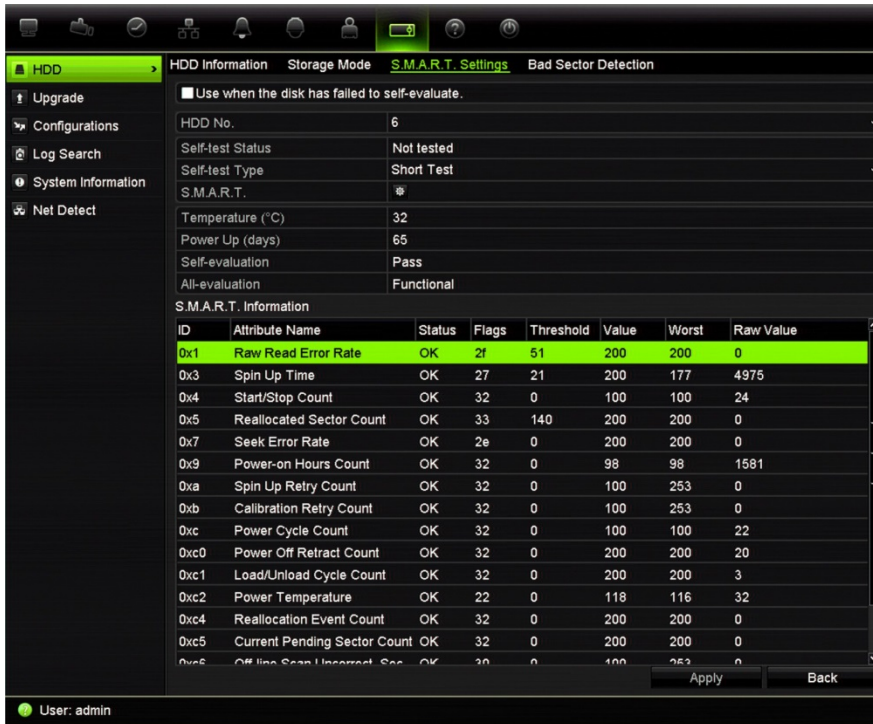
## Checking the S.M.A.R.T. information

S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) reports on a variety of hard drive attributes. It helps ensure that the HDD is functioning properly at all times while protecting video stored on the hard drive.

**Note:** The recorder with RAID functionality does not support S.M.A.R.T.

### To view the S.M.A.R.T. information of an HDD:

1. From the menu toolbar, click **System Settings > HDD > S.M.A.R.T. Settings**.
2. Select the HDD whose data you want to see. A detail listing of S.M.A.R.T. information is displayed.




3. If you want to continue to use an HDD when the S.M.A.R.T. test has failed, check the box **Use when the disk has failed to self-evaluate**. Click **Apply** to save the settings.
4. Click **Back** to return to live view, or continue configuring the NVR settings.

## Bad sector detection

You can improve the performance of your HDDs by ensuring that they have no bad sectors. Bad sectors can slow down an HDD when reading or writing data, for example.

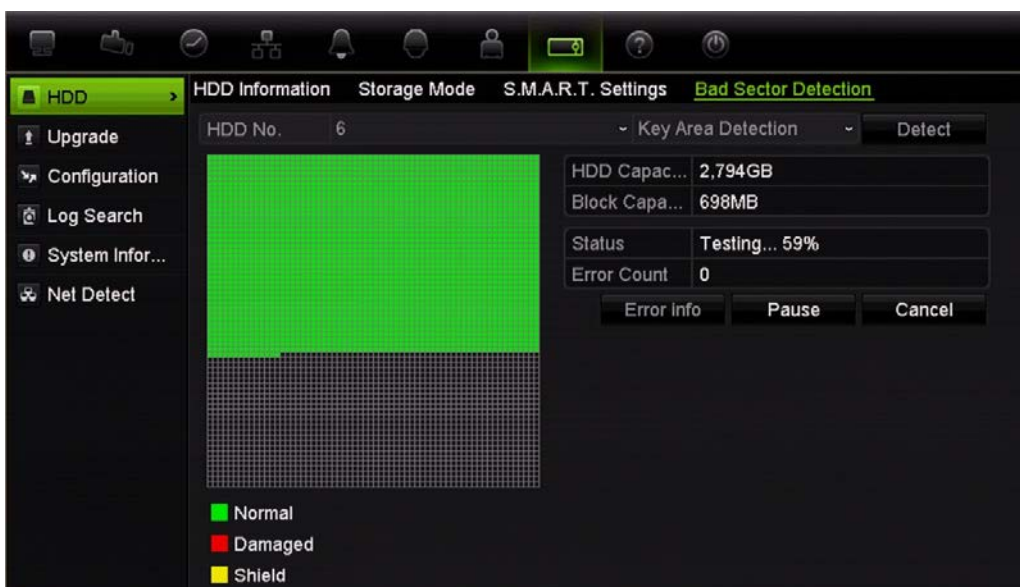Figure 36: Bad sector detection window



**To set up bad sector detection:**

1. From the menu toolbar, click **System Settings > HDD > Bad Sector Detection**.
2. Select the HDD you want to test.
3. Select whether you want to do a key sector detection or a full detection, and click **Detect**.
4. The system checks the HDD. The color-coded result is displayed on screen. If there are bad sectors found, click **Error Info** to see a list of the errors found.
5. If required, click **Pause** to pause the test or **Cancel** to cancel it.
6. Click **Back** to return to live view, or continue configuring the NVR settings.

# Chapter 14

## Camera settings

This chapter describes how to configure the IP cameras.

The TVN 21(S) can support up to 16 network cameras and the TVN 21P up to 32 network cameras. The number of cameras supported depends on the recorder model and available bandwidth.

### Cameras supported

The recorder supports TruVision and UltraView IP cameras as well as TVE encoders. It supports a wide range of third party IP cameras through compliancy with the Onvif and PSIA standards for open camera communication.

### Adding IP cameras to the recorder

Before adding an IP camera to the recorder system, it is important that the network settings of the recorder are correctly set up.

See Figure 37 on page 122 for a description of the IP camera menu used to add and delete cameras.

Figure 37: IP camera window (TVN 21S shown)



List of IP cameras added to the recorder

1. **Quick Add:** Add the selected cameras from the search results list to the recorder system without modifying the camera configuration.
2. **Search:** Search the network for available IP cameras.
3. **Add:** After entering the details of a camera in the configuration window, add it to recorder system.
4. **Advanced Set:** Modify the settings of a camera.
5. **Refresh:** Update the information displayed on a camera in the recorder device list.
6. **Live view:** View selected IP camera.
7. **Delete:** Delete selected IP camera.

There are two ways to add a camera to the recorder:

- **Quick Add:** Interlogix IP cameras are automatically discovered if they are located on the same LAN as the recorder.
- **Manual:** Use this method if the IP cameras are located on a different LAN from the recorder or if you are using third party IP cameras.

### To automatically add an IP camera

1. From the menu toolbar, click **Camera Management > Camera**.
2. Click **Search** to locate any IP cameras located in the recorder LAN. When the search is complete, a list of the available cameras is shown.
3. Check the boxes of the desired cameras that you want to add to the recorder system.



- Click **Quick Add** to add the selected cameras to the list of devices in the recorder system.

The cameras are added to the end of the list of devices.

- To test if a camera connection is operational, select the desired camera from the list of devices connected to the recorder and click **Live**. A pop-up screen should appear showing the camera's live view.

### To manually add an IP camera

- From the menu toolbar, click **Camera Management > Camera**.
- Under IP Camera Address/Domain, enter the camera's IP address.
- Click **Add** to add the camera to the list of devices in the recorder system.


The camera is added to the end of the list of devices.

**Note:** Only one camera can be manually added at a time.

## PoE power budget

It is important when installing IP cameras to calculate the total power consumption required so that it is less than the power budget of the NVR switches. The NVR lets you easily track on-screen the current and remaining power consumption for all cameras directly connected to its switches. See Figure 38 below.

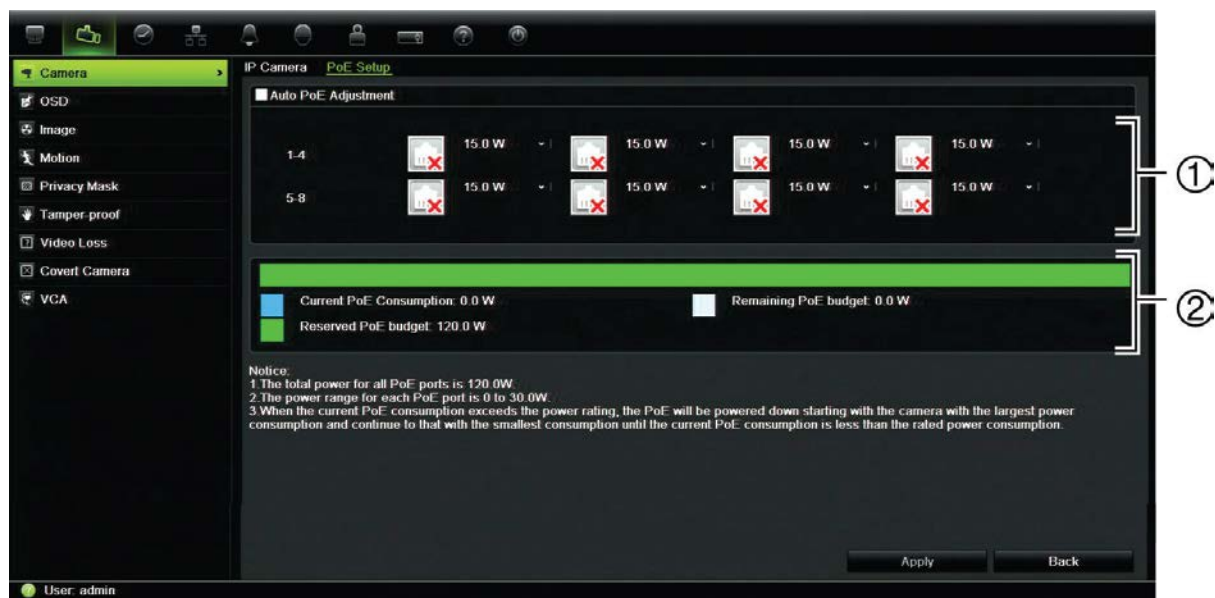Figure 38: PoE power budget information on IP cameras



- Select the PoE type required for each camera.
- Dynamic tracking of the current PoE power consumption (blue), unallocated PoE power (white), and remaining allocated PoE power budget (green) shown.

The IP cameras will specify which type of PoE they require. You can set up each camera individually for no PoE, PoE-at, PoE-af, 12.5 W or 15 W. A PoE port can support up to 30 W maximum.

The recorder has a maximum of 8 or 16 PoE ports, depending on the model. The total PoE power budget for the 8-channel recorder is 120 W, and that for the 16-channel recorder is 200 W.

The PoE-af port can support between 0 and 15.4 W and the PoE-at port can support between 0 and 30 W. See Table 19 below for a description of the maximum number of IP cameras that can be connected depending on the PoE type used.

**Table 19: Maximum number of IP cameras that can be connected by PoE power consumption**

Recorder	Total PoE power budget	Maximum number of IP cameras connected			
		12.5 W	15 W	PoE-af	PoE-at
TVN-2108S	120	-	8	7	4
TVN-2116S	200	16	-	12	6

**Note:** The PoE power specifications are the PoE power available at the recorder. However, depending on the cable length and cable quality you can experience a loss of PoE power. Ensure that this is taken into account when configuring the system.

#### To display the PoE power consumption information:

1. From the menu toolbar, click **Camera Management > Camera > PoE Setup**.
2. Select the PoE type required for each camera: No PoE, PoE-af, PoE-at, 12.5 W or 15.0 W.
3. Click **Apply** to save the settings and then click **Back** to return to live view.

### Automatically allocating PoE power

The recorder can be set up to automatically allocate PoE power depending on each camera's needs. Note that if the full PoE budget (120/200W) is used on the first seven ports, for example, PoE port 8 will no longer be powered.

#### To set up auto PoE:

1. From the menu toolbar, click **Camera Management > Camera > PoE Setup**.
2. Check **Auto PoE**.
3. Click **Apply** to save the settings and then click **Back** to return to live view.

## Accessing IP cameras connected to an internal switch

There are two independent networks systems in the TVN 21S. One is used for the computer (such as NIC type and the IPv4 address). The other is used by the recorder for the IP cameras. The recorder automatically connects the cameras to this network.

When on the same LAN as the TVN 21S, the "Bridge PoE camera network" setting allows you, while using the TVN 21S browser interface, to connect directly to the PoE camera browser interface for advanced settings. The PoE camera browser interface is accessible by clicking the IP camera's IP address in the TVN21S browser interface.

### To access IP cameras via the browser:

1. From the menu toolbar, click **Network Settings > More Settings > Bridge PoE Camera Network**.
2. Enable **Bridge PoE Camera Network**.
3. From the menu toolbar, click **Camera Management > IP Camera**.
4. Click the IP address of the desired camera to open access to it.
5. Click **Apply** to save the settings and then click **Back** to return to live view.

- Or -

1. In the browser, enter the IP address of the recorder.
2. Select the PoE port of the recorder for the desired camera. Depending on which port the camera is connected, select 65001 for PoE port 1 up to 65016 for PoE port 16.

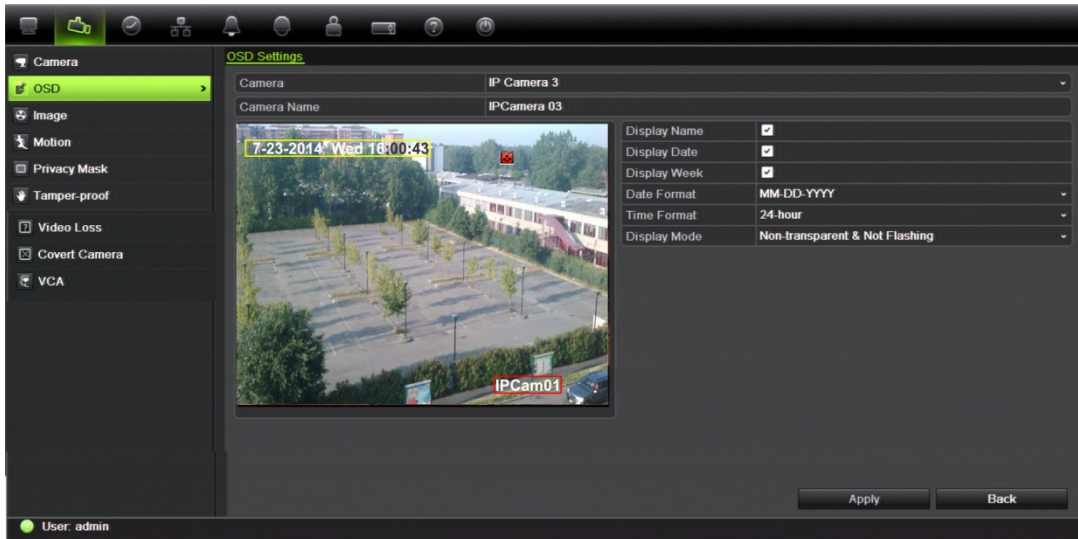
## Configuring the camera OSD settings

The on-screen display (OSD) settings appear in live view mode and include the camera name, time and date. They also are included in recordings.

You can also adjust the transparency of the OSD relative to the background so that it is easier to read or is less prominent on screen.

**To configure the OSD settings:**

1. From the menu toolbar, click **Camera Management > OSD**.



2. Enter a name for the camera, if required. The name can have up to 32 alphanumeric characters.
3. Check the Display Name, Display Date, and Display Week boxes to display the camera name, date, and week.
4. Select a date format and a time format.
5. Select how you want the camera information displayed.

Select one of the options from the drop-down list. Default is non-transparent & not flashing.

- Transparent & Flashing
  - Transparent & Not Flashing
  - Non-transparent & Flashing
  - Non-transparent & Not Flashing
6. There are two text boxes in the camera view screen; one for the camera name (red box) and the other for the date/time (yellow box). Using the mouse, click and drag a text box to the desired position.
  7. Click **Apply** to save the settings and then click **Back** to return to live view.

## Setting up privacy masking

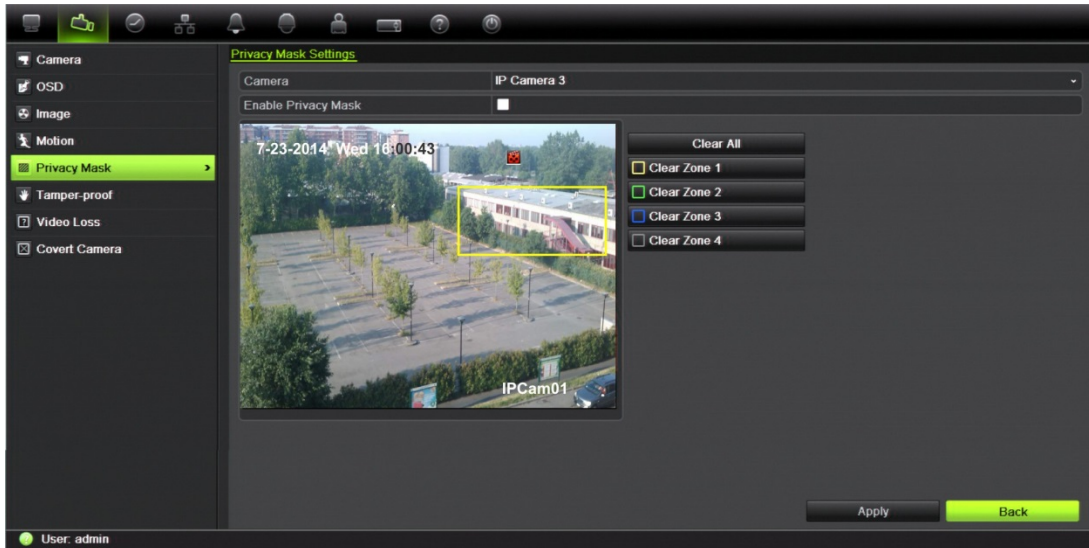
You can define an area on screen to remain hidden from view. For example, you can choose to block the view of a camera when overlooking residential premises. This hidden area is referred to as privacy masking. Privacy masking cannot be viewed in live view or recorded mode, and appears as a black area on the video image.

**To setup a privacy mask:**

1. From the menu toolbar, click **Camera Management > Privacy Mask**.

2. Select the camera for which to set up privacy masking.
3. Check the **Enable Privacy Mask** box to enable the feature.
4. Set up the mask area. Up to four areas can be set.

Using the mouse, click and drag a privacy-mask box in the camera view screen over the desired area. You can set up to four areas for privacy masking. Masked areas are dimmed and outlined in four different colors. Click **Apply** to save settings.



To delete a mask, click **Clear** for that color mask, or click **Clear All**.

5. Click **Apply** to save the settings and then click **Back** to return to live view.

## Adjusting video image settings

You may need to adjust the camera image depending on the location background in order to get the best image quality.

The system has four preset mode settings for frequently encountered lighting conditions: Standard, Bright, Soft, and Vivid. However, you can also manually adjust the brightness, saturation, contrast, and hue values using the Customize option. Adjustments to the settings affect both live view and recorded images.

**Note:** These options can also be modified from the image settings button on the live view quick access toolbar (see “Accessing frequently used commands” on page 34.)

### To adjust display settings:

1. From the menu toolbar, click **Camera Management > Image**.
2. Select the camera for which to adjust the video image settings.
3. Select the desired mode value. Changes are seen immediately on screen.

If “Customize” is selected, adjust the brightness, saturation, contrast, and hue values by dragging each scroll bar.

4. Click **Apply** to save the settings and then click **Back** to return to live view.

## Watermarking

You can overlay digital watermarking to authenticate images and protect them from alterations. Watermarking on an image is only visible during playback of exported video.

The recorder supports watermarking from TruVision cameras and encoders.

Use the playback application, Player, to reveal the watermarking on archived video. Enable the Watermarking option in Player.

## Hiding a camera image from view

There may be occasions when you want to control who can live view the camera images on a local monitor, such as if there is a camera located in a changing room. The recorder lets you select which camera (or cameras) is not displayed on the local monitor unless the user is logged in and has permission to live view the camera. A covert camera is not displayed on screen when no user is logged in. Instead a person walking by sees a black screen with the Interlogix logo. See Figure 39 below.

Figure 39: Example of a covert camera image



**To set up a camera for covert view:**

- 1 From the menu toolbar, click **Camera Management > Covert Camera**.
2. Check which camera or cameras you want to be covert and click **Apply**.

# Chapter 15

## Recorder management


This chapter describes:

- Configuring the RS-232 port
- Updating system firmware
- Restoring default settings
- Viewing system information
- Viewing system logs

### Configuring the RS-232 port

Use the **System Settings** menu to configure the RS-232 parameters such as baud rate, data bit, stop bit, parity, flow control, and usage.

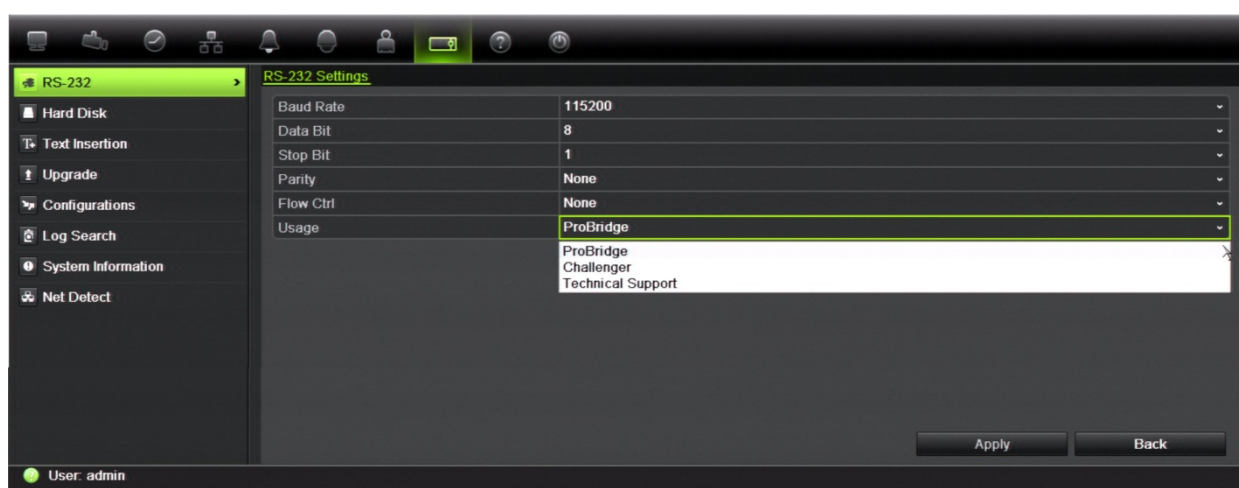**Figure 40: RS-232 setup window**



There are three ways the RS-232 port can be used:

- **ProBridge:** POS and ATM text insertion supported via the ProBridge accessory connected to the RS-232 port. See “Capturing text insertions” on page 80 for more information.

- **Challenger:** NTP time sync supported to foreign device over the RS-232 port.
- **Technical support:** Console mode.

## Updating system firmware

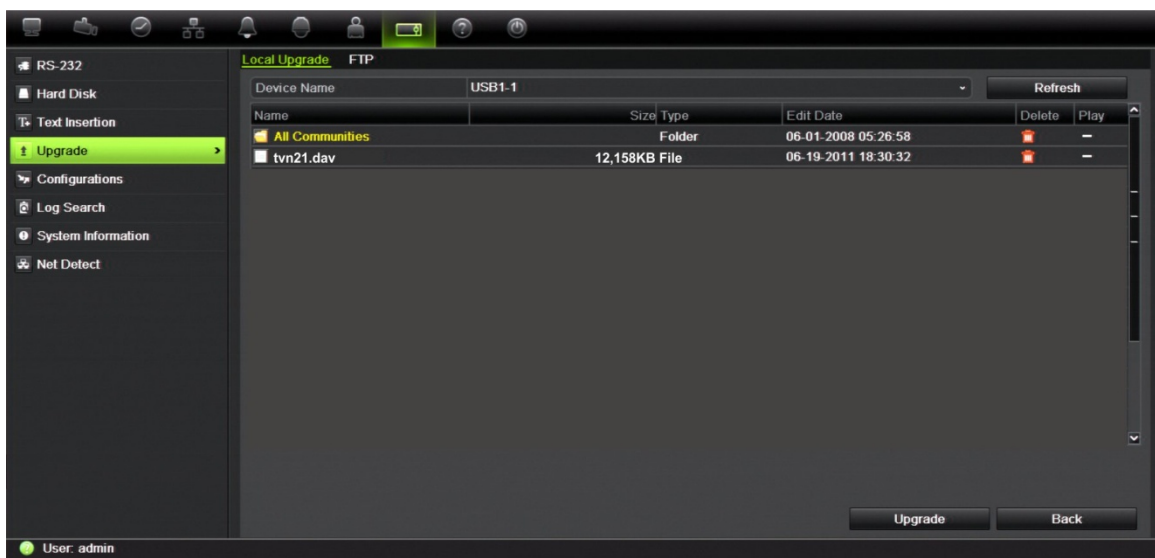
The firmware on the recorder can be updated using four methods:

- Via a USB device
- Over the network via an FTP server
- Via the recorder web browser
- Using TruVision Navigator. For further information, refer to the TruVision Navigator user manual.

The firmware upgrade file is labeled *tvn21\_50.dav*.

### To update the system firmware using a USB device:

1. Download the latest firmware on to a USB from our web site at:  
<http://www.interlogix.com/library>  
- Or -  
[www.utcssecurityproductspages.eu/videoupgrades](http://www.utcssecurityproductspages.eu/videoupgrades)
2. Connect the USB device to the recorder.
3. From the menu toolbar, click **System Settings > Upgrade > Local Upgrade**. The list of files on the USB is displayed.



4. Select the file and click **Upgrade**. Click **Yes** to begin the upgrade process.
5. When the upgrade process is completed, the recorder reboots automatically.

### To update the system firmware via an FTP server:

For engineering purposes only.



## Restoring default settings

**To restore all parameters to default factory settings:**

1. From the menu toolbar, click **System Settings > Configurations**.
2. Click the **Default** tab.
3. Click the **Default** button. Enter the Admin password, click **OK**, and then click **Yes** to confirm that you want to restore all parameters to default.

— Or —

Click the **Restore** tab. Enter the Admin password, click **OK**, and then click **Yes** to confirm that you want to restore all parameters except network settings to default.

**Note:** Network information such as IP address, subnet mask, gateway, MTU, NIC working mode, server port and default route are not restored to factory default settings if **Restore** is selected.

## Importing and exporting configuration settings

You can export and import configuration settings from a recorder. This is useful if you want to copy the configuration settings to another recorder, or if you want to make a back up of the settings.

Insert an external storage device in the recorder. Go to the **System Settings > Configurations > Import/Export Configuration File** to import or export configuration settings. Click **Export** to export the recorder's configuration settings into an external storage device or click **Import** to import configuration settings after selecting a configuration file from the external storage device.

## Viewing system information

You can check the current status of the recorder at any time by going to the **System Information** menu. You can check the status of the device, cameras, recordings, alarms, network, and HDDs.

**To view system information:**

1. From the menu toolbar, click **System Settings > System Information**.
2. To view device information, click the **Device Info** tab.

You can view the device name, model, serial number, firmware version, encoding version, and panel version.

3. To view camera information, click the **Camera** tab.

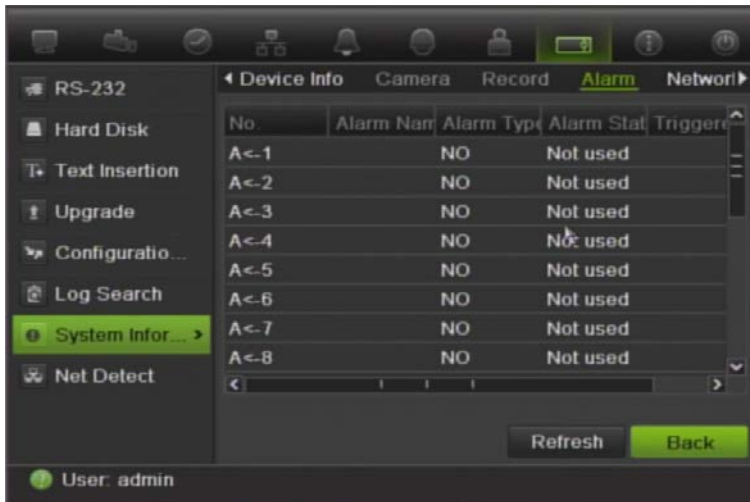
You can view the status of each camera: camera number, camera name, status, motion detection, tamper proof, video loss, preview link sum, and preview link information.

- To view the recording status and encoding parameters of each camera, click the **Record** tab.

You can view the camera number, recording status, stream type, frame rate, bit rate (Kbps), resolution, record type, encoding parameters, and redundant record.


- To view the alarm information, click the **Alarm** tab.

You can view the alarm input number, alarm name, alarm type, alarm status, and triggered camera.




- To view network information, click the **Network** tab.

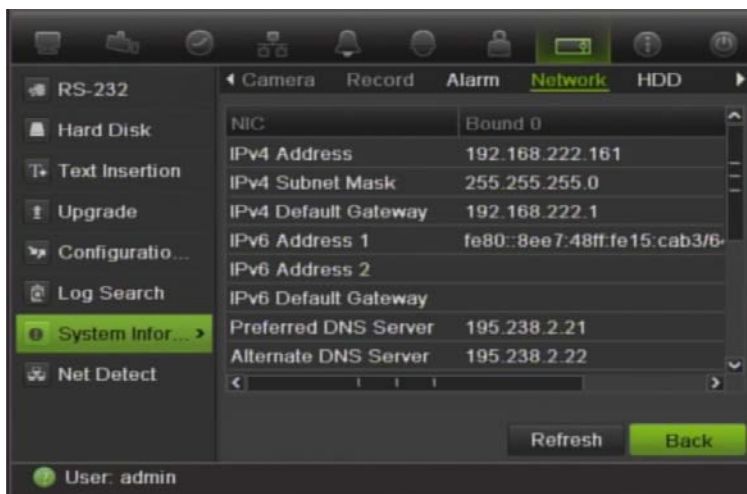You can view the IPv4 address, IPv4 subnet mask, IPv4 default gateway, IPv6 address 1, IPv6 address 2, IPv6 default gateway, preferred DNS server, alternate DNS server, enable DHCP, enable PPPoE, PPPoE address, PPPoE subnet mask, PPPoE default gateway, main NIC, and MAC address.



- To view HDD information for each HDD, click the **HDD** tab.

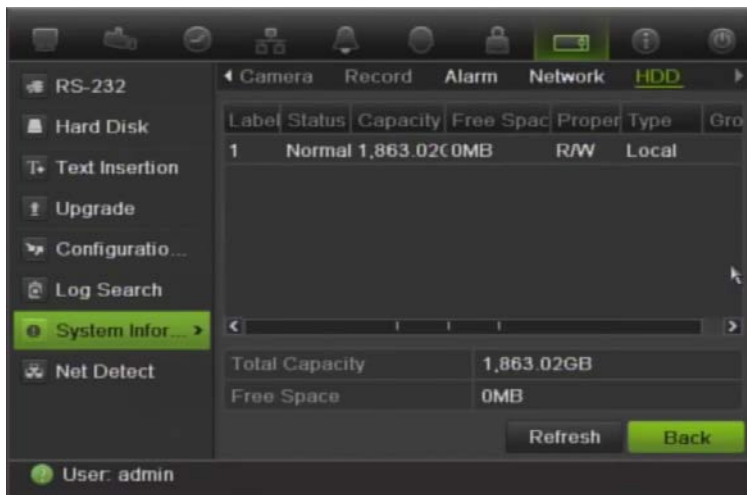You can view the HDD label, status, capacity, free space, property, type, and group.



8. Click **Back** to return to live view.

## Searching system logs for events

Many events of the recorder, such as operations, alarms and notifications, are logged into the system logs. They can be viewed and exported at any time.

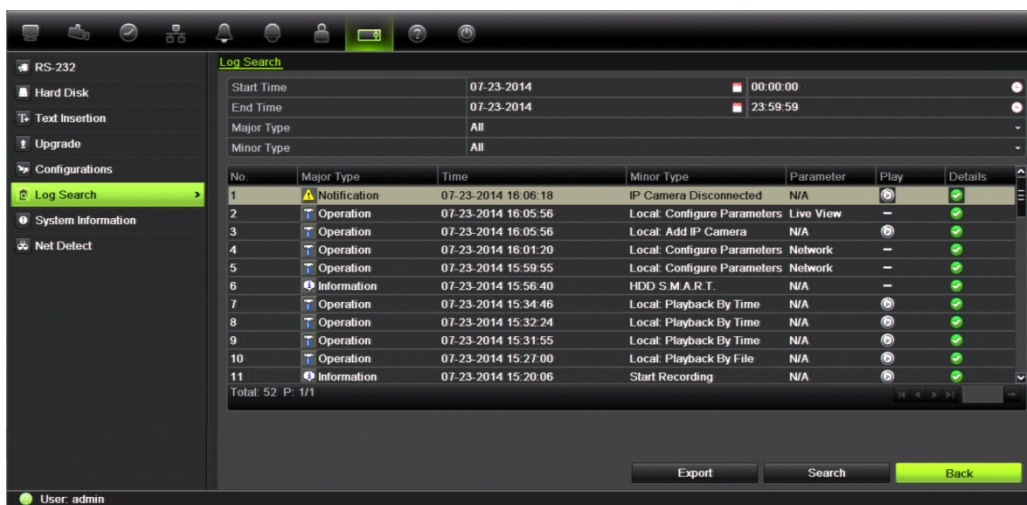
Up to 2000 log files can be viewed at once.



Log files can also be exported onto a USB device. The exported file is named according to the time it was exported. For example: *20120729124841logBack.txt*.

**Note:** Connect the backup device, such as a USB flash drive, to the recorder before commencing the log search.

### To search and export log files:

1. From the menu toolbar, click **System Settings > Log Search**.
2. Enter the search parameters and click **Search** to begin the search. The logs matching the search criteria are displayed.



3. To view more detail information about a particular log entry, select the entry and click  or double-click the log entry.
5. If available, you can also view the associated video to the selected log entry by clicking its play button .
5. To export a log entry, select a log and click **Export**.
4. Click **Back** to return to live view.

# Chapter 16

## User management

By default the recorder comes with three user accounts: an Administrator account, an Operator account and a Guest account. These accounts provide multiple levels of access and functionality. See Table 20 below for a description of the different user accounts.

**Table 20: User accounts**

User	Description
<b>Administrator</b>	The administrator account includes extended menu with full access to all settings. The Administrator has the authority to add, delete or configure parameters for many of the system functions. There can only be one administrator. The user name is "admin". The name cannot be modified. The default password is 1234.
<b>Operator</b>	The operator account includes reduced menu access to Video settings (inaccessible features are not visible). The default user name is "operator". The default password is 4321.
<b>Guest</b>	The guest account includes menu access with no programming possibilities (inaccessible features are not visible). The default user name is "guest". The default password is Empty.

**Note:** The default passwords should be changed for security reasons.

### Adding a new user


Only a system administrator can create a user. You can add up to 31 new users.

The access privileges of Operator and Guest users are predefined and can be modified by the administrator.

#### To add new users:

1. From the menu toolbar, click **User Management**.

2. Click **Add** to enter the Add User screen.
3. Enter the new user's name and password. Both the user name and password can have up to 16 alphanumeric characters.
4. Select the new user's access level: Operator or Guest.
5. Enter the user's MAC address to let the user access the recorder from a remote computer with this MAC address.
6. Click **Apply** to save the settings and **OK** to return to the previous screen.
7. Define the user's permissions.

Click the Permission button  for the new user. In the Permission pop-up screen check the required access privileges for local, remote and camera configuration. See "Customizing a user's access privileges" below for the permission descriptions for each group.

Click **Apply** to save the settings and **OK** to return to the previous screen.

8. Click **Back** to return to live view.

## Customizing a user's access privileges

Only an administrator can allocate access privileges to Operator and Guest users. The access privileges can be customized for each user's needs. The administrator's access privileges cannot be changed.

There are three types of privilege settings: Local Configuration, Remote Configuration, and Camera Configuration.

**Note:** Only the administrator can restore factory default settings.

### Local configuration settings:

- **Local Information(Log) Management:** Locally search and view logs of the recorder and view system information.
- **Local Parameter Settings:** Locally configure parameters as well as import/export configuration files.
- **Local Camera Management:** Locally add, delete, and edit IP cameras.
- **Local Advanced Operation:** Access HDD management (including the initialization and modification of disk properties). Update system firmware as well as manually trigger and clear the I/O alarm output.
- **Local Shutdown/Reboot:** Locally shutdown or reboot the recorder.

### Remote configuration settings:


- **Remote Log Search:** Remotely view logs that are saved on the recorder.
- **Remote Parameter Settings:** Configure parameters as well as import/export configuration files.
- **Remote Camera Management:** Remotely add, delete, and edit IP cameras.
- **Remote Serial Port Control:** For future use.
- **Two-Way Audio:** Use two-way audio between the remote client and the recorder.
- **Remote Alarm Control:** Remotely trigger and clear the I/O alarm output. Alarm and notification settings must be configured properly to upload to host.
- **Remote Advanced Operation:** Remotely manage HDDs (initializing and setting properties for HDDs) as well as remotely update system firmware.
- **Remote Shutdown/Reboot:** Remotely shutdown or reboot the recorder.
- **Remote Video Output Control:** Remotely control the video output.

### Camera configuration settings:

By default, all IP cameras are enabled for operators for each of these settings, and guests have Local Playback and Remote Playback privileges by default.

- **Local Live View:** Locally select and view live video.
- **Remote Live View:** Remotely select and view live video over the network.
- **Local Manual Operation:** Locally start/stop manual recording on any of the channels, and snapshots.
- **Remote Manual Operation:** Remotely start/stop manual recording on any of the channels.
- **Local Playback:** Locally play recorded files that are on the recorder.
- **Remote Playback:** Remotely play and download recorded files that are on the recorder.
- **Local PTZ Control:** Locally control PTZ dome cameras.
- **Remote PTZ Control:** Remotely control PTZ dome cameras.
- **Local Video Export:** Locally back up recorded files from any of the channels.
- **Remote Video Export:** Remotely backup recorded files from any channel.

 
### To customize a user's access privileges:

1. Click the **User Management** icon in the menu toolbar to display its screen.
2. Click the Permission button  for the user whose information needs to be changed. The Permission pop-up screen appears.
3. Edit the user information and click **Apply** to save the settings.
4. Click the **OK** button to return to the previous screen.
5. Click **Back** to return to live view.

## Deleting a user

Only a system administrator can delete a user.


### To delete a user from the recorder:

1. From the menu toolbar, click **User Management**.
2. Click the **Delete** button  for the user to be deleted.
3. Click **Yes** in the pop-up screen to confirm deletion. The user is immediately deleted.
4. Click **Back** to return to live view.

## Modifying a user

A user's name, password, access level and MAC address can be changed. Only a system administrator can modify a user.

### To modify a user:

1. From the menu toolbar, click **User Management**.
2. Click the **Edit** button  for the user whose information needs to be changed. The **Edit User** pop-up screen appears.
3. Edit the user information and click **Apply** to save the settings.
4. Click the **OK** button to return to the previous screen.
5. Click **Back** to return to live view.

## Changing the Admin password

The administrator's password can be changed in the **User Management** menu. Click the **Change Password** tab and enter the new information. The administrator's MAC address can be changed here too. Once completed, click **Apply** to save the settings.



# Appendix A

## Specifications

	TVN 2108(S)	TVN 2116(S)
<b>Video &amp; audio input</b>		
Video compression	H.264	
Audio compression	G729, G711, G726, G722, L16	
IP video input	8-ch	16-ch
Audio input	1-ch, BNC (2.0 Vp-p, 75 Ω)	
Bi-directional audio	1-ch, RCA (2.0 Vp-p, 1 kΩ)	
Total bandwidth available	40/80 Mbps in / 80/160 Mbps out	
<b>Video &amp; audio output</b>		
HDMI output	1-ch, Resolution: 1920 × 1080P / 60 Hz, 1920 × 1080P / 50 Hz, 1600 × 1200 / 60 Hz, 1280 × 1024 / 60 Hz, 1280 × 720 / 60 Hz, 1024 × 768 / 60 Hz	
VGA output	1-ch, Resolution: 1920 × 1080P / 60 Hz, 1600 × 1200 / 60 Hz, 1280 × 1024 / 60 Hz, 1280 × 720 / 60 Hz, 1024 × 768 / 60 Hz	
BNC output	1-ch, BNC (1.0 Vp-p, 75 Ω), Resolution: PAL: 704 × 576; NTSC: 704 × 480	
Recording resolution	5MP /3MP /1080P /UXGA /720P /VGA / 4CIF / DCIF / 2CIF / CIF / QCIF	
Playback resolution	5MP /3MP /1080P /UXGA /720P /VGA / 4CIF / DCIF / 2CIF / CIF / QCIF	
Frame rate	25 fps (PAL) / 30 fps (NTSC)	
Audio output	2-ch, RCA (Linear, 600 Ω)	
Audio bit rate	16 Kbps	
Dual-stream	Support   (Sub-stream at 4CIF/CIF/QCIF/QXVGA/QVGA: 25 fps (PAL) / 30 fps (NTSC))	
Stream type	Video, Video & Audio	
Synchronous playback	8-ch	16-ch

	TVN 2108(S)	TVN 2116(S)
<b>Hard disk</b>		
SATA		4 SATA interfaces
e-SATA		1 e-SATA interface
Capacity per HDD		2TB
<b>External interface</b>		
Network interface	2 RJ45 10M / 100M / 1000M Ethernet interface	
Serial interface	1 RS-232 interface (for ProBridge, Challenger, and Technical Support); 1 RS-485 interface (Not used)	
PoE camera interface	8/16 10M / 100M / 1000M Ethernet interface (TVN 21S only)	
PoE budget	120 or 200 W (TVN 21S only)	
USB interface	3, USB 2.0	
Alarm in	16	
Alarm out	4	
<b>Miscellaneous</b>		
Power supply	100 to 240 VAC, 6.3 A, 50 to 60 Hz	
Power consumption (without HDD)	≤ 45 W	
Operating temperature	-10 to +55 °C (14 to 131 °F)	
Relative humidity	10 to 90%	
Chassis	19-inch rack-mounted 1.5U chassis	
Dimensions (W x D x H)	442 x 371 x 74 mm (17.4 x 14.6 x 2.91 in.)	
Weight	≤ 8 kg (17.64 lb.) (without HDD)	

	TVN 2108P	TVN 2116P	TVN 2132P
<b>Video &amp; audio input</b>			
Video compression		H.264	
Audio compression		G729, G711, G726, G722, L16	
IP video input	8-ch	16-ch	32-ch
Audio input		1-ch, BNC (2.0 Vp-p, 75 Ω)	
Bi- directional audio		1-ch, RCA (2.0 Vp-p, 1 kΩ)	
Total bandwidth available	40/80/160 Mbps in / 80/160/160 Mbps out		
<b>Video &amp; audio output</b>			
HDMI output	1-ch, Resolution: 1920 x 1080P / 60 Hz, 1920 x 1080P / 50 Hz, 1600 x 1200 / 60 Hz, 1280 x 1024 / 60 Hz, 1280 x 720 / 60 Hz, 1024 x 768 / 60 Hz		

	TVN 2108P	TVN 2116P	TVN 2132P
VGA output	1-ch, Resolution: 1920 × 1080P / 60 Hz, 1600 × 1200 / 60 Hz, 1280 × 1024 / 60 Hz, 1280 × 720 / 60 Hz, 1024 × 768 / 60 Hz		
BNC output	1-ch, BNC (1.0 Vp-p, 75 Ω), Resolution: PAL: 704 × 576; NTSC: 704 × 480		
Recording resolution	5MP /3MP /1080P /UXGA /720P /VGA / 4CIF / DCIF / 2CIF / CIF / QCIF		
Playback resolution	5MP /3MP /1080P /UXGA /720P /VGA / 4CIF / DCIF / 2CIF / CIF / QCIF		
Frame rate	25 fps (PAL) / 30 fps (NTSC)		
Audio output	2-ch, RCA (Linear, 600 Ω)		
Audio bit rate	16 Kbps		
Dual-stream	Support   ((Sub-stream at 4CIF/CIF/QCIF/QXVGA/QVGA: 25 fps (PAL) / 30 fps (NTSC))		
Stream type	Video, Video & Audio		
Synchronous playback	8-ch	16-ch	32-ch
<b>Hard disk</b>			
SATA	8 SATA interfaces		
e-SATA	1 e-SATA interface		
Capacity per HDD	2TB		
<b>External interface</b>			
Network interface	2 RJ45 10M / 100M / 1000M Ethernet interface		
Serial interface	1 RS-232 interface (for ProBridge, Challenger, and Technical Support); 1 RS-485 interface (Not used)		
USB interface	3, USB 2.0		
Alarm in	16		
Alarm out	4		
<b>Miscellaneous</b>			
Power supply	100 to 240 VAC, 6.3 A, 50 to 60 Hz		
Power consumption (without HDD)	≤ 45 W		
Operating temperature	-10 to +55 °C (14 to 131 °F)		
Relative humidity	10 to 90%		
Chassis	19-inch rack-mounted 2U chassis		
Dimensions (W x D x H)	445 × 470 × 90 mm (17.5 × 18.5 × 3.5 in.)		
Weight	≤ 8 kg (17.64 lb.) (without HDD)		



# Appendix B

## PTZ protocols

Interlogix-485	PELCO-P
Interlogix-422	PHILIPS
GE-RS485-ASCII	PHILIPS-3
Kalatel	SAE
DSCP	Samsung
HIKVISION	Siemens
Honeywell	SONY-EVI-D30/31
INFINOVA	SONY-EVI-D70
KTD-348	SONY-EVI-D100/P
LG MULTIX	TECHWIN
LILIN	VICON
PANASONIC_CS850	YOULI
PELCO-D	



# Appendix C

## Port forwarding information

A router is a device that lets you share your internet connection between multiple computers. Most routers will not allow incoming traffic to the device unless you have configured them to forward the necessary ports to that device. By default our software and devices (DVRs and NVRs) require the following ports to be forwarded:

**Note:** Port forwarding may reduce the security of the computers on your network. Please contact your network administrator or a qualified network technician for further information.

**Table 21: Description of the ports**

Port	Port name	Description
80	HTTP protocol	Used to connect via IE browser.
8000	Client Software Port	Used to connect to video streams.
554	RTSP Port	Real time streaming protocol. Used to record video remotely.
1024	RTSP Port for 3G/4G	Use with mobile apps. Used for 3G/4G connection.

**Note:** It is recommended that the RTSP port 1024 should only be used when experiencing connection issues over a 3G/4G connection.

**For example:** If the client port is changed to 9000 then the +200 port will be 9200. Using the default client port 8000 then the +200 port will be 8200.

### Seeking further assistance

Third-party assistance on configuring popular routers can be found at:

<http://www.portforward.com/>

<http://canyouseeme.org/>

<http://yougetsignal.com>

**Note:** These links are not affiliated with nor supported by Interlogix technical support.

Many router manufacturers also offer guides on their websites as well as including documentation with the product.

On most routers the brand and model number is located on or near the serial number sticker on the bottom of the device.

If you cannot find any information for your particular router, please contact your router manufacturer or internet service provider for further assistance.



# Appendix D

## KTD-405 keypad

### Supported firmware

TVN 21XX-YYY firmware	1.i or higher
KTD-405U (-2DU) keypad firmware:	1.4.00

**Note:** XX represents the number of video channels

YYY represents the recorder storage configuration such as 1T = 1 TB, etc.


### Wiring the keypad

Connect the RS-485 bus of the KTD-405 I/O box to the TVN 21(P) Keyb A/B terminal port.

**Table 22: Keypad and recorder connections**

KTD-405 I/O box	TVN 21(P) connection
RS-485 A	Keyb A
RS-485 B	Keyb B

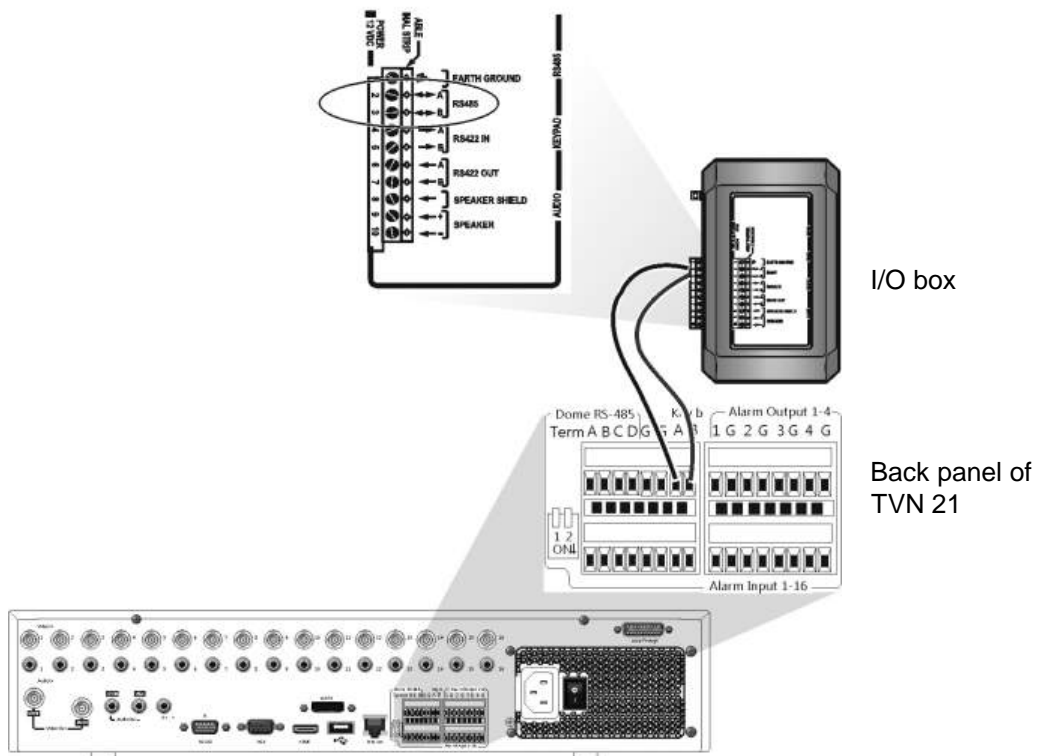Figure 41: Keypad and recorder connections




## Setting up the keypad to work with the recorder

The keypad must be in zone mode to connect correctly with the recorder.


Further information on connecting and programming the KTD-405 keypad can be found in the user manual.

### To set the keypad in zone mode:

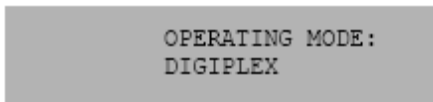1. Log into the keypad using the Admin password. Hold down the Enter button (↵) until a beep sounds and then enter the following code: **1 4 7 6**. Push the **seq** button to confirm.
2. Scroll through the menus with the **▶** button until this menu appears:



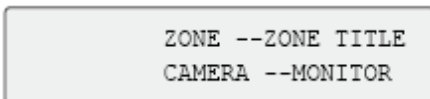3. Change *Operating Mode* to *Zone* by moving the joystick down.
4. Quit the menu by pressing the **seq** button. The display will show, for example:



5. To connect it to the recorder, press the **zone** button and enter the ID number of the recorder. The default value is “1”.
6. To configure the recorder zone ID number, at the recorder enter the Monitor screen by selecting **Display Mode Settings** in the main menu and select **Monitor**. Under Zone ID, enter the zone ID value. The default value is “1”.

**Note:** The zone ID value must be identical for the recorder and keypad.

The recorder is now connected to the KTD-405 keypad.

## TVN 21(P) and keypad functions

The KTD-405U acts as a recorder control keypad when connected to the recorder. The keypad mimics many of the functions available from the front panel of the recorder.

### Unavailable TVN 21 functions

The following recorder functions are unavailable when using the keypad to control the recorder:


- Export video
- Shadow tour
- Select motion detection or tampering zones
- Archive records
- Capture video


If these functions are required, it is recommended to use a mouse in conjunction with the keypad as all recorder functions will then be available.

### Unavailable keypad functions

The following keypad buttons are unavailable when using the keypad to control the recorder:

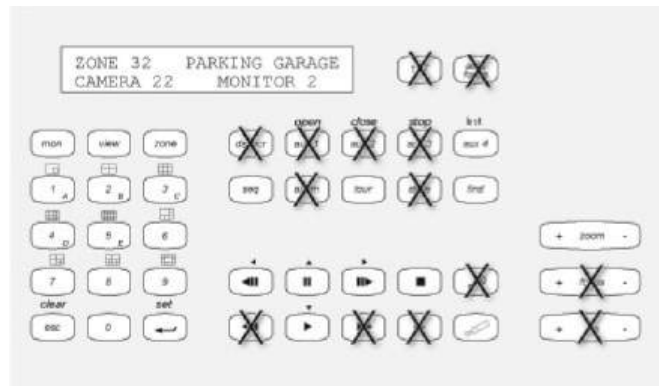**Figure 42: Unavailable keypad buttons**











DSC/VCR	Autofocus	● (Record mode)
Aux 1	Alarm	Store
Aux 2	Iris +/-	▶▶ Fast forward
Aux 3	Focus +/-	◀◀ Fast backward
Aux 4	 (Magnification)	
Ist		


## Operating the keypad

You can navigate the recorder menus using the keypad buttons and joystick. However, not all maneuvers are available using the joystick.





See Table 23 on page 151 for the description of the recorder keypad mapping when using the KTD-405 keypad series. See Figure 42 above for a list of the keypad functions that are unavailable when connected to the recorder.

### Example 1: To enter your password in the login screen using the keypad

1. In live view mode, press **esc** to activate the Login screen.
2. Press and hold **esc** and then press the arrow buttons ( down,  up,  left,  right) to move the cursor to the Password edit box. Once in the password box, release **esc**.
3. Press **Enter** () to activate the soft keyboard.
4. Press and hold **esc** and then press the arrow buttons to reach the first digit of the password. Release **esc** and press **Enter** () to select the digit.  
Or move the joystick to the first digit of the password and press Enter (.
5. Repeat steps 2 to 4 for each digit of the password.
6. Move the cursor to the Enter button on the soft keyboard and press Enter () on the KTD-405 keypad to quit the soft keyboard.
7. Press and hold **esc** and then press the arrow buttons to navigate the cursor to activate OK button on the Login screen.

8. Press . The main menu appears.









 
### Example 2: To modify a menu option using the keypad






1. In the main menu press and hold **esc** and then press the arrow buttons to navigate to the desired menu icon (for example, Display Mode Settings).
2. Press **esc** and  to go to setup menu.
3. Press **Zoom +** or **Zoom -** to scroll to the menu tab, **More Settings**.
4. When in the desired menu screen, press and hold **esc** and then press the arrow buttons to navigate the cursor to the option, **Menu Timeout**.
5. Press  to activate the dropdown menu.
6. Press and hold **esc** and then press the up/down arrow buttons to navigate to the desired option.
7. Press  to select the option.
8. Press and hold **esc** and then press the up/down arrow buttons to navigate to **Apply**. Press  to select it. Then navigate to **Back** to return to live view.

Instead of the arrow buttons, you can also use the joystick on the keyboard.

### TVN 21(P) mapping to the KTD-405 keypad

Table 23: TVN 21(P) mapping to the KTD-405 keypad

Task	Keypad action	Further information
• Menu mode		
Call up or exit menu	In live view, press <b>esc</b> .	To exit the menu: go to the Power Manager menu and select Logout.
Move through the menus	Press and hold <b>esc</b> and then press the arrow buttons or use the joystick.	 <b>Down</b> ,  <b>Up</b> ,  <b>Left</b> ,  <b>Right</b>
Move between menu tabs	Press <b>Zoom +</b> or <b>Zoom -</b> to switch between menu tabs.	
Navigate to a menu option	Press and hold <b>esc</b> and then press the arrow buttons.	 <b>Down</b> ,  <b>Up</b> ,  <b>Left</b> ,  <b>Right</b>
Select a character or menu option	Press <b>Enter</b> (  .	<b>Note.</b> If you press <b>esc</b> before pressing <b>Enter</b> , you quit the menu without saving any changes. It is the same as cancel.
Select the zone ID	Press <b>zone</b> to connect the keypad to the recorder and enter the Zone ID.	

Task	Keypad action	Further information
<b>• Live view mode</b>		
Call up a single camera	Press <b>0</b> to <b>9</b> and then press <b>Enter</b> (↵).	Using the numeric buttons <b>0</b> to <b>9</b> , enter the number of the camera and then press <b>Enter</b> (↵).
Call up multiview screens	Press <b>view</b> and then press button <b>5</b> to scroll through the next available multiview screen.	
Sequence through cameras	Press the <b>seq</b> button to scroll through the cameras in full screen.	
Switch to next/previous camera	Move the joystick to the right (= next camera), or the left (= previous camera)	
Switch between monitor A and monitor B	Press the <b>mon</b> button and button <b>1</b> to switch to monitor A. Press the <b>mon</b> button and button <b>2</b> to switch to monitor B.	
Manually acknowledge an alarm	Press <b>Alarm</b> .	
<b>• PTZ functions</b>		
Enter PTZ mode	In live view mode, press <b>Enter</b> (↵).	It is possible that you first need to login before you can access the PTZ mode.
PTZ functions (Up, Down, Left, Right, Zoom in, Zoom out)	Move the joystick to move the dome up, down, left and right  Press <b>zoom+</b> and <b>zoom-</b> .	<b>KTD-405U:</b> Turn the knob on the joystick to zoom in/zoom out. <b>KTD-405-2DU:</b> Press the <b>zoom+</b> and <b>zoom-</b> buttons.
Call-up presets	Press Find + preset number.	Store presets via the configuration menu on the webpage of the IP dome
Call-up a preset tour	Press Tour + tour number	Store preset tours via the configuration menu on the webpage of the IP dome
Leave PTZ mode	Press <b>esc</b> .	
<b>• Playback functions</b>		
Search for recorded video	Press  .	Once password is entered, the <b>Advanced Search</b> menu appears.
All-day playback	Press  when in full screen.	All-day playback of the currently selected camera.
Stop playback	Press  to stop playback and return to live view mode.	
Pause playback	Press  to pause playback. Press  to restart.	

Task	Keypad action	Further information
Select one of the files in the search result screen	Press enter (↵) and move with the joystick to the desired file. Press ▶ to start playback.	
Change playback speed	Press and hold <b>esc</b> and then press the left/right arrow buttons or move the joystick to the left/right.	
Jump 30 seconds forwards or backwards during playback	Press and hold <b>esc</b> and then press the up/down arrow buttons or move the joystick up/down.	

## Controlling a camera

When setting up and controlling your cameras in zone mode, refer to Table 24 below for the list of default PTZ addresses associated with a zone ID. This value is automatically populated in the system. You can modify the PTZ address in the PTZ menu to meet customer requirements.

**Table 24: Default PTZ camera addresses by zone ID**

Camera input	Zone ID of TVN 21(P)															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
1	0	32	64	96	128	160	192	224	256	288	320	352	384	416	448	480
2	1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481
3	2	34	66	98	130	162	194	226	258	290	322	354	386	418	450	482
4	3	35	67	99	131	163	195	227	259	291	323	355	387	419	451	483
5	4	36	68	100	132	164	196	228	260	292	324	356	388	420	452	484
6	5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485
7	6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486
8	7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487
9	8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488
10	9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489
11	10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490
12	11	43	75	107	139	171	203	235	267	299	331	363	395	427	459	491
13	12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492
14	13	45	77	109	141	173	205	237	269	301	333	365	397	429	461	493
15	14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494
16	15	447	79	111	143	175	207	239	271	303	335	367	399	431	463	495
17	16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496
18	17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497

: KTD-405 keypad

Camera input	Zone ID of TVN 21(P)															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
19	18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498
20	19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499
21	20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500
22	21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501
23	22	54	86	118	150	182	214	246	278	310	342	374	406	438	470	502
24	23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503
25	24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504
26	25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505
27	26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506
28	27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507
29	28	60	92	124	156	188	220	252	284	316	348	380	412	444	476	508
30	29	61	93	125	157	189	221	253	285	317	349	381	413	445	477	509
31	30	62	94	126	158	190	222	254	286	318	350	382	414	446	478	510
32	31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511



# Appendix E

## Maximum pre-recording times

The maximum pre-recording time that can be selected depends on the bit rate. Frame rate, resolution and image quality do not impact time.

**Note:** This information only applies when the bit rate is set to Constant (see “Configuring recording settings” on page 83 for more information).

Constant bit rate	Maximum pre-recording time (seconds)
32	30
48	30
64	30
80	30
96	30
128	30
160	30
192	30
224	30
256	30
320	30
384	30
448	30
512	30
640	30
768	30
896	30
1024	30
1280	25
1536	20

Appendix E: Maximum pre-recording times

<b>Constant bit rate</b>	<b>Maximum pre-recording time (seconds)</b>
1792	15
2048	15
3072	10
4096	5

# Appendix F

## Supported PTZ commands

**Table 25: Supported PTZ commands by camera protocols (Part 1)**

Protocol	PTZ command												
	Tilt up	Tilt down	Pan left	Pan right	Left up	Left down	Right up	Right down	Auto pan	Zoom +	Zoom -	Focus +	Focus -
Interlogix-485	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
Interlogix-422	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
GE-RS485-ASCII	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
KALATEL	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
DSCP	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
HIKVISION	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y
Honeywell	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
INFINOVA	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
KTD-348	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
LG MULTIX	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
LILIN	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
PANASONIC_CS850	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
PELCO-D	Y	Y	Y	Y	Y*	Y*	Y*	Y*	Y	Y	Y	Y	Y
PELCO-P	Y	Y	Y	Y	Y*	Y*	Y*	Y*	Y	Y	Y	Y	Y
PHILIPS	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
PHILIPS-3	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
SAE	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
Samsung	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
Siemens	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
SONY-EVI-D30/31	Y	Y	Y	Y	N	N	N	N	N	N	N	N	N
SONY-EVI-D70	Y	Y	Y	Y	N	N	N	N	N	N	N	N	N
SONY-EVI-D100/P	Y	Y	Y	Y	N	N	N	N	N	N	N	N	N
TECHWIN	Y	Y	Y	Y	N	N	N	N	N	N	N	N	N

Protocol	PTZ command												
	Tilt up	Tilt down	Pan left	Pan right	Left up	Left down	Right up	Right down	Auto pan	Zoom +	Zoom -	Focus +	Focus -
VICON	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y
YOULI	Y	Y	Y	Y	N	N	N	N	N	Y	Y	Y	Y

\*: Hikvision only.

**Table 26: Supported PTZ commands by camera protocols (Part 2)**

Protocol	PTZ command										
	Iris+	Iris-	Light	Wiper	Zoom area	Center	Menu	Preset	Tour	Shadow tour	
Interlogix-485	Y	Y	N	N	N	N	N	Y	N	Y	
Interlogix-422	Y	Y	N	N	N	N	N	Y	N	Y	
KALATEL	Y	Y	N	N	N	N	N	Y	N	Y	
GE-RS485-ASCII	Y	Y	N	N	N	N	N	Y	N	Y	
DSCP	Y	Y	N	N	N	N	N	Y	N	Y	
HIKVISION	Y	Y	N	N	Y	Y	Y	Y	Y	Y	
Honeywell	Y	Y	N	N	N	N	N	N	N	N	
INFINOVA	Y	Y	N	N	N	N	N	Y	N	Y	
KTD-348	Y	Y	N	N	N	N	N	Y	N	Y	
LG MULTIX	Y	Y	N	N	N	N	N	Y	Y	Y	
LILIN	Y	Y	N	N	N	N	N	N	N	N	
PANASONIC_CS850	Y	Y	N	N	N	N	N	Y	N	Y	
PELCO-D	Y	Y	Y**	Y#	N	N	N	Y	Y	Y	
PELCO-P	Y	Y	N	N	N	N	N	Y	Y	Y	
PHILIPS	Y	Y	N	N	N	N	N	N	N	N	
PHILIPS-3	Y	Y	N	N	N	N	N	N	N	N	
SAE	Y	Y	N	N	N	N	N	Y	Y	Y	
Samsung	Y	Y	N	N	N	N	N	Y	N	Y	
Siemens	Y	Y	N	N	N	N	N	Y	N	Y	
SONY-EVI-D30/31	N	N	N	N	N	N	N	N	N	N	
SONY-EVI-D70	N	N	N	N	N	N	N	N	N	N	
SONY-EVI-D100/P	N	N	N	N	N	N	N	N	N	N	
TECHWIN	Y	Y	N	N	N	N	N	Y	N	N	
VICON	Y	Y	N	N	N	N	N	N	N	N	
YOULI	Y	Y	N	N	N	N	N	Y	N	N	

\*\* : Aux. 2

# : Aux. 1

# Appendix G

## Default menu settings

<b>Display Mode Setting</b>	
Monitor	
General	
	Language: English
	Device Name: TVN 21/TVN 21P/TVN 21S (depends on model)
	Device Address: 255
	Zone ID: 1
	VGA Resolution: 1280*1024/60HZ
	HDMI Resolution : 1280*720/60HZ
	Password Required : Yes
	Enable Wizard: Yes
	Display Status Icons: Yes
More Settings	
	Monitor Standard: NTSC/PAL. Auto detect at booting.
	Output Mode: Standard
	Monitor Brightness: 5
	Event Hint: Yes
	Time Bar Transparent: Yes
	Enable Time Bar: Yes
	Time Bar Size: Large
	Menu Timeout: 5 min
	Mouse Pointer Speed: Lower
	Instant Playback Time: 5 min
	Enable Logout Lock: No
	Disconnect Network Disconnect Alarm: No

<b>Layout</b>	
General	
	Video Output Interface: VGA
	Window Segmentation: 3*3 for 8-channel model; 4*4 for 16 or 32-channel model
	Dwell Time: No switch
	Enable Audio Output: No
	Event Output: HDMI
	Event Full Screen Monitoring Dwell Time: 10 s
	Alarm Full Screen Monitoring Dwell Time: 10 s
View	
	Video Output Interface: VGA
	16 Chan: 4*4 -A1 to A16
	8 Chan: 3*3 - A1 to A8 +1Black Screen
<b>Time</b>	
Time Setting	
	Time Zone: GMT -8
	Date Format: MM-DD-YYYY
	Time Format: 12-hour
	Display Week: No
	System Date: Current System Date
	System Time: Current System Time
	Auto DST Adjustment: No
	Enable DST: No
	From: Apr 1st Sun 2:00
	To: Oct last Sun 2:00
	DST Bias: 60 min
<b>Holiday</b>	
Holiday Setting	
	Status: All Disabled; Start Date: 1st. Jan; End Date: 1st Jan
<b>Camera Management</b>	
Camera	
IP Camera	
	IP Camera No.: IP Camera 1
	IP Camera Address/Domain: (Null)
	Protocol: TruVision
	Management Port: 8000
	TransMode: RTP over RTSP

	Channel No.: 1
	User Name: admin
	Admin Password: (Null)
	Added IP Cameras: (Null)
	<b>PoE Setup</b>
	Auto PoE Adjustment: No
<b>OSD</b>	
	<b>OSD Settings</b>
	IP Camera: Camera All
	IP Camera Name: IPCamera 01
	Display Name: Yes
	Display Date: Yes
	Display Week: Yes
	Date Format: MM-DD-YYYY
	Time Format: 24-hour or 12-hour AM/PM
	Display Mode: Not transparent & Not Flashing
<b>Image</b>	
	<b>Image Settings</b>
	Camera: Camera All
	Mode: Customize
	Brightness: (Null)
	Contrast: (Null)
	Saturation: (Null)
<b>Motion</b>	
	<b>Motion Detection Settings</b>
	Camera: All
	Enable Motion Detection: No
	Rule: Trigger Channel [camera-self]; Arming Schedule: All day for whole week; Rule: (Null)
	Sensitivity: Sensitivity 1
	Zone: (Null)
<b>Privacy Mask</b>	
	<b>Privacy Mask Settings</b>
	IP Camera: All
	Enable Privacy Mask: No
	Zone: (Null)

Tamper-proof	
	Tamper-proof Setting
	IP Camera: All
	Enable Tamper Proof: No
	Rule: Arming schedule all day for whole week; Rule: (Null)
	Sensitivity: Low
	Zone: (Null)
Video Loss	
	Video Loss Settings
	IP Camera: All
	Enable Video Loss Alarm: No
	Rule: Arming schedule all day for whole week; Rule: (Null)
Covert Camera	
	Covert Camera Settings
	IP Camera: No
VCA	
<b>Video Schedule</b>	
	Schedule
	Record
	IP Camera: All
	Enable Schedule: Yes
	Schedule: All day for whole week TL-Hi
Encoding	
	Record
	IP Camera: All
	Encoding Parameters: ->
	Stream Type ->
	Resolution ->
	Bitrate Type ->
	Video Quality ->
	Frame Rate ->
	Max. Bit Rate Mode ->
	Max. Bit Rate (Kbps) ->
	Pre-record: 5 s
	Post-record: 5 s
	Auto Delete (day): 0
	Record Audio: Yes



Capture	
	IP Camera: All
	Resolution: 4 CIF
	Image Quality: Medium
Auto Archive	
Archive Settings	
	Enable Auto Archive: No
	Start Time: Current Day, Current Time
	End Time: Current Day, 23:59:59
	Interval: 1 hour
	Archive File: (Camera; Picture; Video Type)
	Device Full Rule: Stop Archiving
	Device Type: Local Device
	Device Select:
Archive Status	
	Current Status: (Null)
	Last Archive Time: (Null)
	Last Archive Status: (Null)
	Next Archive Time: (Null)
	Archive Device Name: (Null)
	Free Space in Storage Device: (Null)
Manual Record	
Manual Record Settings	
	Off: All
Hot Spare	
General	
	Work Mode: Normal Mode
	Enable: No
	IPv4 Address of the Server: (Null)
	Password of the Server: (Null)
	Working Status: (Null)
More Settings	
More Settings	
	Event Priority: Text In < Motion
	Overwrite: Yes
	eSATA: Record/Capture

Networking Settings	
General	
	General
	Working Mode: Net Fault Tolerance
	Select NIC: bond0
	NIC Type: 10M/100M/1000M Self-adaptive
	Enable DHCP: No
	IPv4 Address: 192.168.1.82
	IPv4 Subnet Mask: 255.255.255.0
	IPv4 Default Gateway: 192.168.1.1
	IPv6 Address1: (It depends)
	IPv6 Address2: (Null)
	IPv6 Default Gateway: (Null)
	MAC Address: (It depends)
	MTU (bytes): 1500
	Preferred DNS Server: (Null)
	Alternate DNS Server: (Null)
	Main NIC: LAN1
	Internal NIC IPv4 Address: 192.168.254.1
PPPoE	
	PPPoE
	Enable PPPoE: No
	User Name: (Null)
	Password: (Null)
	Confirm: (Null)
DDNS	
	DDNS
	DDNS: No
	DDNS Type: ezDDNS
	Server Address: www.tvr-ddns.net
	Host Name: (Null)
NTP	
	NTP
	Enable NTP: No
	Interval (min): 60
	NTP Server: time.nist.gov
	NTP Port:123

Email	
Email	Enable Server Authentication: No
	User Name: (Null)
	Password: (Null)
	SMTP Server: (Null)
	SMTP Port: 25
	Enable SSL: No
	Sender: (Null)
	Sender's Address: (Null)
	Select Receiver: Receiver 1
	Receiver: (Null)
	Receiver's Address: (Null)
	Enable Attached Picture: No
	Interval: 2 s
FTP	
FTP	Enable FTP: No
	FTP Server: (Null)
	FTP Port: 21
	User Name: (Null)
	Password: (Null)
	Directory: Use root directory
	Parent Directory: Use Device Name
	Secondary Directory: Use Camera Name
	SNMP
SNMP	Enable SNMP: No
	SNMP Version: V2
	SNMP Port: 161
	Read Community: Public
	Write Community: Private
	Trap Address: (Null)
	Trap Port: 162
UPnP	
UPnP	Enable UPnP: No
	Mapped Type: Auto
	Port Type: HTTP port; Server port; RTSP port

<b>More Settings</b>	
More settings	
	Alarm Host 1 IP: (Null)
	Alarm Host 1 Port: 5001
	Alarm Host 2 IP: (Null)
	Alarm Host 2 Port: 5002
	Alarm Host 3 IP: (Null)
	Alarm Host 3 Port: 5003
	Server Port: 8000
	HTTP Port: 80
	Multicast IP: (Null)
	RTSP Server Port: 554
	Enable Telnet: No
	Bridge PoE Camera Network: Yes
<b>Alarm Settings</b>	
Alarm List	
Alarm Inputs	
	(A<-1 to A<-16)
Alarm Outputs	
	(A->1 to A->4)
Alarm Input	
Alarm Input	
	Alarm Input no.: All
	Alarm Name: (Null)
	Type: NO
	Enable Alarm Input Setting: No
	Rule: Trigger Channel: No; Arming schedule: All day for whole week; Rule: (Null); PTZ linking: (Null)
Alarm Output	
Alarm Output	
	Alarm Output no.: All
	Alarm Name: (Null)
	Time Out: 5 s
	Rule: All day for whole week
Manual Alarm	
	Trigger none

<b>Alarm Audio</b>	
Alarm Audio	
	File No.: 5
	File Name: 1.mp4, 2.mp4, 3.mp4, 4.mp4, 5.mp4
	Size: 8KB, 6KB, 7, KB, 10KB, 5KB
	Play: (Null)
	Edit: (Null)
	Delete: (Null)
Audio Output	
	Audio Output: HDMI
<b>Notification</b>	
Notification	
	Notification Type: HDD Full
	Audible Warning: No
	Notify Surveillance Center: No
	Send E-mail: No
	Trigger Alarm Output: No
<b>Advanced Settings</b>	
Advanced Settings	
	System Buzzer Time: Constant
	Camera Buzzer Time: Constant
<b>PTZ Settings</b>	
General	
	Camera: (Null)
	Baud Rate: (Null)
	Data Bit: (Null)
	Stop Bit: (Null)
	Parity: (Null)
	Flow Ctrl: (Null)
	PTZ Protocol: Interlogix-485
	Address: 0
More Settings	
	(Null)
<b>User Settings</b>	
User	
User Management	
	admin:1234
	operator: 4321

	guest: (Null)
Change Password	(Null)
<b>System Settings</b>	
RS-232	RS-232 Settings
	Baud Rate: 115200
	Date Bit: 8
	Stop Bit: 1
	Parity: None
	Flow Ctrl: None
	Usage: ProBridge
Hard Disk	HDD Information: (Null)
	Storage Mode
	Mode: Quota
	IP Camera: All
	Used Record Capacity:
	Used Picture Capacity:
	HDD Capacity (GB):
	Max Record Capacity (GB):
	Max Picture Capacity (GB):
	S.M.A.R.T.
	Use When Disk Has Failed to Self-activate: No
	HDD No.:
	Capacity:
	Model:
	Serial No.:
	Temperature:
	Power Up:
	Self-evaluation:
	All-evaluation:
	S.M.A.R.T. Information:
	Bad Sector Detection
	HDD No.:
	HDD Capacity:
	Block Capacity:
	Status:

	Error Count:
Text Insertion	
	Text Insertion
	Enable Text Insertion: No
	Access Device: ATM/POS
	Access Mode: Probridge
	Start String: (Null)
Upgrade	
	Local Upgrade: (Null)
	FTP: (Null)
Configuration	
	Import/Export Config File: (Null)
	Default : (Null)
Log Search	
	Log Search
	Current whole day, all types
System Information	
	Device Information:
	Camera
	Record:
	Alarm:
	Network:
	HDD:
Net Detect	
	Traffic:
	Network Detection:
	Network Delay, Packet Loss Test
	Select NIC: bond0
	Destination Address: (Null)
	Network Packet Export
	Device Name: (Null)
	Net Stat
	IP Camera: (Null)
	Remote Live View: (Null)
	Remote Playback: (Null)
	Net Receive Idle: (Null)
	Net Send Idle: (Null)
	Send Bandwidth Limit: 20Mbps/160Mbps





# Index

## A

- Active X, 69
- Alarm audio messages, 96
- Alarm notifications
  - alarm audio messages, 96
  - external alarms, 101
  - modifying the warning buzzer, 97
  - types, 95
  - video loss, 103
  - video tampering, 104
- Alarm outputs
  - manually acknowledging, 103
- Archiving
  - exporting files to a backup device, 64
  - quick archive, 63
  - schedule automatic archiving, 66
  - snapshots, 67
  - video clips, 67
- Audio
  - connecting audio inputs and outputs, 9
  - enable/disable audio output, 34
- Auto archive, 66

## B

- Back panel description, 4
- Backup devices
  - managing, 68
- Bad sector detection, 119
- Bookmarks
  - playback, 59
  - saving, 59
  - types, 59
- Bridge PoE, 125
- Brightness, contrast and saturation
  - modifying, 127

## C

- Camera
  - adding/deleting, 121
- Cameras
  - privacy masking, 126
  - setting up sequencing, 37
- Covert cameras, 128

## D

- Daily schedules
  - recording, 86
- Date
  - configuring display, 40
- DDNS settings, 107
- Default menu settings, 159
- Default settings
  - restore, 131
- Digital zoom
  - description, 35
  - quick access, 34, 53
  - web browser, 77
- Digital zoom in playback, 62
- DST
  - set up, 40
- Dual streaming
  - recording, 78

## E

- E-mail notifications
  - set up, 109
- eSATA, 118
- Event logs
  - searching remotely, 77
- Export configuration settings, 131
- Export files, 68
- External alarm
  - setting up to record when triggered, 101
- External alarm schedules
  - recording, 89

## F

- Factory default settings
  - restore, 131
- Failover, 92
- Firmware
  - updating, 130
- Frame-by-frame playback, 61
- Freeze live view, 34
- Front panel
  - button functions by task, 20
  - description, 18
- FTP server settings, 111

Full screen viewing, 33

## H

### HDD

- checking status, 117
- grouping, 116
- initializing, 115
- properties, 117
- redundancy, 91
- set to read only, 91
- setting up HDD alarms, 118

Holiday schedules

- recording, 87

Hot spare, 92

HTTP port settings, 112

## I

Import configuration settings, 131

Instant playback, 54

## K

Keypad

- connecting to RS-485 port, 8
- wiring to the recorder, 6

KTD-405 keypad

- accessing recorder functions, 150
- controlling a camera, 153
- firmware supported, 147
- set up in zone mode, 148
- set up TVR 41 device address, 148
- wiring, 147

## L

Language

- change GUI language, 38

Live view mode

- digital zoom, 35
- full screen view, 33
- monitor output, 30
- multiview, 33
- sequencing cameras, 33
- switch monitors, 30
- time and date display, 40

Lock/unlock recorded files, 89

Login password, 38

Logs

- view system log, 133

## M

Main menu

- accessing, 26
- description, 26
- icon descriptions, 26

Manual recording, 88

Menu timeout

- change time, 38

Monitors

- change output mode, 38
- connecting, 9
- output, 30
- priority level, 30
- switch monitors, 30

Motion detection, 97

- defining motion detection area, 97
- setting the sensitivity level, 97
- setting the target size, 97

Motion search toolbar

- quick access, 53

Mouse pointer speed

- change, 38

Mouse pop-up menu, 31

Multicast settings, 111

Multiview, 33

## N

NAS, 82

Network packet data

- exporting, 113

Network settings

- general set up, 105

Network status, 112

Network storage system

- set up, 82

Network traffic

- checking, 112

Notifications

- alarm types, 95
- external alarms, 101
- system event types, 100

NTP server settings, 108

## O

OSD settings, 125

Overwriting

- protecting recorded files, 89

## P

Password

- changing user password, 138
- default user passwords, 135
- enable/disable login password, 38

Playback

- bookmarks, 59
- changing playback speed, 61
- instant playback, 54
- interface overview, 51
- monitor output, 30
- pictures, 60
- playing back archived files, 68
- pop-up menu description, 53
- search by event, 58
- search by time, 57
- search by video type, 57

- search results, 56
    - skip time, 56
    - snapshots, 60
    - system log, 61
    - using digital zoom, 62
    - using the web browser, 76
  - Playback control panel
    - description, 52
  - Playback control toolbar
    - quick access, 53
  - Player
    - show watermarking, 128
    - using for playback, 68
  - PoE
    - access camera via the browser, 125
    - automatically allocating power, 124
    - power consumption, 123
  - Power up and down recorder, 11
  - PPPoE settings, 107
  - Pre-recording times
    - maximum times, 155
  - Preset tour
    - calling up, 48
  - Preset tours
    - quick access, 44
  - Presets
    - calling up, 46
    - quick access, 44
    - selecting, setting up and deleting, 45
  - Privacy masking, 126
  - Protecting recorded files, 89
  - PTZ control panel
    - description, 44
  - PTZ dome cameras
    - connecting to RS-485 port, 8
    - controlling remotely, 79
  - PTZ linking, 101
  - PTZ protocols, 143
    - PTZ commands supported, 157
- Q**
- Quick access toolbar, 34
  - Quick snapshot, 34
  - Quick snapshots, 34
- R**
- Recorded files
    - lock/unlock, 89
    - Protect HDD, 91
  - Recorder, 38
  - Recorder address
    - change, 38
  - Recording
    - browser, 78
    - configuring settings, 83
    - protecting against overwriting, 89
    - recording schedules, 85
    - setting up HDD redundancy, 91
  - Recording schedules
    - daily, 86, 87
    - defining, 85
    - external alarms, 89
  - Remote alarm host settings, 111
  - Remote control
    - connect to the recorder, 25
    - description, 23
  - Resolution
    - change monitor resolution setup, 38
  - RS-232 port
    - configuring, 129
  - RTSP service port, 112
- S**
- S.M.A.R.T. information on a HDD, 118
  - SAN, 82
  - Sequencing cameras, 33, 37
  - Setup wizard
    - using, 12
  - Shadow tours
    - quick access, 44
    - setting up, 48
  - Skip time
    - playback, 56
    - quick access, 53
  - Snapshots
    - archiving, 67
    - capture remotely, 76
    - playback, 60
    - quick snapshots, 34
    - upload to FTP server, 111
  - SNMP protocol settings, 109
  - Soft keyboard, 28
  - Status icons
    - description, 29
    - display, 38
    - enable/disable display, 38
  - System information
    - view, 131
  - System logs
    - playback, 61
    - view, 133
  - System notifications
    - event types, 100
- T**
- Text insertion
    - quick access to display, 53
    - search recorded video, 80
    - set up, 80
    - via local interface, 92
  - Text overlay
    - browser, 82
  - Time
    - configuring display, 40

## U

UPnP settings, 110

User privileges

- camera configuration, 137

- descriptions, 136

- local configuration, 136

- remote configuration, 137

Users

- adding a new user, 135

- customizing user privileges, 136

- deleting a user, 138

- managing, 135

- modifying user information, 138

- user levels, 135

## V

VCA, 100

Video format

- PAL/NTSC, 11

Video loss

- setting up detection, 103

Video output

- change manually, 38

Video tampering

- setting up to detect, 104

View system log, 133

## W

Warning buzzer

- modifying, 97

Watermarking, 128

Web browser

- accessing, 70

- digital zoom, 77

- installing Active X, 69

- local configuration of recorder, 72

- remote configuration of recorder, 72

- searching and playing back recorded video, 76

- searching for event logs, 77

- text insertion, 80

- text overlay, 82

- video snapshot, 76

Wizard

- enable/disable, 38