

ENFORCER[®]

**EV-1125-N3BQ (NTSC)
EV-1125-P3BQ (PAL)**

Mini Bullet Camera
Manual



- 1/3" Sony Super HAD II CCD
- 3.6mm lens
- 480 TV lines
- Weatherproof (IP66)
- 12VDC Operation
- Low current draw: 150mA

SECO-LARM SLI

FC CE RoHS

Note: Products with model numbers that end with "Q" or that have a round green "Q" sticker are RoHS compliant.


Specifications:

Model #	EV-1125-N3BQ	EV-1125-P3BQ
Type	Bullet Camera	
CCD	1/3" Sony Super HAD II Color CCD	
Resolution	480 TV lines	
Pickup elements	768 x 494 pixels	752 x 582 pixels
Video output format	NTSC	PAL
Video output	1.0Vp-p composite video, 75Ω	
Lens	3.6mm	
Minimum illumination	0.1 Lux	
S/N ratio	>48dB	
Sync	Internal	
White balance	Auto	
Gain control	Auto	
Back light compensation	Auto	
IP rating	IP66	
Power source	12VDC	
Current draw	150mA	
Operating temperature	14°~122° F (-10°~50° C)	
Dimensions	3 ¹⁵ / ₁₆ " x 1 ⁹ / ₁₆ " x 1 ⁹ / ₁₆ " (100 x 40 x 40mm) (without sunshield or mounting base)	
Weight	7.05-oz (200g)	


Parts List:

- | | | |
|----------------------|---------------|---------------------------------|
| 1 x Camera | 1 x Sunshield | 3 x Mounting screws |
| 1 x Mounting bracket | 1 x Manual | 1 x DC Plug with terminal block |

Dimensions:

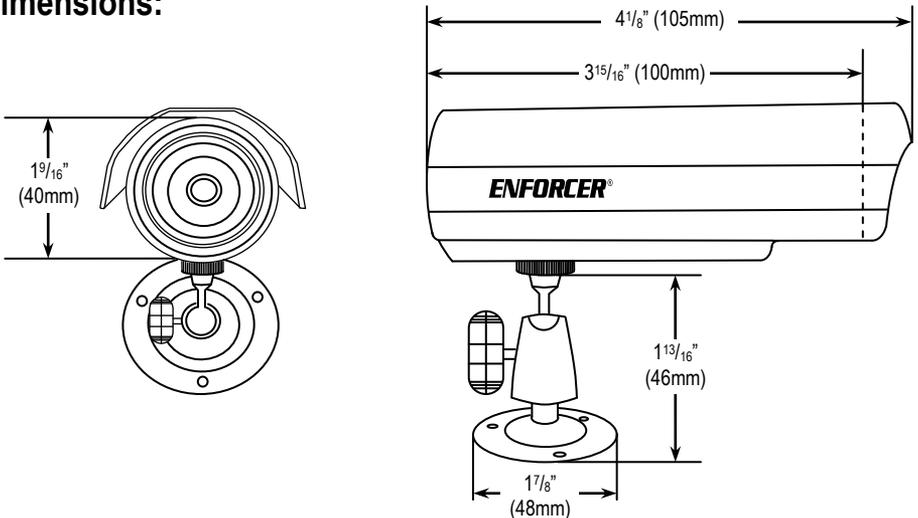


Overview:

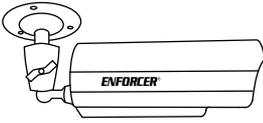

Alternate Mounting Method

Remove the base from the bottom by twisting the bracket screw. Attach the base to the back of the camera.

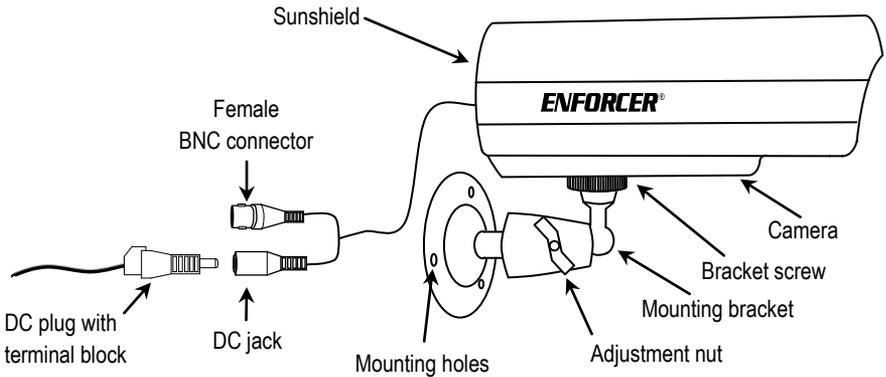

Important:

Do not cut DC jack or female BNC connector as warranty will be voided.

Before Starting:

1. Please read this manual carefully and keep it for future reference.
2. Use the camera within given temperature and electrical limits.
3. Do not mount the camera in areas exposed to radiation, strong magnetic fields, or strong electrical signals.
4. Do not point the camera at the sun. Heat could damage the camera, even when not in use.
5. Do not open or disassemble the camera. There are no field-serviceable parts inside.
6. Do not drop the camera or subject it to strong vibrations.

Installation:

1. Run a 12VDC power supply wire and a video cable with a male BNC connector through the wall to where the camera is to be mounted.
2. Temporarily connect the camera to the power supply. **Do not cut DC jack or female BNC connector as warranty will be voided. If needed, use the included SECO-LARM DC plug with terminal block.**
3. Connect the BNC connector to a test monitor.
4. While watching the monitor, hold the camera against the wall by hand where it is to be mounted, then turn the camera until it is certain that this mounting location is correct.
5. Use a pencil to mark the location of the three screw holes in the mounting plate.
6. Disconnect the power supply and video cable.
7. If alternate mounting is desired, remove the bracket by loosening the bracket screw. Attach the bracket to the back of the camera.
8. Mount the mounting plate to the wall using the three included mounting screws. If the wall is made of dry wall, brick, or similar material, it may be necessary to use screw anchors (not included).
9. Reconnect the power supply and video cable. Turn the monitor on and make sure the camera is sending the proper video signal.
10. Adjust the camera angle using the adjustment nut.
11. Do a final test of the video camera and monitor.

Troubleshooting

The screen is blank.	Check that the camera is powered up. Check that the power supply's polarity is correct. Check that the monitor is powered up. Check that the video cable connecting the camera to the monitor is connected properly.
The screen image is dim.	Clean the lens using a soft, clean cloth. Check that the light source is adequate.
The screen image has poor contrast.	Adjust the monitor's contrast knob. Change the position of the camera.
The screen image flickers.	Change the position of the camera.
The screen image is distorted.	Change the position of the camera.
The camera case is hot.	Check that the correct power supply is in use.

IMPORTANT

Users and installers of this product are responsible for ensuring this product complies with all national, state, and local laws and statutes related to monitoring and recording audio and video signals. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or statutes.

WARNING

Stop using the camera if you see a malfunction such as smoke or unusual heat, as it could cause fire or electric shock. Do not open the case of this device, as there are no field serviceable components inside.

FCC COMPLIANCE STATEMENT

Information to the user: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM.

This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship.

The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE

The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors.

Copyright © 2012 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606

Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326

Website: www.seco-larm.com

E-mail: sales@seco-larm.com

 PICSNS
MIEV-1125-N3B_1205.docx