




FCP-500 Series
Detector Color white



FCP-500 Series
Detector transparent
with Color Inserts



FAA-500-TR-W
Trim Ring white

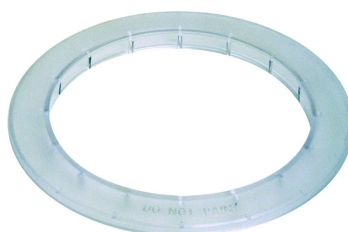

FAA-500-TR-P
Trim Ring transparent
with Color Inserts



FAA-500-BB
Ceiling Mount Back Box



FCA-500 / FCA-500-E
Detector Bases

Photoelectric Detector
Photoelectric Detector with Carbon Monoxide Detection



The CO sensor has not been evaluated to the requirements of UL 2075 or for its ability to detect a fire.

1. Specifications

Models:	Photoelectric Detector with Carbon Monoxide Detection:	
	FCP-500-C Color white	4.998.150.703
	FCP-500-C-P transparent with Color Inserts	4.998.150.705
	Photoelectric Detector only:	
	FCP-500 Color white	4.998.150.702
	FCP-500-P transparent with Color Inserts	4.998.150.704
Operating Voltage:	9.7 V DC to 30 V DC	
Current Consumption:	Standby	Alarm/Trouble
FCA-500 / FCA-500 with DRA-5	3 mA / 3 mA	47 mA / 52 mA
FCA-500-E / FCA-500-E with DRA-5	24 mA / 24 mA	47 mA / 58 mA
Alarm Output:	Alarm resistance 680 Ω or 0 Ω (US only)	
Remote LED Output:	maximum 20 mA	
Rating of trouble/alarm relay:	1 A @ 30 V DC	
Reset Time:	The detector resets if power is interrupted for at least 2 sec.	
Max. Start-up Time:	22 sec	
Sensitivity:	1.3 ...2.9 %/ft (4.3 ... 9.5 %/m)	
Mounting Locations:	Refer to NFPA-72 guidelines.	
Maximum Mounting Height:	Refer to NFPA-72 guidelines.	
Minimum Mounting Height:	9.0 ft (2,7 m)	
Maximum Thickness of False Ceiling:	1.25 in. (32 mm), flush mount applications only	
Minimum Clearance for False Ceiling:	6 in. (15.2 cm)	
Required Hole	5- ¹ / ₁₆ in., tolerance - ¹ / ₁₆ in. to + ³ / ₁₆ in. (130 mm, tolerance -1 mm to +5 mm)	
Minimum Distance from Lamps:	1.6 ft (0.5 m)	
Maximum Airflow:	300 ft/min (1.5 m/s)	
Operating Temperature:	+32 °F to +100 °F (0 °C to +38 °C)	
Humidity:	< 95% (non-condensing)	
Protection Category (IEC 60 529):		
FCA-500 and FCA-500-P:	IP 33	
FCA-500-E and FCA-500-E-P:	IP 53	
Dimensions:		
Detector only:	4.5 in. x 2.2 in. (113 mm x 55 mm)	
Detector with Trim Ring:	5.9 in. x 2.2 in. (150 mm x 55 mm)	
Detector with Trim Ring and Base:	5.9 in. x 2.75 in. (150 mm x 70 mm) with base	
Compliance:	UL 268	
Options:		
Included:	Ceiling Mount Back Box for US	
	FAA-500-BB-UL	F.01U.510.767
	Four-Wire Base	
	FCA-500	4.998.151.300
	Four-Wire EOL Base	
	FCA-500-E	4.998.151.301
	Trim Ring, white	
	FAA-500-TR-W	4.998.151.295
	Trim Ring, transparent with Color Inserts	
	FAA-500-TR-P	4.998.151.296
Optional:	Remote LED Annunciator	
	DRA-5	
	Test Adapter with Magnet	
	FAA-500-TTL	F.01U.508.725
	Removal Tool	
	FAA-500-RTL	F.01U.508.720



The CO sensor has not been evaluated to the requirements of UL 2075 or for its ability to detect a fire. The FCP-500-C and FCP-500-C-P detect CO as a component of a fire. Do not use the FCP-500-C and FCP-500-C-P as CO detectors.

2. Installation Considerations




For proper installation, read and understand NFPA-72, The National Fire Alarm Code before installation.

Caution:

- Do not remove the plastic film from the detector head until construction of the installation area is finished.
 - Protect the detector sensor windows from paint or contaminates. Remove the detector head during remodelling and store it in a clean dry location.
- ☞ If you do not follow these cautions, the detector might not operate.

Detector Location and Spacing:

- BOSCH recommends spacing the sensors in compliance with NFPA-72. In low air flow applications with smooth ceilings, space sensors with a maximum distance of 30 ft. For specific information regarding sensor spacing, placement and special application refer to NFPA-72.
- Not suitable for outdoor use.
- Do not install in areas where the detector is pointed at direct or indirect sunlight.
- Do not mount detector in a cone of light from a lamp.
- Maintain a hemispherical radius of at least 19 in. (50 cm) around the detector (see Fig. 1).
Insure that this area in front and to the sides of the detector is kept clear of all obstructions (see Fig. 1).

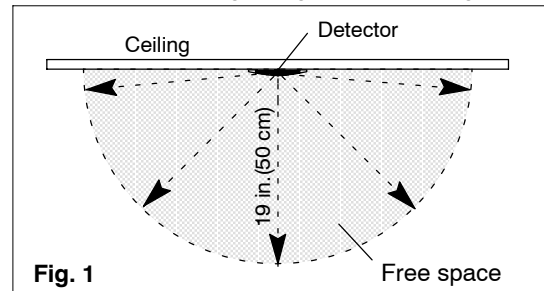

Further Considerations:

- Only use end-of-line (EOL) resistors supplied or specified by the control panel manufacturer.
- Smoke detectors are not to be used with detector guards unless the combination has been evaluated and found suitable for that purpose.
- This detector must be installed in compliance with the control panel system installation manual.
- Install, test and maintain this device according to this installation guide, NFPA-72, Local Codes and the Authority Having Jurisdiction (AHJ). Failure to follow these procedures may cause the device to not function properly. Bosch Security Systems is not responsible for any devices that are improperly installed, tested or maintained.



3. Installation

Dismantling Detector

1. Push on the center of the detector's front plate. The detector head springs out of the base.
2. Remove the detector head from the base.
3. Lift the trim ring by the edge to remove it from the base.
4. Loosen the four screws holding the base to the backbox.
5. Turn the base counter-clockwise until the screws line up with the large end of the slots. Remove the base from the back box.

Inserting Color Rings (FCP-500-C-P and FCP-500-P)

1. Select a color.
 2. From the selected color, insert the largest color ring in the trim ring.
 3. Remove the detector front plate:
Insert the enclosed small opener tool (2) into the slot (3) above the snap-fit (1) and secure it with your thumb. Grasp the edges of the detector front plate, push gently, turn counter-clockwise, and lift.
 4. From the selected color, insert the larger color ring in the outer ring, and the smaller color ring in the inner ring of the detector front plate (see Fig. 3).
 5. Replace the front plate cover. Ensure the tabs on the cover align with the grooves in the detector head. The cover will lie flat on the detector head.
 6. Turn the cover clockwise to lock it into place.
- Note:** If the cover aligns properly, all the sensor openings in the detector head are clearly exposed.

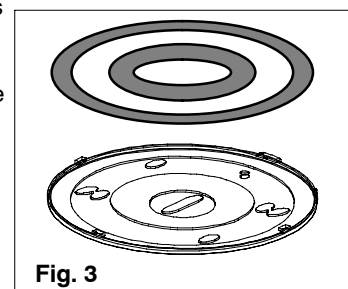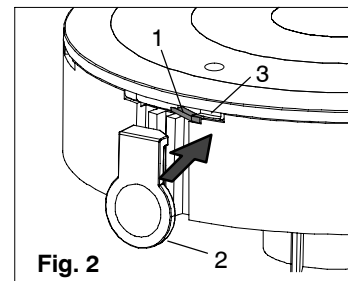

Ceiling Mount Back Box (FAA-500-BB-UL)

- For installation, refer to the FAA-500-BB-UL Installation Guide (P/N 601-F.01U.003.008).

Wiring the Base (FCA-500 and FCA-500-E)



In applications which require UL listed units, the power of all connections (detector power, trouble and alarm relay) must be taken from power limited supplies when the cable is carried through the grommets. Please check with the local authorities to insure mounting without the conduit connector is allowed.

Note:

- Do not twist or loop the wires around the terminals. The wires for terminal connection must be cut, stripped, and inserted as individual ends.
- Use the cable holders on the base for strain relief for the wires.
- EOL resistor:** For the last base on the stub line (FCA-500-E), place the EOL resistor between the two screw clamps (see Fig. 4).
- Alarm resistor:** If necessary, change the alarm contact resistance from 0 Ω to 680 Ω by breaking off the printed circuit board tongue (see Fig. 4).

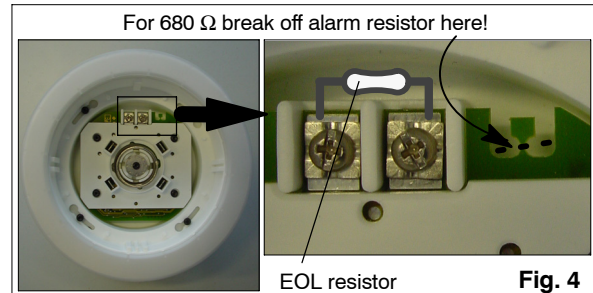


Fig. 4

Table 1: Wiring Connections (Inner Ring for Conventional)

Connection	Terminal	Wire
Alarm relay (normally open)	b1/b2	yellow
	a1/a2	white
Shielding	not used	-
Indicator output	c	white
Voltage +	+V	red
Voltage +	+V	red
Voltage -	0V	black
Trouble relay (normally closed)	t ₀ (not connected)	
	t ₁ (common) *	green
	t ₂ (normally closed)	green

* Connect terminal b1/b2 of the last detector base with terminal t₁ of the first detector base of the stub (see blue wire in the diagram).

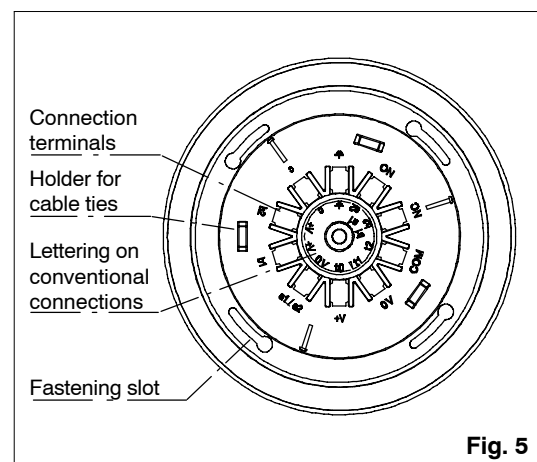


Fig. 5

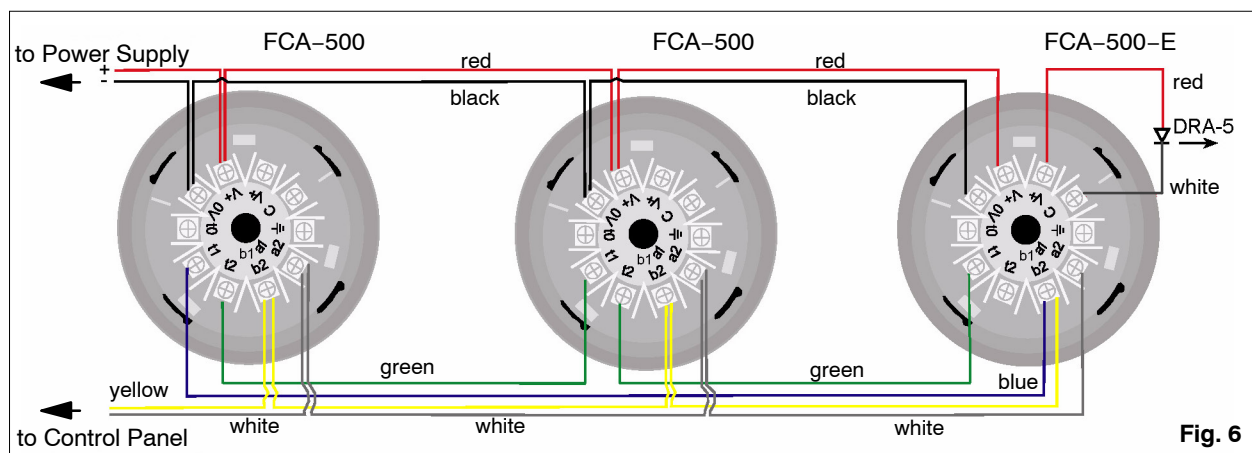


Fig. 6

Mounting the Base (FCA-500 and FCA-500-E)

- Insert the base in the back box so that it fits over the four screws.
- Turn the base clockwise until it stops to lock it in place.
- Repeat steps 1 and 2 if you install multiple detectors in a line.
- Slightly turn each base until the mark on the base aligns with the other detectors' marks (see Fig. 7).
- Tighten the screws with the supplied wrench.

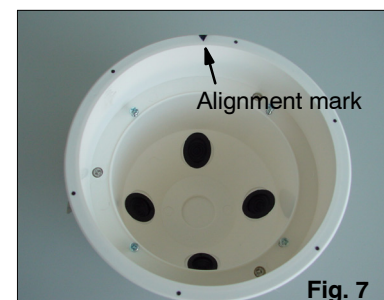


Fig. 7

Inserting the Detector Head

1. Remove the protective film from the detector head.
2. Snap the trim ring into place on the base.
3. Place the detector head in the base and turn it until the detector head drops into the alignment grooves.
4. Push the center of the detector until it locks into place. It clicks and springs up.

Start-up

1. Check the wiring from the control panel to the last head on the run for proper polarity and continuity.
2. Make sure each run terminates with an EOL resistor as specified by the control panel manufacturer.
3. Apply power to the system. Check for alarm and troubles.
4. If single detectors alarmed or went in trouble, check if there is a free space of at least 19 in. (50 cm) around these detectors. If the problem persists, replace these detectors or swap them with known good units. If also the good units alarm or go in trouble, the sensitivity may have been affected by the surrounding environment. Recheck if there are any obstructions around the detector which may reflect the light emitted by the detector.
5. Switch the dry reed contact of every detector within the installation with a magnet (see Section 5., Dry Reed Contact and Section 6., Electrical Function Test) for at least 10 sec until the detector alarms. Then reset the detector by removing the power for at least 2 seconds. After the reset, the detector will adjust its operating baseline in dependence of the surrounding environment.. Make sure that no objects or obstructions (like the test tool SOLO330 itself) are ahead of the detector during reset.



After installation, the operating baseline must be adjusted once at every detector to the correct level. If there are any obstacles ahead of the detector when resetting an alarm caused by the Electrical Function Test (see Section 6.), the sensitivity of the detector may be affected.

6. Perform the sensitivity test described in Section 7. at every detector.

4. Maintenance and Service

- Trained personnel should perform a visual and physical test according Table 2 as recommended by NFPA-72 (National Fire Alarm Code).
- For cleaning the detector surface, use a common window cleaner and a soft, clean cloth.



Notify all concerned parties before any maintenance or testing of the fire alarm system, and after completion of these activities.

Note:

- The FCP-500-C and FCP-500-C-P must be replaced every five years. The chemical (CO) sensor turns off at five years of operation. The LED double-flashes every 8 to 12 sec, indicating trouble, and the detector continues to function as an optical (O) detector.

Table 2: Testing Detector

Test Steps		Detector Type	
		FCP-500 FCP-500-P	FCP-500-C FCP-500-C-P
1	Check the LED (see Table 3)	X	X
2	Check the detector's mounting	X	X
3	Visually check for damage or contamination of the detector surface	X	X
4	Check the area for factors (such as lightning) that could inhibit the detector's performance	X	X
5	Perform Electronic Functional Test (see Section 6.)	X	X
6	Perform Sensitivity Test (see Section 7.)	X	X
7	Test the optical detector (see Section 8.)	X	X
8	Test the CO detector (see Section 9.)	-	X

Table 3: LED Operation

Status	LED
Normal	green, flashes every 8 sec
Alarm	red, steady
Trouble	green, double flash every 8 to 12 sec
Test mode	green, flashes once every second





Notify all concerned parties before any maintenance or testing of the fire alarm system, and after completion of these activities.

5. Dry Reed Contact

1. Place the test tool with the FAA-500-TTL test adapter with magnet up against the detector head.
2. Turn the test tool until the magnet activates the dry reed contact (see Fig. 8). Normally the green LED flashes once every 8 to 12 sec. When the dry reed contact activates, the LED flashes once every second.

6. Electronic Functional Test

1. Activate the dry reed contact (Section 5, Dry Reed Contact).
2. Leave the magnet on the test tool by the dry reed contact for 10 sec. Count 10 flashes of the LED. The detector activates a test alarm and the LED turns red.

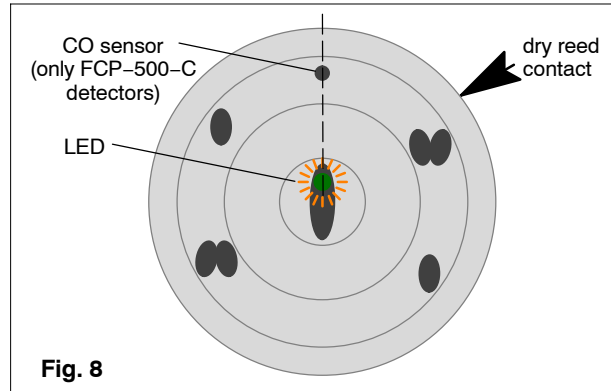


Fig. 8

7. Sensitivity Test

1. Activate the dry reed contact (Section 5, Dry Reed Contact).
2. Leave the magnet on the test tool by the dry reed contact for 5 sec. Count 5 flashes of the LED.
3. Remove the test tool. Refer to Table 4 for the LED Display.

Table 4: Sensitivity Test LED Display

Number of Red LED Flashes	Detector's State
1 to 3	Operating normally with little or no dirt contamination
4 to 6	Dirty, needs immediate cleaning
7 to 10	Trouble condition, very dirty, clean and check detector immediately

8. Smoke Test for the FCP-500 / FCP-500-P

Note: No testing gas is required! For testing use only:

- Test tool for optical smoke detectors Solo 330 (product ID 4.998.112.071)
- with FAA-500-TTL test adapter with magnet (product ID F.01U.508.725)

1. Activate the dry reed contact (Section 5., Dry Reed Contact).
2. Leave the magnet on the test tool by the dry reed contact for at least 2 sec and not more than 4 sec. Count two flashes of the LED. The detector stays in test mode for 60 sec. The green LED blinks once a second.
3. Hold the test tool under the detector so that the test beaker is flush with the trim ring.
Note: Do not tip the test tool, or the detector might come loose.
4. By covering the scattered light areas, both optical sensors are triggered simultaneously (no O testing gas is required).
5. This can take up to 20 sec. An alarm activates and the red LED lights. If the panel is in test mode, the alarm resets automatically.

9. CO and Smoke Test for the FCP-500-C / FCP-500-C-P



The CO sensor has not been evaluated to the requirements of UL 2075 or for its ability to detect a fire. The FCP-500-C and FCP-500-C-P detect CO as a component of a fire. In dependence of the measured CO concentration the sensitivity of the smoke sensor is adjusted.

Perform the CO sensor test once a year to confirm that the sensor is functioning.

Note: For testing use only:

- Test tool for optical smoke detectors Solo 330 (product ID 4.998.112.071)
- with FAA-500-TTL test adapter with magnet (product ID F.01U.508.725)

1. Conduct step 1 to 5 of Section 8. (Smoke Test) to ensure that the smoke sensor is functioning. After this an alarm activates and the red LED lights steady. Don't reset the detector.
2. If over 70 ppm of carbon monoxide is applied to the detector, the red LED of the detector starts flashing. This indicates that the carbon monoxide sensor is working.
3. Reset the detector by removing the power.

Bosch Security Systems
130 Perinton Parkway
Fairport, NY 14450-9199

Customer Service: (800) 289-0096
Technical Support: (888) 886-6189



BOSCH