

AP-FXC-0110, AP-FXC-0210 PoE Extender

Quick Installation Guide

INTRODUCTION

AP-FXC-0110: 1 PoE IN - to - 1 PoE OUT. AP-FXC-0210: 1 PoE IN - to - 2 PoE OUT.

The AP-FXC-0110/0210 is a PoE extender capable of receiving 95W power from PSE. Multiple extenders can be cascaded to increase the cabling distance.

PACKAGE CONTENTS

_			
-	1x PoE extender	•	1x Quick Installation Guide

⚠ IMPORTANT:

- 1. Install the device in a ventilated and dry place, that is free of electromagnetic source, vibration, moisture, and dust.
- 2. Make sure the ventilation openings on the extender are not blocked.
- 3. Use CAT5 or 6 UTP/STP cables. Avoid using low-quality cables, which will seriously limit the cabling distance.

CONNECTION

Following are the conditions for making the cabling:

- 1. Use 18~19Ω, 24AWG CAT5 cables.
- 2. Typical VIVOTEK cameras stream size feature = 1080p@30fps 6Mbps; 720p@30fps 3Mbps.

 Make sure the combined bandwidth consumption does not exceed the uplink bandwidth from the PoE switch.

NOTE: There are power losses due to cable resistance.



LED DEFINITIONS

PoE IN	Green ON	LAN: Data is being transmitted or received.	
	Yellow ON	PWR: PoE IN port is connected to PSE.	
	OFF	No connection.	
Power OUT#	UT# Green ON LAN: Data is being transmitted or received.		
	Yellow ON	PWR: PoE OUT port is connected to PD.	
	OFF	No connection.	

DIP SWITCH DEFINITIONS

DIP#	ON	Turn on PoE output for the PoE out port.
	OFF	Turn off PoE output for the PoE out port.

Note: For the AP-FXC-0110, DIP 1 is not functional.

All specifications are subject to change without noice. Copyright @ 2017 VIVOTEK INC. All rights reserved.