
# Intensifier H® Outdoor Miniature Bullet Camera

## HINT637H – Grey Housing HINT637HW – White Housing



200 New Highway, Amityville, NY 11701 800-645-5516 / www.specotech.com


### **DIMENSIONS**

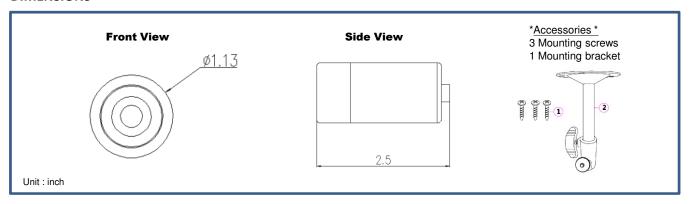


### **SPECIFICATIONS**

ITEMS	Intensifier H® Miniature Bullet Camera	
Lens	HINT637H (Grey housing) HINT637HW (White housing)	
Image Sensor	1/3" SONY COLOR 960H CCD	
Resolution	700TV lines	
Total Pixels	1020(H) x 508(V) (NTSC)	
Effective Pixels	976(H) x 494(V) (NTSC)	
Scanning System	2:1 Interlace	
Synchronization	Internal	
Min. Illumination	0.01Lux at F1.2, 0.00001Lux (Sens-up x512)	
S/N (Y signal)	50dB	
Shutter	1/60~1/120,000sec (NTSC)	
Power Consumption	150mA (DC)	
Power Supply	12VDC	
Operational Temp.	-4°F-140°F	
Dimensions	1.13"(Dia.) x 2.5"(L)	
Weight	4oz.	


### OSD joystick built-in cable



### **OSD MENU TREE**



### MAIN SETUP\*\*\*

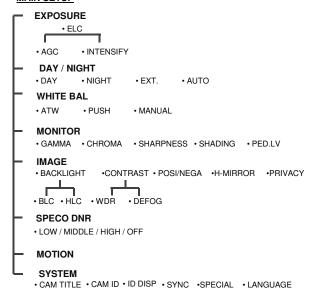

## **OSD MENU Details**

**PRESET**: Used for quick and easy setup of the installation environment.

MAIN SETUP: to adjust more detailed functions, press this button to open up the menu tree.

### EXIT

- SAVE : Press to save the current
- settings and exit main menu.
- RESTORE : Press to exit main menu without saving settings.
- INITIAL : Resets all settings to it's factory defaults.



**EXPOSURE**: Adjusts exposure settings.

ELC (Electronic Light Control) / ALC (not used for this camera)

LENS : Select the lens type (ALC/ELC)

BRIGHTNESS : Adjusts image brightness. (0~ 20)

SHUTTER : Auto / Manual Shutter can be selectable (1/60  $^{\sim}$  1/120000)

FLK(Flicker Less): Select this when the picture flickers (ON/OFF)

AGC: Adjusts the Automatic Gain Control level. (0~20)

INTENSIFY: x2-x512 (increasing magnification may cause noise/distortion).

DAY / NIGHT : Adjust Day / Night options.

DAY: Full time color mode (This camera has this function as a factory default)

NIGHT : Full time B/W mode.

AUTO: Day / Night is switching automatically by AGC level.

EXTERN & CDS : not use for this camera

# Intensifier H® Outdoor Miniature Bullet Camera HINT637H – Grey Housing

# **HINT637HW - White Housing**

WHITE BAL: Adjusts white balancing options.

ATW: Automatically white balances the image.

PUSH: if you press it in appropriate item position, then Auto White Balance

will perform once.

MANUAL: manually adjust the scene to your desired settings.

RED : Adjusts the red gain level. (0 $^{\sim}$  20) BLUE : Adjusts the blue gain level. (0 $^{\sim}$ 20)

MONITOR: Sets the video output to main input types.

GAMMA: Sets the desired Gamma value (0.35/0.40/0.45/0.50/0.55/0.60/0.65/0.70)

CHROMA: Sets the color gain (0~20)

SHARPNESS: Sets the amount of sharpness applied on the image(0~20)

SHADING: Sets the Lens Shading Compensation value. (0~20)

PED. LV: Sets the Pedestal Level (0~20)

**IMAGE**: Adjusts various effect options.

BACKLIGHT:: Adjusts backlight options.

BLC: Produces a clearer image of an object darkened by strong backlighting.

HLC: Used to contain extremely bright areas such as car headlights,

the light can be masked out.

CONTRAST: Adjusts Contrast options.

WDR: Uses a digital wide dynamic range to balance dark and over

saturated areas within the image.

DEFOG: Activate this mode when the video or the weather is foggy.

It maintains a clear picture.

POSI/NEGA: Changes to Positive or Negative image.

### \* IMPORTANT SAFETY INSTRUCTIONS \*

- 1) Read these instructions
- Keep these instructions.
   Follow all instructions.
- 3) Heed all warnings.5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.

  8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including
- b) Do not install near any neat sources such as radiators, neat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- and the point where they exit from the apparatus.

  11) Only use the attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### \* WARNING \*

"To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture." "Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus."

Pour réduire le risque de feu ou de décharge électrique, n'exposez pas cet appareil à la pluie ou à l'humidité. L'appareil doit être gardé à l'abri des goutes ou des éclaboussures et aucun objet remplie d'un liquide, comme un vase, ne devrait être posé sur l'appareil.

In USA and Canada, Use a Class 2 power supply only

### \* CAUTION \*

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Ces instructions d'entretien sont pour l'utilisation par le personnel de service qualifié seulement. Afin d'éviter tout danger de décharge électrique, n'exécutez pas d'autre entretien que ceux indiqué dans le manuel d'instruction À moins que vous soyez qualifié pour le faire.

## •FCC Information \*

This equipment has been tested and found to comply with limits for a class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense



200 New Highway, Amityville, NY 11701 800-645-5516 / www.specotech.com

H-MIRROR: Flips the image along the y-axis.

PRIVACY: Used to hide regions of the image.
MASK LV: Selects the desired mask color

AREA NO.: Selects the current mask area from 1 to 8 zones DISPLAY: Selects ON/OFF to display of mask zone or not.

TOP/BOTTOM/LEFT/RIGHT: Adjusts the mask zone size for directions.

 $\ensuremath{\mathbf{SPECO\ DNR}}$  : Reduces the background noise caused by the digital enhancement

of a low light environment.

If AGC is turned OFF, DNR will be disabled (LOW/MIDDLE/HIGH)

MOTION: Adjusts motion detection settings.

SENSITIVITY : Sets the desired multiple of the digital exposure length.(0~20)

AREA NO: Selects the current motion zone from area1 to 4.

AREA USE: Adjusts the motion detection zone size.

TOP/BOTTOM/LEFT/RIGHT: Adjusts the mask zone size for directions

SYSTEM: Adjusts various System options.

CAM TITLE: Determines the camera name. (ON/OFF)

CAM ID: Sets the ID for the RS-485 (0~255)

ID DISP.: ON(Disables camera NO/ID)/OFF(Displays camera No/ID)

LANGUAGE: Sets the desired OSD language.

 ${\sf SPECIAL}: Adjusts\ special\ options.$ 

DEFECT DET : To remove "White Spot(Dead Pixel)" on screen

FONT COLOR: Sets the camera OSD color(0~8)



### LIMITED WARRANTY - VIDEO PRODUCTS

THIS WARRANTY IS VALID ONLY ON PRODUCTS PURCHASED AND USED IN TH UNITED STATES OF AMERICA AND CANADA. THIS WARRANTY APPLIES ONLY T THE ORIGINAL USER.

SUBJECT TO CONDITIONS AND EXCLUSIONS FOUND BELOW, THIS PRODUCT IS WARRANTED AGAINST MANUFACTURING DEFECTS IN MATERIAL AND WORKMANSHIP FOR THE FOLLOWING PERIOD FOR PARTS AND LABOR:

SPECO TECHNOLOGIES CAMERAS 5 YEARS	DVRs3 YEAR
SPECO TECHNOLOGIES IP CAMERAS2 YEARS	NVRs3 YEAR:
SPECO PTZ AND VL CAMERAS1 YEAR	BALANCE OF
SPECO TECHNOLOGIES MONITORS 1 YEAR	SPECO TECHNOLOGIES LINE1 YEAR

SPECO TECHNOLOGIES WILL REPAIR OR REPLACE (AT OUR DISCRETION) ANY PARTS FOUND TO BE DEFECTIVE FOR THE WARRANTY PERIOD SPECIFIED. WE WILL PROVIDE A REPLACEMENT FOR ANY DEFECTIVE PART.

### CONDITIONS

- 1. YOU MUST OBTAIN A RETURN AUTHORIZATION (RA) NUMBER FOR ANY MERCHANDISE BEING RETURNED TO SPECO TECHNOLOGIES, WHETHER FOR RETURN/EXCHANGE OR REPAIR, WHETHER IN OR OUT OF WARRANTY.
- 2. THIS WARRANTY WILL BE HONORED ONLY UPON PRESENTATION OF THE ORIGINAL DATED BILL OF SALE OR SALES SLIP.
- TRANSPORTATION OF THE PRODUCT TO OUR SERVICE DEPARTMENT IS THE RESPONSIBILITY OF THE USER. REPAIRED OR REPLACED PRODUCT WILL BE RETURNED PREPAID DURING THE WARRANTY PERIOD.
- PRODUCT WILL BE RETURNED PREPAID DURING THE WARRANTY PERIOD.

  4. SPECO TECHNOLOGIES DOES NO AUTHORIZE AN INTERNET OR MAIL ORDER PRODUCT SALES. IF A SPECO TECHNOLOGIES PRODUCT IS PURCHASED FROM AN UNAUTHORIZED DISTRIBUTOR OR OTHER SOURCE. INCLUIDNO RETALERS, MAIL ORDER SELLERS AND ONLINE SELLERS. IT WILL NOT BE HONDRODE OR SERVICED UNDER THE EXISTING SPECO TECHNOLOGIES WARRANTY DUCKY MAY SPECO TECHNOLOGIES PRODUCT FURCHASED FROM THESE ONLINE WERCHAYTS WILL VOID THE APPLICABLE WARRANTY AND IS NELIGIBLE FOR TECHNICAL SUPPORT. IF YOU HAVE OUESTIONS ABOUT A RESELLER, IT VIDIO THE APPLICABLE WARRANTY AND IS NELIGIBLE FOR A LIST OF UNAUTHORIZED EALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT WAVES, SPECIAL PLASE CONTACT SPECO TECHNOLOGIES AT 1-400-445-5516 FOR THE TECHNOLOGIES AT

### EXCLUSION

- THIS WARRANTY SHALL NOT COVER ADJUSTMENT OF CUSTOMER OPERATED CONTROLS AS EXPLAINED IN THE APPROPRIATE MODEL'S
  INSTRUCTION MANUAL OR PRODUCTS WHICH HAVE BEEN ALTERED, ABUSED, OR HAVE MISSING OR ALTERED SERIAL NUMBERS.
- 2. THIS WARRANTY SHALL NOT APPLY TO UNCRATING, SETUP, INSTALLATION, OR THE REMOVAL AND REINSTALLATION OF PRODUCTS AFTER REPAIR.
- A THIS WARRANTY SHALL NOT APPLY TO REPAIRS OR REPLACEMENTS NECESSITATED BY ANY CAUSE BEYOND THE RESULT OF MANUFACTURE INCLUDING, BUT NOT LIMITED TO, ANY MALFUNCTION, DEFECTS OR FAILURE CAUSED BY OR RESULTING FROM LIMAUTHORIZED SERVICE OR PRESIDENT MANUFACE IMPROPER MAINTENANCE, MODIFICATION OR REPRISE BY THE USER, ABUSE, MISUSE, NEGLECT, ACCIDENT, FIRE, FLOOD, OR OTHER ACTS OF HATURE, INCORRECT LINE VOLTAGE, DANAGE OR MAGE BURNS TO TELEVISION PICTURE TUBES CAUSED BY OR ATTRIBUTABLE TO THE USE OF ANY ACCESSORY, ELECTRONICS GAME OR DEVICE, OR DAMAGE CAUSED TO MAGE PICKUP DEVICES BY EXCESSIVE LIGHT.

THE POREGOING IS IN LIEU OF ALL OTHER EXPRESSED WARRANTIES AND WE DO NOT AUTHORIZE ANY PARTY TO ASSUME FOR US ANY OTHER OBLIGATION OR LIABILITY. IN NO EVENT SHALL WE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARBING FROM THE USE OF THE PRODUCT, OR FOR ANY DELAY IN THE USE OF THE PRODUCT OUR TO CAUSES BEYOND OUR CONTROL. SOME STATES DO NOT ALLOW HUMTATIONS OF HOW LONG AN IMPLIED WARRANTY LASTS ANDOR DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL DAMAGES. THE ADDRESS HINTON OF CONSEQUENTIAL DAMAGES THE ADDRESS HINTONS ON IMPLIED WARRANTY AND CONSEQUENTIAL DAMAGES THAN ANY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS.

NOTE: FOR YOUR PROTECTION IN THE EVENT OF THEFT OR LOSS OF THIS PRODUCT, PLEASE FILL IN THE INFORMATION REQUESTED BELOW AND RETAIN WITH YOUR SALES RECEIPT.

MODEL NO.:(LOCATED ON BACK OR BOTTOM OF UNIT)			SERIAL NO.:	
DATE OF PURCH	HASE:		-	
WHERE PURCHASED:			PURCHASE PRICE:	
			MATION REGARDING SERVICE OR RETURN, EE: 1-300-845-5516 IN METRO NY: 631-957-3700	

ALWAYS USE DISCRETION WHEN INSTALLING VIDEO AND/OR AUDIO SURVEILLANCE EQUIPMENT ESPECIALLY WHEN THERE IS AN EXPECTATION OF PRIVACY. INDUINE REGARDING FEDERAL, STATE AND/OR LOCAL REGULATIONS APPLICABLE TO THE LAWFUL INSTALLATION OF VIDEO AND/OR AUDIO RECORDING OF SURVEILLANCE GUIPMENT. PARTY CONSENT MAY ES REQUIRED. .

Speco Technologies is constantly developing product improvements. We reserve the right to modify product design and specifications without notice and without incurring any obligation. Rev. 141218