
Parts List

	Description	Qty.	Part No.
Α	toggler (ACC 215 only)	2	560-9708
	toggler (ACC 415 only)	4	560-9708
	toggler (ACC 615 only)	6	560-9708
В	1/4-20 x 2.5" phillips (ACC 215 only)	2	520-9521
	1/4-20 x 2.5" phillips (ACC 415 only)	4	520-9521
	1/4-20 x 2.5" phillips (ACC 615 only)	6	520-9521
С	1/4" SAE washer (ACC 615 only)	6	540-9440




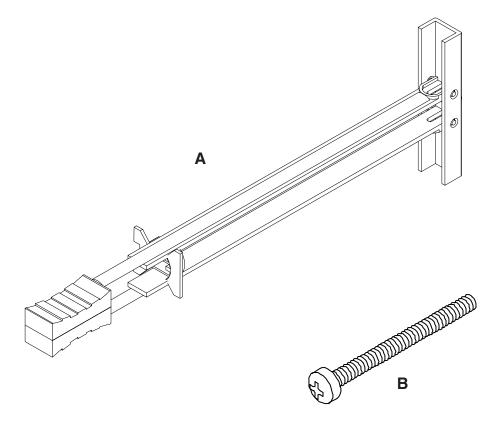


FOR METAL STUD WALLS ONLY: Drill four 1/2" (13mm) dia. holes through drywall and studs at locations corresponding to wall plate. Insert togglers (A) as shown below...

A WARNING


- Product must be mounted through drywall that has a minimum thickness of 1/2" and into metal studs, 26 gauge or heavier.
- Make sure that togglers are anchored into the center of the studs as shown in figure 1. The use of an "edge to edge" stud finder is highly recommended.

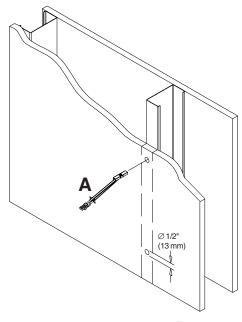


1-1 Pivot end of toggler (A).



1-2 Push into hole.

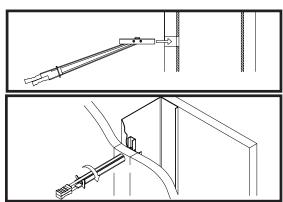


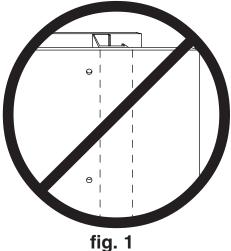

against inside walls of metal stud.

clockwise to wedge it

1-3 Rotate toggler (A)




back firmly on ring.

1-5 Break off excess.

forward while pulling

1-4 Slide plastic cap



1-6 Align wall plate with hole in wall and fasten using 1/4-20 x 2.5" screw (B) and 1/4" washer (C).

