



## INSTALLATION AND OPERATION MANUAL

### FVT/FVR80SFP

8-CHANNEL DIGITALLY ENCODED VIDEO USING  
SMALL FORM-FACTOR PLUGGABLE (SFP) OPTICAL DEVICES

#### FVT80SFP

The FVT/FVR80SFP series optical video link provides transmission of eight 10-bit medium-haul quality digitally encoded video channels through a selectable small form factor pluggable module (SFP). See instructions included with SFP for installation of selected module.

Bi-color (Red/Green) LED indicators are provided for confirming operating status. See **Figure 4** on **Page 3** for LED indication explanations.

These units are interchangeable between stand-alone or card mount configurations. See **Figure A** on **Page 4** for mounting instructions.

FIGURE 1 – FVT/FVR80SFP TRANSMITTER AND RECEIVER

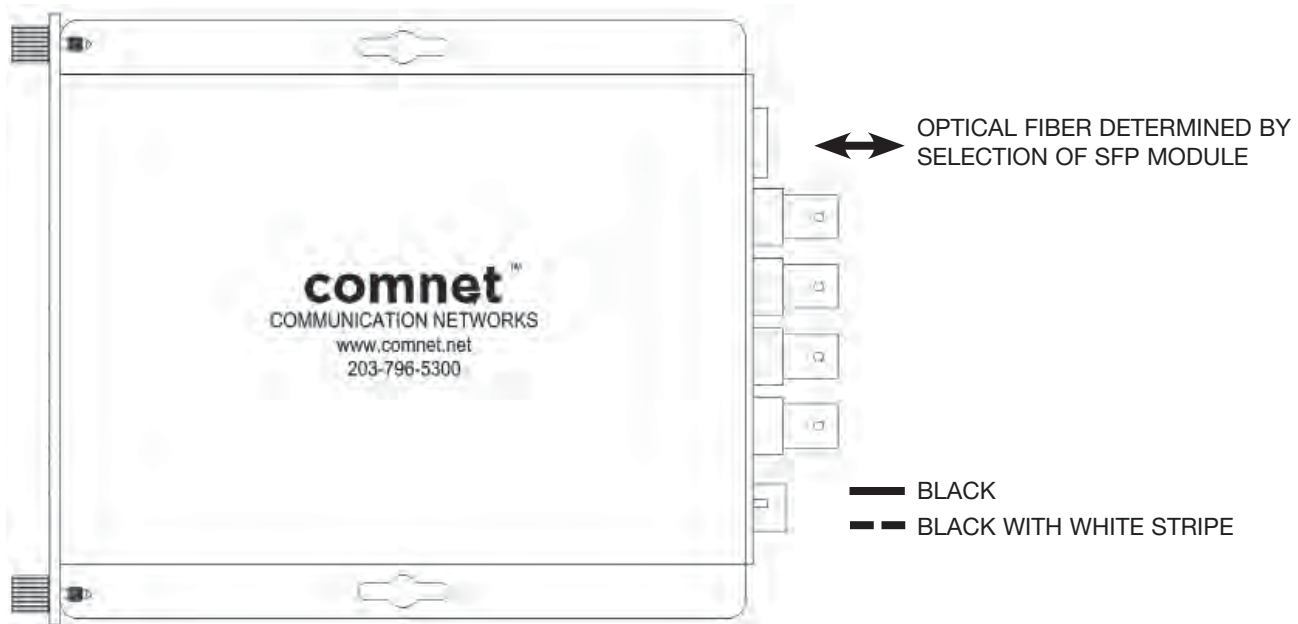


FIGURE 2 – FVT80SFP TRANSMITTER


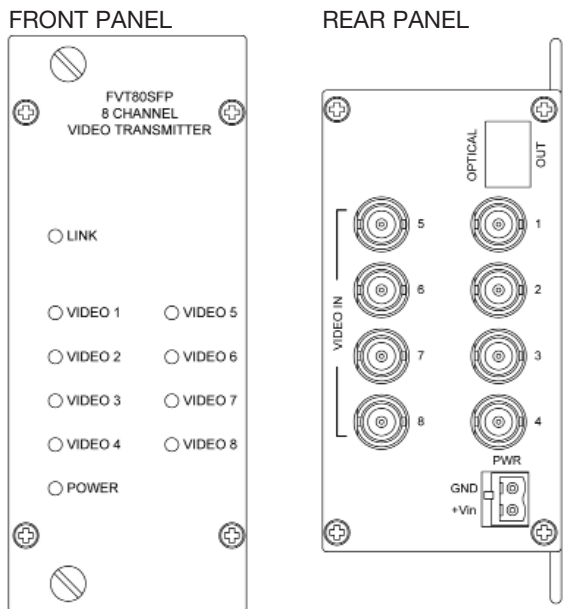


FIGURE 3 – FVR80SFP RECEIVER

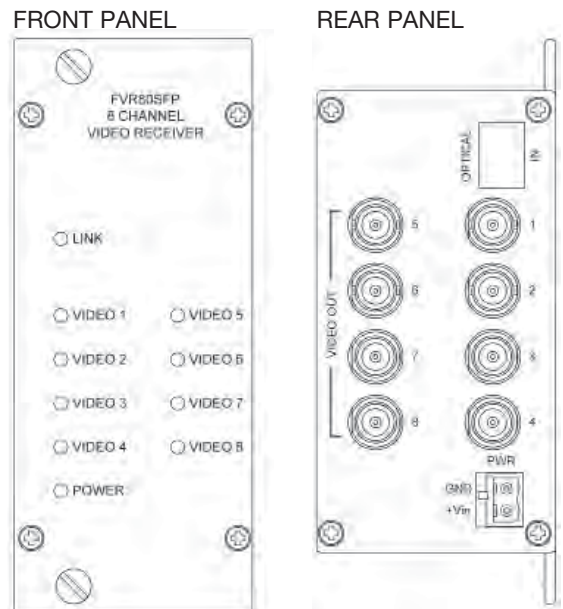

NOTE: Remove Electrical Connector for Rack Mount Units

**FIGURE 4 – LED INDICATORS**

	<b>LINK</b>	<b>VIDEO</b>	<b>POWER</b>
<b>GREEN</b>	Communication link has been established over optical fiber	An active video signal is present on the BNC connector.	Unit powered up
<b>RED</b>	Communication link has not been established.	No Video Signal	–
<b>OFF</b>	Not powered up correctly	–	Unit powered down

# MECHANICAL INSTALLATION INSTRUCTIONS

## INSTALLATION CONSIDERATIONS

This fiber-optic link is supplied as a Standalone/Rack module. Units should be installed in dry locations protected from extremes of temperature and humidity.

## C1-US, C1-EU, C1-AU OR C1-CH CARD CAGE RACKS

**CAUTION:** Although the units are hot-swappable and may be installed without turning power off to the rack, ComNet recommends that the power supply be turned off and that the rack power supply is disconnected from any power source. **Note:** Remove electrical connector before installing in card cage rack.

1. Make sure that the card is oriented right side up, and slide it into the card guides in the rack until the edge connector at the back of the card seats in the corresponding slot in the rack's connector panel. Seating may require thumb pressure on the top and bottom of the card's front panel.

**CAUTION:** Take care not to press on any of the LEDs.

2. Tighten the two thumb screws on the card until the front panel of the card is seated against the front of the rack.

**WARNING:** Unit is to be used with a Listed Class 2 or LPS power supply rated 9-12 VDC @ 1A.


## IMPORTANT SAFEGUARDS:

**A) Elevated Operating Ambient** - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T<sub>ma</sub>) specified by the manufacturer.

**B) Reduced Air Flow** - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

## FIGURE A

Dimensions are for a standard ComNet™ two slot module

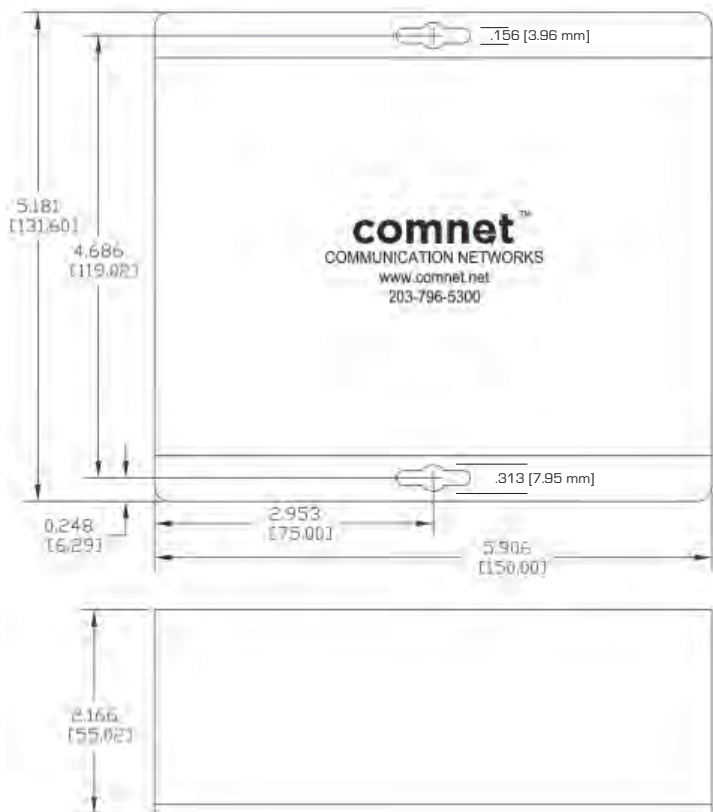

**comnet**  
Communication Networks

3 CORPORATE DRIVE | DANBURY, CT 06810 | USA  
T: 83.796.5300 | F: 83.796.5303 | TECH SUPPORT: 1.888.678.9427 | INFO@COMNET.NET

8 TURNBERRY PARK ROAD | GILDERSOME | MORLEY | LEEDS, UK LS27 7LE  
T: +44 (0)113 307 6400 | F: +44 (0)113 253 7462 | INFO-EUROPE@COMNET.NET