



Right for Business

DNR200 Series

Network Video Surveillance Recorder

4/8/16 1080P View & Record CMS Mobile Apps HDMI H.264



Instruction Manual

English Version 1.0

www.digimerge.com

Copyright © 2013 Digimerge Technologies Inc., a FLIR Company

Thank you for purchasing this product. FLIR/Digimerge is committed to providing our customers with a high quality, reliable security solution.

This manual refers to the following models:

- DNR200 Series

For more information on this product, firmware updates, and accessory products, please visit us at:

www.digimerge.com



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER SERVICABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products' enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.




WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF THE PLUG TO THE WIDE SLOT AND FULLY INSERT.

Important Safeguards

In addition to the careful attention devoted to quality standards in the manufacturing process of your video product, safety is a major factor in the design of every instrument. However, safety is your responsibility too. This sheet lists important information that will help to assure your enjoyment and proper use of the video product and accessory equipment. Please read them carefully before operating and using your video product.

Installation

1. **Read and Follow Instructions** - All the safety and operating instructions should be read before the video product is operated. Follow all operating instructions.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - Comply with all warnings on the video product and in the operating instructions.
4. **Polarization** - Do not defeat the safety purpose of the polarized or grounding-type plug.

A polarized plug has two blades with one wider than the other.

A grounding type plug has two blades and a third grounding prong.
The wide blade or the third prong are provided for your safety.
If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
5. **Power Sources** - This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your location, consult your video dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.
6. **Overloading** - Do not overload wall outlets of extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.
7. **Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the video product.
8. **Ventilation** - Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video equipment on a bed, sofa, rug, or other similar surface. This video product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the video product manufacturer's instructions have been followed.
9. **Attachments** - Do not use attachments unless recommended by the video product manufacturer as they may cause a hazard.
10. **Camera Extension Cables** - Check the rating of your extension cable(s) to verify compliance with your local authority regulations prior to installation.
11. **Water and Moisture** - Do not use this video product near water. For example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, near a swimming pool and the like.
Caution: Maintain electrical safety. Powerline operated equipment or accessories connected to this unit should bear the UL listing mark of CSA certification mark on the accessory itself and should not be modified so as to defeat the safety features. This will help avoid any potential hazard from electrical shock or fire. If in doubt, contact qualified service personnel.
12. **Accessories** - Do not place this video equipment on an unstable cart, stand, tripod, or table. The video equipment may fall, causing serious damage to the video product. Use this video product only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the video product. Any mounting of the product should follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.


Service

13. **Servicing** - Do not attempt to service this video equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
14. **Conditions Requiring Service** - Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged.
 - If liquid has been spilled or objects have fallen into the video product.
 - If the video product has been exposed to rain or water.
 - If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
 - If the video product has been dropped or the cabinet has been damaged.
 - When the video product exhibits a distinct change in performance. This indicates a need for service.
15. **Replacement Parts** - When replacement parts are required, have the service technician verify that the replacements used have the same safety characteristics as the original parts. Use of replacements specified by the video product manufacturer can prevent fire, electric shock or other hazards.
16. **Safety Check** - Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the video product is in safe operating condition.
17. **Wall or Ceiling Mounting** - The cameras provided with this system should be mounted to a wall or ceiling only as instructed in this guide, using the provided mounting brackets.
18. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Use

19. **Cleaning** - Unplug the video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
20. **Product and Cart Combination** - Video and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the video product and car combination to overturn.
21. **Object and Liquid Entry** - Never push objects for any kind into this video product through openings as they may touch dangerous voltage points or "short-out" parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.
22. **Lightning** - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.

General Precautions

1. All warnings and instructions in this manual should be followed.
2. Remove the plug from the outlet before cleaning. Do not use liquid aerosol detergents. Use a water dampened cloth for cleaning.
3. Do not use this unit in humid or wet places.
4. Keep enough space around the unit for ventilation. Slots and openings in the storage cabinet should not be blocked.
5. During lightning storms, or when the unit is not used for a long time, disconnect the power supply, antenna, and cables to protect the unit from electrical surge.

FCC CLASS A NOTICE

NOTE

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

This equipment has been certified and found to comply with the limits regulated by FCC, EMC, and LVD. Therefore, it is designated to provide reasonable protection against interference and will not cause interference with other appliance usage.

However, it is imperative that the user follows the guidelines in this manual to avoid improper usage which may result in damage to the unit, electrical shock and fire hazard injury.

In order to improve the feature functions and quality of this product, the specifications are subject to change without notice from time to time.



www.digimerge.com

Features



- Easy Connection and setup with 4 integrated PoE ports and auto-discovery of IP Cameras
- Full HD 1080P recording provides the most detailed picture and reliable identification with selectable area digital zoom
- Real-time recording: 120fps@1080p (4ch), 240fps@720p (8ch), and 480fps@D1 (16ch)
- Dual streaming (H.264/MJPEG) and dual core processor
- Pentaplex operation - simultaneous View, Record, Playback, Backup & Remote Monitoring
- ONVIF 2.0 conformance ensures compatibility with popular industry IP cameras
- Substream recording for bandwidth efficient remote playback
- 64 Channel CMS by FLIR included
- Fully PC / Mac compatible
- Mobile apps: iPhone, iPad, Android
- HDMI / VGA / BNC simultaneous video output
- Free DDNS service by FLIR with secure redundant servers
- RS-485 supports Pelco D & P PTZ
- Audio I/O: 1 in - 1 out, Alarm I/O
- Supports 2x SATA HDDs up to 3TB (6 TB total), 2x USB 2.0 ports
- Embedded Linux operating system, simple GUI on screen display
- Rack mountable – 1U
- 3 year warranty

*Please visit www.digimerge.com for information, firmware, and compatibility updates for mobile viewing

TABLE OF CONTENTS

Getting Started	1
Basic Setup	2
1. Connect the Cameras	2
2. Connect a Monitor	2
3. Connect the Mouse	2
4. Connect the Ethernet Cable	2
5. Connect the Power Adapters	2
Front Panel	3
Rear Panel	4
Remote Control	5
Mouse Control	6
Using the System	7
Password	7
On-Screen Display	7
Using the Quick Menu	8
Adjusting Color Settings	8
Using the Navigation Bar	9
Using the Camera Toolbar	9
Using Quick Playback	10
Using Digital Zoom in Live Display	10
Using Real-time Backup	10
Using the Virtual Keyboard	11
Setting the Time	12
Recording	13
Search (Playback)	14
Playing Back Video from the Hard Drive	14
Playback Controls	15
Backup	16
Formatting the USB Device	16
Backing up Video	16
Using Video Clip Backup	17
Viewing Backup Files	18
Using the Main Menu	20
Info	21
HDD Info	21
BPS	21
Log	21
Version	21

Updating Firmware	21
Online Users	22
Remote Device Info	22
Setting	23
General	23
Recording	24
Schedule	24
Configuring the Recording Schedule	24
Configuring Pre-Recording and Mirror Recording	25
Configuring Holidays	25
Network	25
Configuring DHCP or Fixed IP Address	25
Configuring System Ports	25
Configuring NTP	26
Configuring DDNS	26
Configuring Email Alerts	27
Configuring Switch Settings	28
Motion	28
Configuring Motion Detection Events	28
Display	29
Default	30
Device Search	31
Adding Cameras from the LAN	31
Manual Add	31
Editing Cameras	32
Deleting Cameras	32
Advanced	32
HDD Management	32
Formatting Hard Drives	32
Selecting Hard Drive Types	33
Configuring Hard Drive Group Settings	33
Warning	33
Record	34
Account	34
Adding Accounts	35
Modifying Accounts	35
Deleting Accounts	36
Adding Groups	36
Deleting Groups	36
Modifying Groups	36
Auto Maintain	36
Config Backup	37
Shutdown	38
FLIR SyncrolP NVR Central Management Software	39
System Requirements	39
Prerequisites	39
Installing FLIR SyncrolP NVR CMS	40
Adding a NVR from the local area network (LAN)	40
Adding a NVR using a DDNS address	42

<i>CMS Live Viewing Overview</i>	44
Using Alarm Rec (Event Search)	45
Using Playback Mode	46
<i>Playback Controls</i>	47
Configuring Monitoring Tasks and Projects	47
<i>Configuring Tasks</i>	47
<i>Configuring Projects</i>	48
<i>Running Tasks and Projects</i>	49
Using E-Map	50
<i>Configuring E-Map</i>	50
<i>Opening Cameras from E-Map</i>	51
Configuring the CMS	52
<i>Configuring CMS Options</i>	52
<i>Changing the CMS Admin Password</i>	53
Adding User Accounts to the CMS	54
Multi-Monitor Support	55
<i>Opening Cameras in Secondary Monitors</i>	55
<i>Managing Secondary Monitors</i>	55
Remote Viewing on Internet Explorer	57
Prerequisites	57
<i>IE Live Display Overview</i>	58
<i>Using Search Mode in IE (Playback)</i>	59
<i>Playback Controls</i>	60
Mobile Connectivity	61
iPhone	61
<i>System Requirements</i>	61
<i>Prerequisites</i>	61
<i>Connecting to your NVR on an iPhone</i>	61
<i>FLIR SyncrolP NVR Interface</i>	63
<i>Viewing Videos with Local File</i>	63
<i>Using Playback Mode on iPhone</i>	64
<i>Enabling Push Notifications</i>	65
<i>Device Manager</i>	66
iPad	67
<i>System Requirements</i>	67
<i>Prerequisites</i>	67
<i>Connecting to your NVR on an iPad</i>	67
<i>FLIR SyncrolP NVR HD Interface</i>	69
<i>Device Manager</i>	69
<i>Using Playback Mode on iPad</i>	70
<i>Enabling Push Notifications</i>	71
Android Phones	72
<i>Compatible Devices</i>	72
<i>Prerequisites</i>	72
<i>Connecting to your NVR on an Android Phone</i>	72
<i>FLIR SyncrolP NVR Interface</i>	74
<i>Viewing Snapshots and Videos with Local Files</i>	75

<i>Using Playback Mode on Android Phones</i>	75
<i>Enabling Push Notifications</i>	76
<i>Device Manager</i>	78
Android Tablets	78
<i>System Requirements</i>	78
<i>Prerequisites</i>	78
<i>Connecting to your NVR on an Android Tablet</i>	79
<i>FLIR SyncrolP NVR HD Interface</i>	80
<i>Using Playback Mode on Android Tablets</i>	81
<i>Enabling Push Notifications</i>	82
<i>Device Manager</i>	83
Appendix A: System Specifications	85
Appendix B: Setting up Remote Viewing	87
What Do I Need?	87
How Do I Find My IP and MAC addresses?	88
<i>Finding Your External IP Address</i>	88
How Do I Enable Port Forwarding?	88
Appendix C: Auto Port Forwarding Wizard	90
Installation	90
Obtaining Your Router Model Number and Version	91
Example	91
Configuration	91
Initial Startup: Select Language	92
Step 1: Populate the Router Database	92
Step 2: Enter your Router Settings	92
Step 3: Update the Router Settings	94
Step 4: Test your Connection	94
Configuring Multiple Routers	94
Scenario A: Router/Modem Combination + Router	95
Scenario B: Multiple Routers	95
Example	96
Appendix D: Setting Up DDNS Service	97
How Do I Enable DDNS On My System?	98
Connecting to your system using DDNS	99
<i>CMS Software or Mobile Apps</i>	99
<i>Internet Explorer</i>	99
Appendix E: Remote Firmware Upgrade	100
Installing a Firmware Upgrade Over the LAN	100
Installing a Firmware Upgrade Over the Internet	101
Appendix F: Hard Drive Installation	103
Installing a Hard Drive	103
Removing the Hard Drive	104
Formatting the Hard Drive	106
Appendix G: Connecting an External Monitor	107
Troubleshooting	108

GETTING STARTED

The system comes with the following components:



NETWORK VIDEO RECORDER



**POWER ADAPTER X2
(1X FOR POE SWITCH / 1X FOR NVR)**




REMOTE CONTROL



MOUSE



ETHERNET CABLE

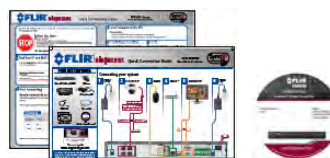


**QUICKSTART GUIDES &
SOFTWARE CD**

HARD DRIVE SIZE, NUMBER OF CHANNELS, AND CAMERA CONFIGURATION MAY VARY BY MODEL. PLEASE REFER TO YOUR PACKAGE FOR SPECIFIC CONTENT DETAILS. CHECK YOUR PACKAGE TO CONFIRM THAT YOU HAVE RECEIVED THE COMPLETE SYSTEM, INCLUDING ALL COMPONENTS SHOWN ABOVE.

BASIC SETUP

1. Connect the Cameras

- Connect IP cameras to PoE (Power over Ethernet) ports. **OR**
- Connect IP cameras to the same LAN as the NVR. For details on connecting IP cameras over the LAN, see "Device Search" on page 31.

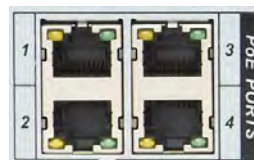

Connect IP cameras to the system

2. Connect a Monitor

- Connect an HDMI cable (not included) from the HDMI port on the rear panel to an HDTV or HDMI monitor, **OR**
- Connect a VGA cable (not included) from the VGA port to the VGA port on your monitor. **OR**
- Connect a BNC terminated cable (not included) from the Video OUT port to a TV or CCTV monitor.



Connect to an HDMI, VGA, or BNC monitor

3. Connect the Mouse

- Connect the mouse (included) to the USB mouse port on the front or rear panel.



Connect the mouse to a USB port

4. Connect the Ethernet Cable


- Connect an Ethernet cable (not included) to the LAN port on the rear panel of system; connect the other end of the Ethernet cable to an empty LAN port on your router or switch (not included).



Connect an Ethernet cable

5. Connect the Power Adapters

- Connect the DC 12V power supply to the DC 12V port on the rear panel of the system. Connect the power cable to an outlet, power strip, or surge protector. This power adapter is used to power the main unit.
- Connect the DC 48V power supply to the DC 48V port on the rear panel of the system. Connect the power cable to an outlet, power strip, or surge protector. This power adapter is used to power the integrated PoE ports.
- Turn the power switch to the ON position.

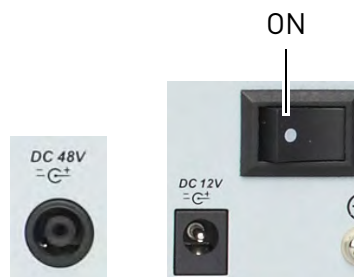


Connect the power adapters

FRONT PANEL



1. **USB Port:** Connect a USB mouse (included) or connect a USB flash drive (not included) for data backup or firmware upgrades.
 2. **IR:** Not supported.
 3. **Channel Indicators:** Glow when camera is connected to the corresponding channel.
 4. **Playback Controls:**
 - **Pause/Play:** In live view, press to enter playback mode. Press to play/pause playback.
 - **Reverse:** Press to reverse playback/pause playback.
 - **Fast:** Press to increase playback speed.
 - **Next:** Press to skip to next video.
 - **Previous:** Press to skip to previous video.
 - **Slow:** Press for slow playback.
 5. **Function Buttons:**
 - **REC:** Press to open manual recording controls.
 - **FN:** Performs special functions in some menus.
 - **SHIFT:** During text input, press to switch input types.
 - **ESC:** In menus, press to go back / exit menus. In playback, press to return to live view.
 6. **Directional Buttons:**
 - **ENTER:** From live view, Press once to open the System Information screen; press twice to open the Main Menu. In menus, press to confirm menu options.
 - **Directional Buttons:** Press to move cursor in menus. In live view, press up to change split screen layout; press left / right to select channels when single-channel mode is selected.
 7. **Power Button:** Press and hold to power off the system. Press to power the system back on.
 8. **IR Receiver:** IR receiver for the remote control. Keep the IR receiver clear from obstructions.
- LED Indicators:**
- **POWER:** Glows to indicate the system is on.
 - **HDD:** Glows to indicate hard drive is in normal state. Turns off when there is a hard drive error.
 - **NET:** Glows when network is in normal state. Turns off for network error.


REAR PANEL

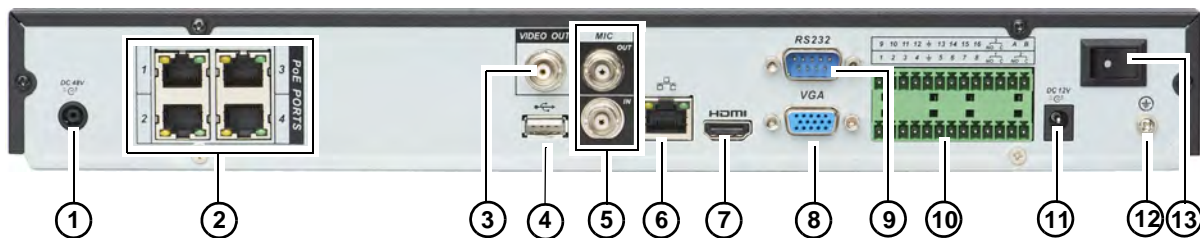

1. **DC 48V:** Port for 48V DC power supply (included) for integrated PoE ports.
2. **PoE Ports:** Camera input ports for IP cameras.
3. **VIDEO OUT:** Video output (BNC) to connect the system to a secondary monitor.
4. **USB port:** Connect a USB mouse or connect a USB flash drive (not included) for data backup or firmware upgrades.
5. **MIC:**
 - **IN:** BNC port for microphone (not included) for 2-way audio.
 - **OUT:** BNC port for audio output device (e.g. speakers; not included) for 2-way audio.
6. **LAN:** Connect an Ethernet cable (not included) to connect the system to a router or switch (not included).
7. **HDMI:** HDMI port to connect the system to a HDMI TV/monitor.
8. **VGA:** VGA port to connect the system to a VGA monitor.
9. **RS232:** Service only; not in use.
10. **ALARM IN / OUT / RS422-RS485:** Alarm block to connect external alarm or motion devices (not included).
 - **A/B:** Connection block for an RS485 PTZ camera (not included).
11. **DC 12V:** Port for 12V DC power supply (included).
12. **Ground**
13. **Power Switch**

REMOTE CONTROL

1. **Power:** Press and hold to power off the system. Press to power on.
2. **Playback Controls:**
 - **Pause/Play:** In live view, press to enter playback mode. Press to play/pause playback.
 - **Reverse:** Press to reverse playback/pause playback.
 - **Fast:** Press to increase playback speed.
 - **Next:** Press to skip to next video.
 - **Previous:** Press to skip to previous video.
 - **Slow:** Press for slow playback.
3. **Esc:** In menus, press to go back / exit menus. In playback, press to return to live view.
4. **Directional Keys:**
 - **Enter:** Press once to open the System Information screen; press twice to open the Main Menu. Press to confirm menu selections.
 - Press ◀ ▶ to move the menu cursor.
 - Press ▲ ▼ to change menu options.
5. **Mult:** Press to switch between full-screen and split-screen layouts.
6. **Number Keys:**
 - **1~0:** In live view, press to open channels in full-screen.
 - In menus, press to input numbers or text input.
 - **Shift:** Press to change input types.
7. **Add:** Configure remote control address.
8. **Rec:** Press to open manual record menu.
9. **Fn:** Press to perform special functions in some menus.

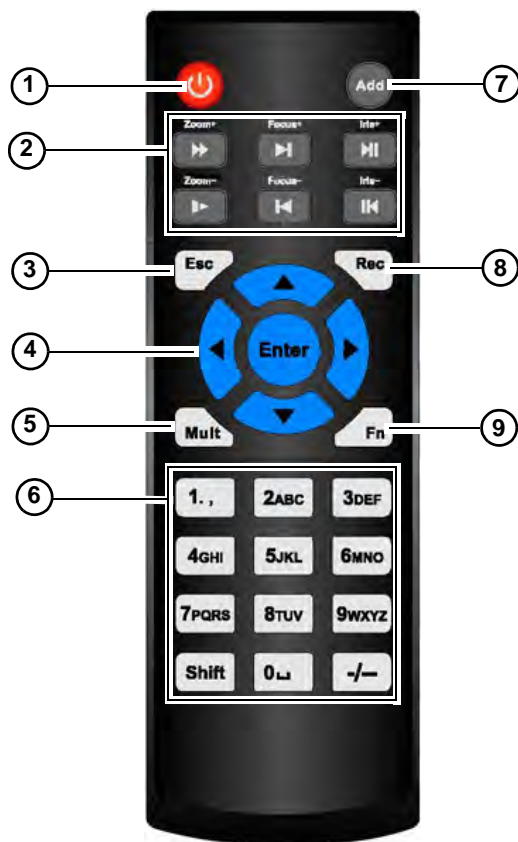

Mouse Control

The mouse is the primary control device for the system. To connect a USB mouse:

- Connect a USB mouse to the USB port on the front or rear panel.


1. **Left-Button:**

- In live view, click to open the Navigation Bar.
- In live view, while in a split-screen display mode, double-click an individual channel to view it in full-screen. Double-click again to return to the split-screen display mode.
- While navigating menus, click to open a menu option.

2. **Right-Button:**

- During live view, right-click anywhere on the screen to open the Quick Menu.
- Within navigating menus, right-click to exit menus.

3. **Scroll-Wheel:** Use to change menu options.

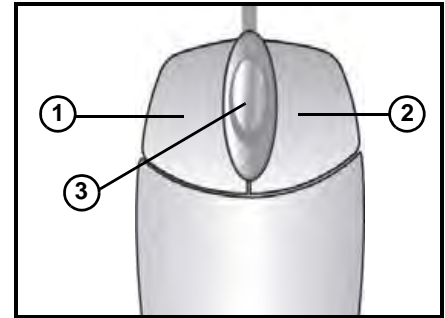

USING THE SYSTEM


The default system password is 000000

Password

By default, the login password is enabled. The default system password is **000000**.

On-Screen Display

The system shows the following for all display views:

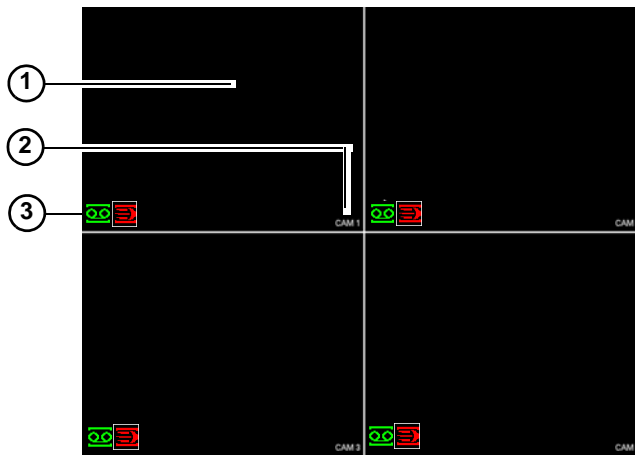




1. Display Area:

- Double-click on a channel to view in full-screen; double-click again to return to split screen.
- Right-click to open the Quick Menu. See “Using the Quick Menu” on page 8.
- Left-click to open the Navigation bar.
- Move the mouse to the top of a channel to view the Camera Toolbar.
- Click-and-drag cameras to rearrange the channel display. This does not affect the channels each camera is connected or recording to.


2. Channel Name

3. Channel Status Icons:

- : Channel is recording.
- : Motion has been detected.
- : Camera is locked (covert mode is activated).

Using the Quick Menu

The Quick menu gives you access to the system's key functions. To access the Quick Menu, right-click the screen during live view.

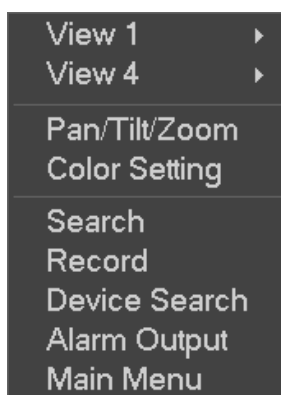

The Quick Menu has the following options:

- **View:** Select a camera in full-screen or select a multi-channel display.
- **Pan/Tilt/Zoom:** Access controls for PTZ cameras (not included).
- **Color Setting:** Configure color settings for IP cameras.
- **Search:** Search/playback recorded video. See “Search (Playback)” on page 14.
- **Record:** Open the Record menu to select manual recording options. See “Recording” on page 24.
- **Device Search:** Open the Device Search menu to manage IP cameras.
- **Alarm Output:** Open the Alarm Output menu.
- **Main Menu:** Open the Main Menu. See “Using the Main Menu” on page 20.

Adjusting Color Settings

Use the Color Settings menu to adjust color settings for your IP cameras.


To adjust color settings:

1. Right-click on the channel you would like to configure and select **Color Setting**. Enter the system password if prompted.
2. Adjust the **Hue**, **Brightness**, **Contrast**, and **Saturation** settings that the camera will use. To enable custom Gain controls, check **Gain** and use the slider to configure the gain level.

OR

Use **Color mode** to select a preset color profile.

Configure color settings for the first time period

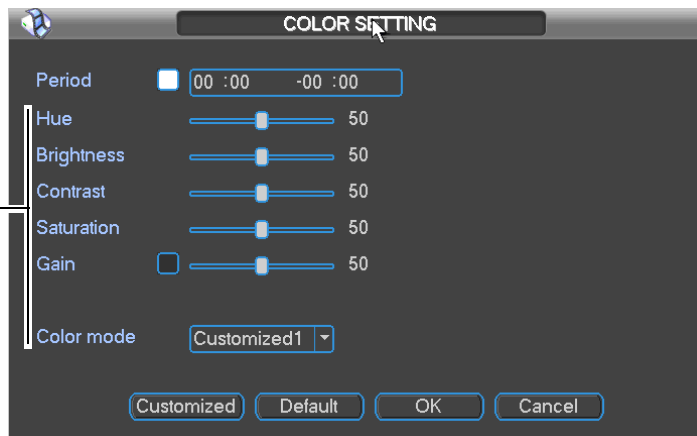

NOTE: Color settings will update once you save changes.

NOTE: To configure the **Customized1~4** profiles, click **Customized**.

3. Click **OK** to save changes.

Using the Navigation Bar

The Navigation Bar gives quick access to certain functions and menus.

To open the Navigation bar:

- Left click on the screen to open the Navigation Bar. The Navigation Bar has the following options:



Using the Camera Toolbar

The Camera Toolbar is used to perform actions on a specific channel.

To access the Camera Toolbar:


- Move the mouse to the top of the channel display. The Camera Toolbar has the following options:



Using Quick Playback

Quick Playback is used to playback the last 5~60 minutes of video from the selected channel. You can also access Quick Playback in split-screen mode, while still viewing live video from the other channels.



To use Quick Playback:

1. Move your mouse to the top of the channel display and click .


NOTE: By default, the NVR will begin playback from 5 minutes ago. You can increase this to up to 60 minutes using the **Realtime Play** setting in **Main Menu→Setting→General**.

2. Right-click to exit Quick Playback.

Using Digital Zoom in Live Display

1. Move your mouse to the top of the channel display and click  to activate digital zoom. The icon will change to  to indicate digital zoom is activated.




NOTE: You may activate digital zoom in multiple channels at the same time.


2. Click and drag inside the channel to zoom in.
 - Click and drag to pan the zoom area.
 - Right-click to zoom out and select a new zoom area.
 - Click  to disable digital zoom. Note that the channel will remain at the same zoom level until you right-click inside it.

Using Real-time Backup

Real-time backup allows you to save footage from the live display to a USB flash drive (not included) or external hard drive (not included).


To use Real-time Backup:

1. Insert the USB flash drive or external hard drive into one of the USB ports on the system.
2. Move your mouse to the top of the channel display and click  to start Real-time Backup. The icon changes to .
3. Click  again to end Real-time Backup. The file is saved to your USB device.

NOTE: If the system prompts you to log in, you will need to click  again to start Real-time Backup after logging in.

Using the Virtual Keyboard

The Virtual Keyboard is used to input text or numeric values in certain menus.

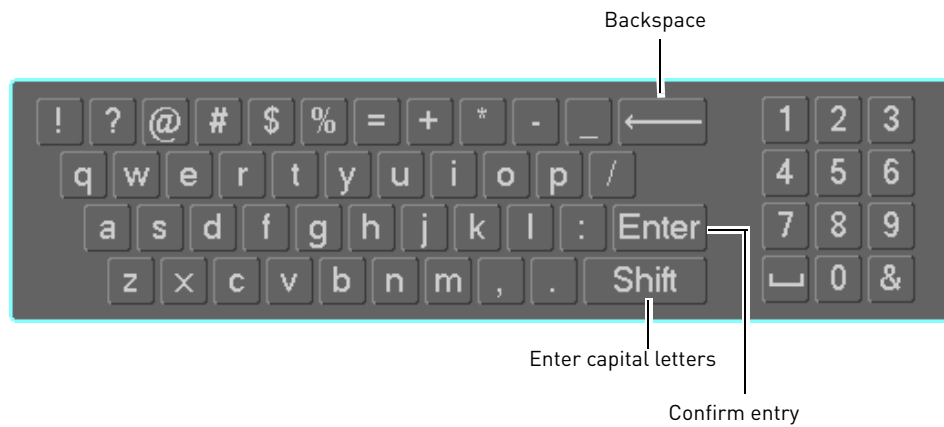

SETTING THE TIME



It is highly recommended to set the time on the system prior to doing any recording.

To set the date and time:

1. In the main viewing mode, right-click and click **Main Menu**. Log into the system using the admin account (default User Name is **admin** and Password is **000000**).
2. Click **Setting→General**.
3. Enter the current date (MM DD YYYY) and time (HH MM SS) under **System Time**.



4. Click **Save**.

NOTE: To configure Daylight Savings Time see “General” on page 23. To configure NTP, see “Configuring NTP” on page 26.

RECORDING

By default, the system is set to immediately record at startup from connected cameras. This is called Continuous Recording. It is highly recommended to keep Continuous Recording on at all times.

The system supports the following recording types:

- **Continuous Recording:** By default, all camera channels are enabled with Continuous Recording. During Continuous Recording, the Record icon () appears in the channel.
- **Motion Recording:** Cameras can be configured to record and mark events when motion is detected. When motion is detected, the Motion icon () appears in the channel.





NOTE: You must enable motion recording in the Schedule before the system will record motion events. For details, see “Schedule” on page 24.


- **Alarm Recording:** Cameras can be configured to record when external alarm devices are triggered.

SEARCH (PLAYBACK)


Search mode is used to navigate and playback recorded video files on the NVR.

Playing Back Video from the Hard Drive

1. From live view, right-click and then click **Search**. If needed, log in using the admin account (default User Name is **admin** and default Password is **000000**).
2. Use the calendar on the right to select the day to playback.
3. Use the drop-down menus to select the channels you would like to playback. Click the display options (   ) to playback multiple channels simultaneously.
4. Click inside the video bar to select the playback time. The system will begin playing back at the selected time.

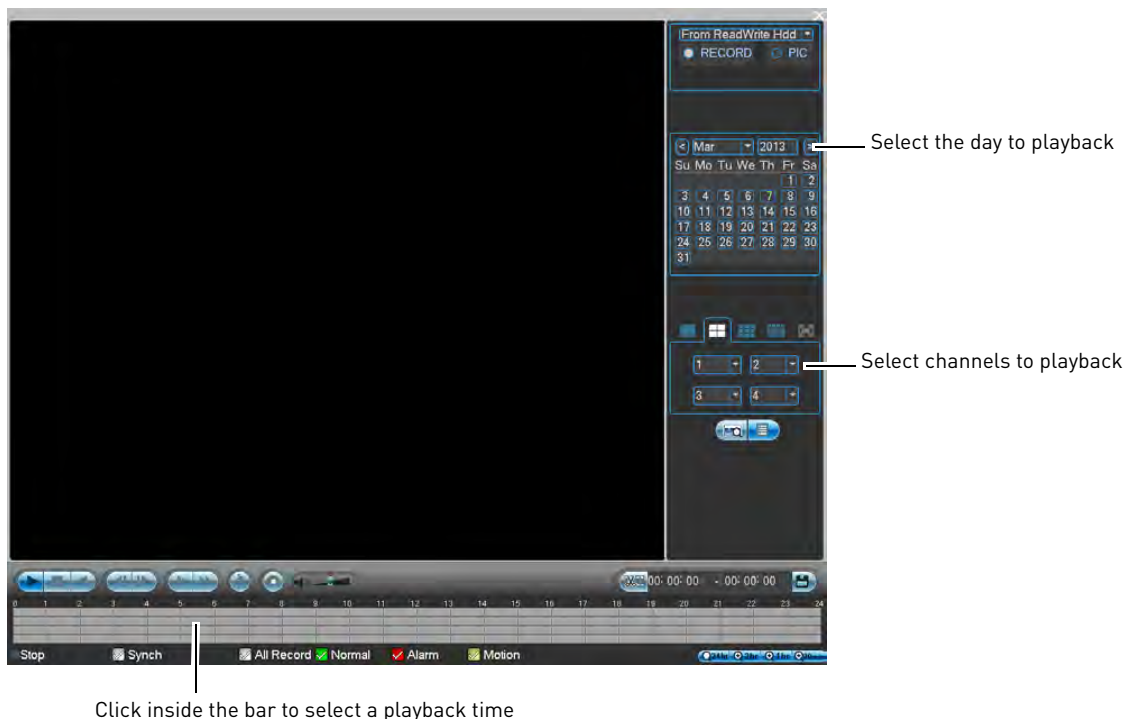

Playback Controls

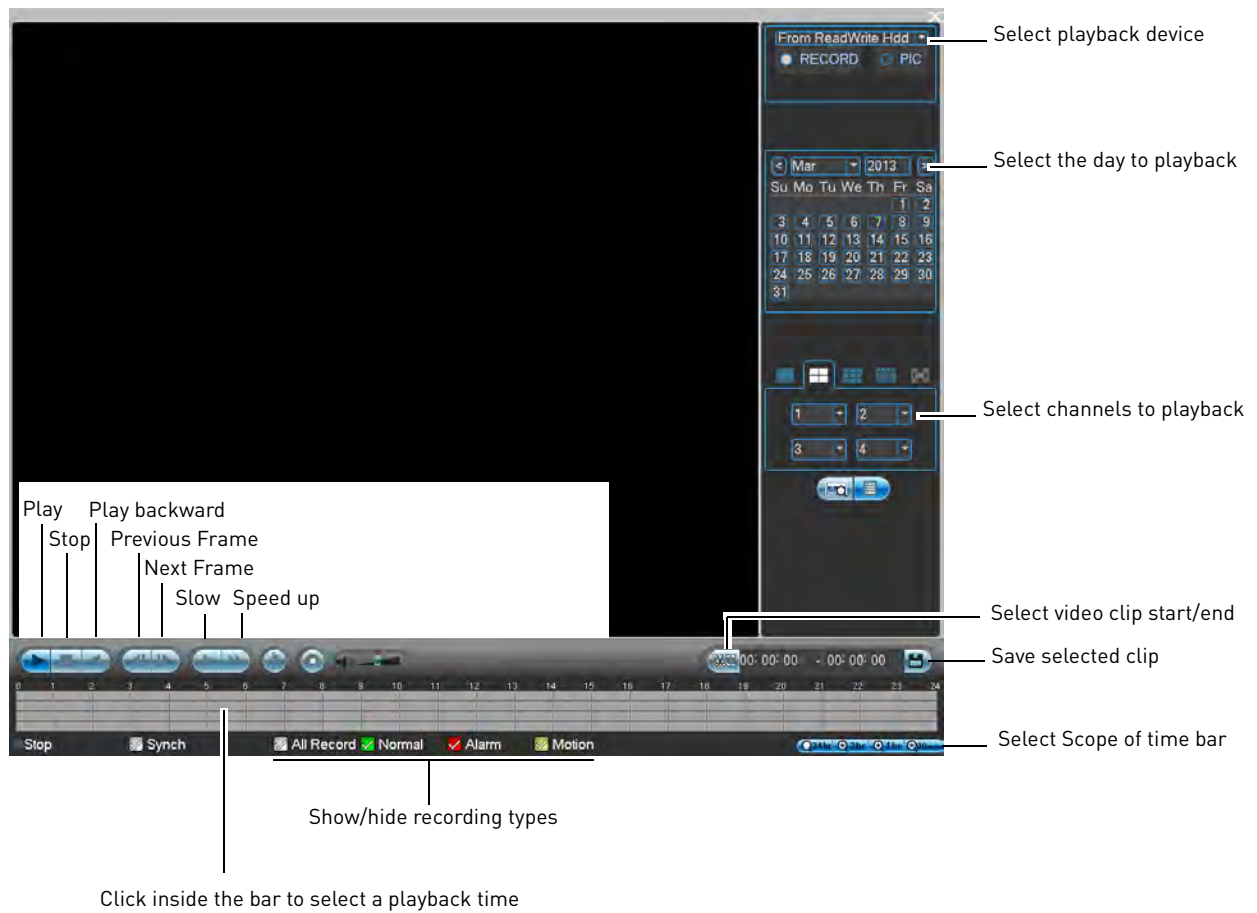

BACKUP

Backup video files to external USB flash drive (not included) or self-powered USB external hard drive (not included).

Formatting the USB Device


It is recommended to format your USB device before using it with the system.

To format a USB device:




Formatting the USB device will permanently erase all data.

1. Insert a USB flash drive (not included) or USB external hard drive (not included) into one of the USB ports.
2. From live view, right-click and then select **Main Menu**. Login if prompted.
3. Click **Backup**.
4. Check the USB device you would like to format and click **Erase**. Click **OK** to confirm.

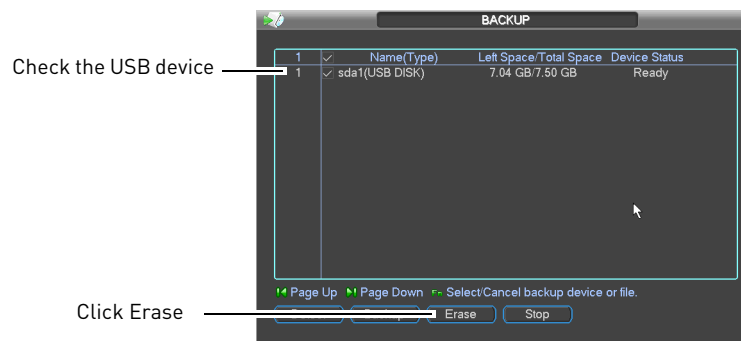


Backing up Video

1. Insert a USB flash drive (not included) or USB external hard drive (not included) into one of the USB ports.
2. From live view, right-click and then select **Main Menu**. Login if prompted.
3. Click **Backup**.
4. Check the USB device where you would like to save video.

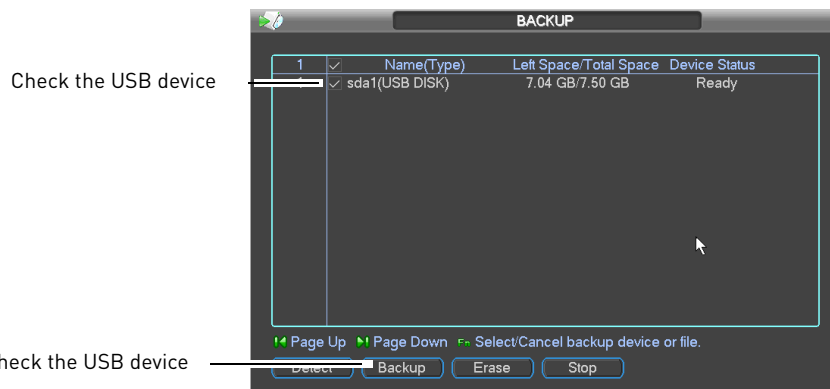5. Click **Backup**.

6. Configure your search options:

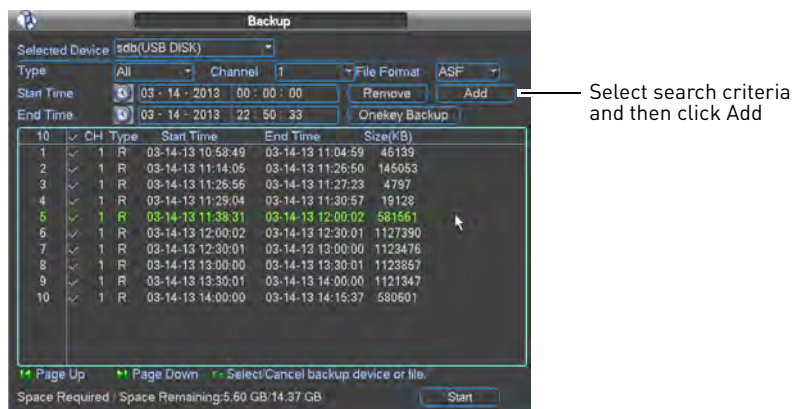

- **Type:** Select the recording type you would like to search for or select **All** to search all recording types.
- **Channel:** Select the channel you would like to search or select **All** to search all channels.
- **File Format:** Select **DAV** to save files to save files to .dav format. You can use the Player that is automatically saved on the USB device to playback .dav files on PC (Mac not supported). Or, select **ASF** for .asf format. You can playback .asf files in VLC Media Player (free download from www.videolan.org) on PC or Mac.
- **Start Time/End Time:** Select the start and end time for your search.

7. Click **Add**. A list of files that match your search criteria appears.8. Check files you would like to backup and then click **Start**. Wait for the backup to complete.




NOTE: HD video files saved on the system may take up a large amount of disk space. The size of video files selected and the amount of free space on your USB device is shown at the bottom of the screen.


Using Video Clip Backup

Video clip backup allows you to select a duration of video during playback mode and save it to a USB device (not included).

To use Video Clip Backup:

1. Insert a USB flash drive (not included) or USB external hard drive (not included) into one of the USB ports.


2. Start playing back video using the steps in “Playing Back Video from the Hard Drive” on page 14.
3. Click  to mark the beginning of the video clip. Click  again to mark the end of the video clip.
4. Click  to open the Backup menu.

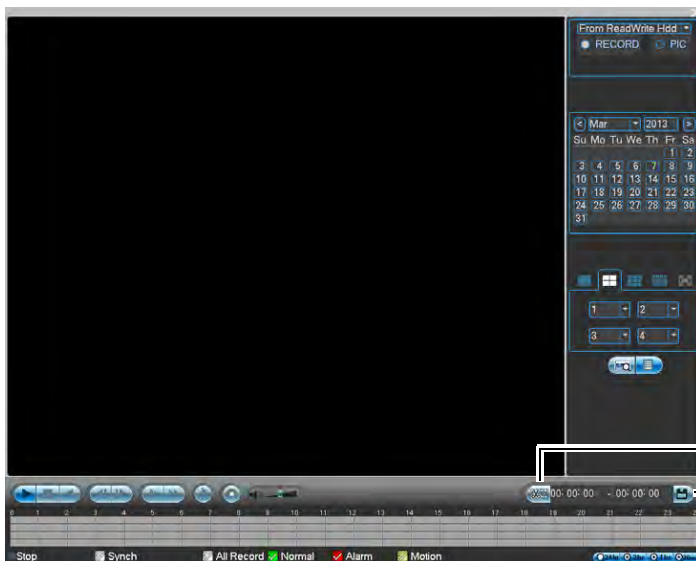

During Playback, click to select start and end of video clip

Click to open backup menu

5. Check the USB device where you would like to save the file.
6. Check the files you would like to backup.

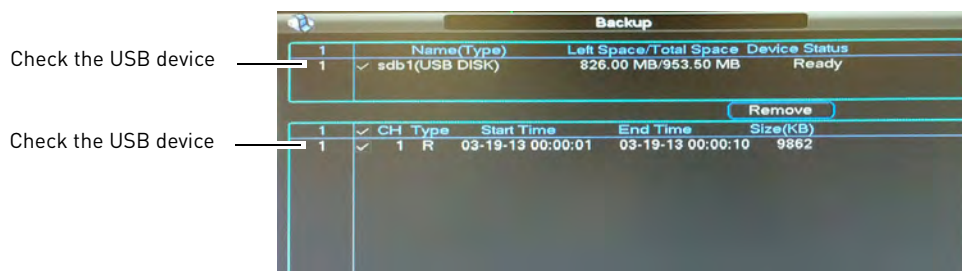

7. Click **Start**. Wait for the backup to complete before removing the USB flash drive.

Viewing Backup Files

To playback .dav backup video files, use the Player that is automatically installed on the USB device when you save a backup file.

NOTE: The Player is PC compatible only. For Mac users, make sure to save backup files in .asf format (select ASF under File Format).

You can playback .asf backup video files in VLC Media Player (free download from www.videolan.org) on PC or Mac.


To view backup video files using the Player (PC only):

1. Insert the USB device into your computer. Open the USB device in Windows Explorer.
2. Right-click the **Player.exe** file and select **Open as administrator**. The Player opens and begins playing all video files on the USB device in sequence.

3. Use the Player controls to control playback or select other files for playback.



NOTE: To view or change where manual recordings or snapshots are saved, right click in the video area and select Parameter Setting.

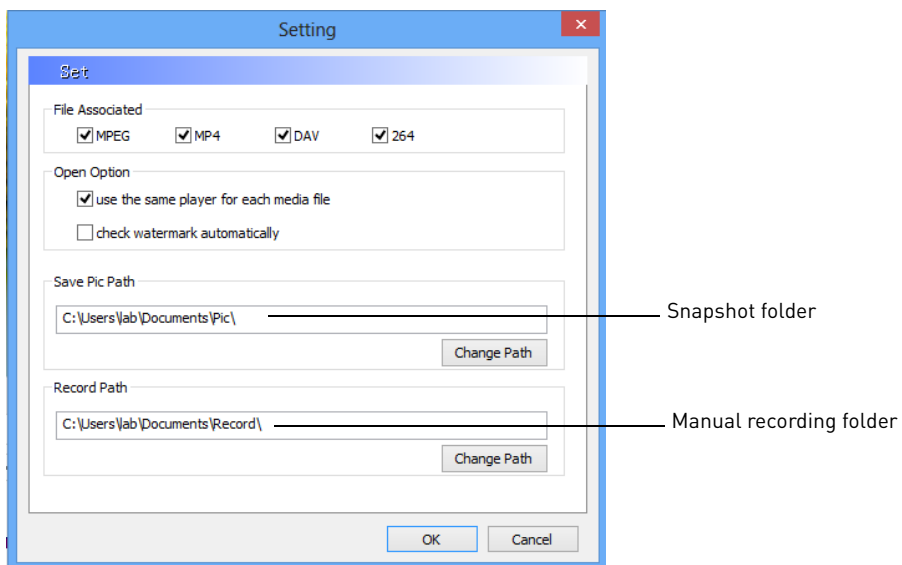

USING THE MAIN MENU

To open the Main Menu:


- **Using the Remote Control or Front Panel Buttons:** Press the **Enter** button twice.
- **Using the Mouse:** Right-click and click **Main Menu**.

NOTE: The system password may be required to access the Main Menu. By default the User Name is **admin** and the Password is **000000**.



1. **SEARCH:** Open Search/Playback mode. For details, see "Search (Playback)" on page 14.
2. **INFO:** View system information. Perform firmware upgrades.
3. **SETTING:** Configure general system, schedule, network, recording, display, and motion settings. Restore system to factory defaults.
4. **DEVICE SEARCH:** Connect IP cameras to the NVR.
5. **ADVANCED:** Configure HDD, user accounts, and error functions. Configure auto-restart. Save/restore system configuration. Access Manual Recording Menu.
6. **BACKUP:** Export files to USB device. For details, see "Backup" on page 16.
7. **SHUTDOWN:** Logout, restart, or shutdown the system.


NOTE: Checkboxes on the system are filled in white when settings are enabled or empty when disabled.

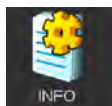

Info


The Info menu contains the following sub-menus showing system information.

HDD Info

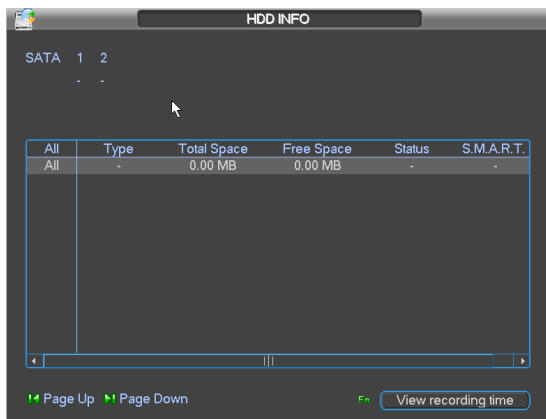


The HDD Info sub-menu shows information related to the hard drives installed in the system, including capacity, status, and type. Click **View recording time** to see the start and end times of recordings saved on the hard drives.

BPS

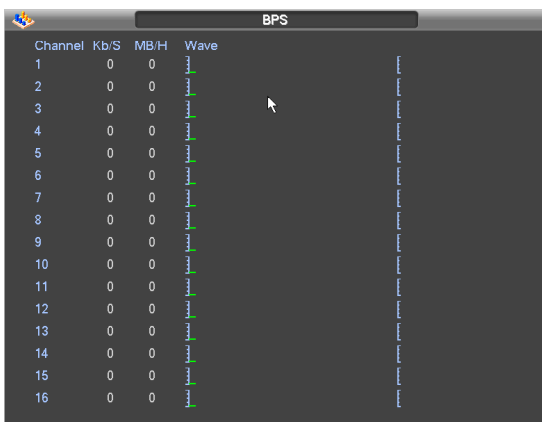

The BPS sub-menu shows the bitrates of connected IP cameras.

Log

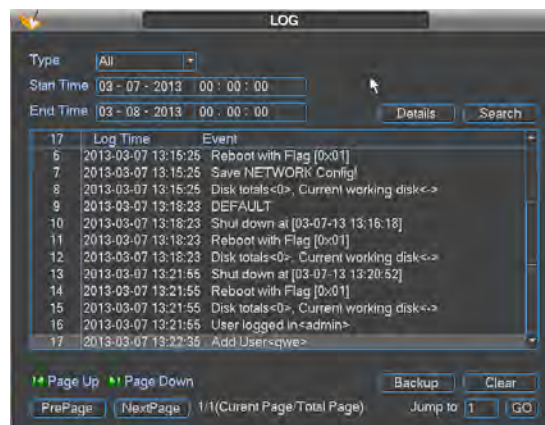


The Log sub-menu allows you to search for system logs.

To search for system logs:

1. Under **Type**, select the log type to search for.
2. Under **Start Time** and **End Time**, select the start and end time for your search.
3. Click **Search**.
4. (Optional) Click **Backup** to export logs to a USB flash drive connected to the system.

Version

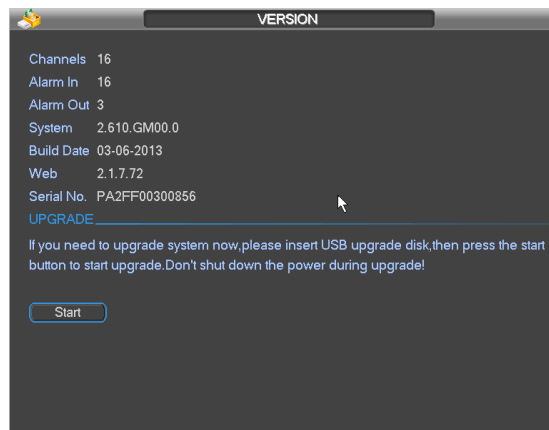


The Version sub-menu allows you to view information about the current firmware. You may also update the firmware through the version menu.

Updating Firmware

1. Download the latest firmware update from www.digimerge.com.

2. Copy the firmware to a blank USB flash drive.
- NOTE:** Do not have any folders on the USB flash drive—just the firmware file.
3. Connect the USB flash drive to a USB port on the system.
 4. Right-click and then select **Main Menu→Info→Version**.
 5. Click **Start** to update firmware. Wait for the firmware upgrade to complete. **Do not remove the USB flash drive until the upgrade process is complete or power off the NVR during the upgrade process.**

Online Users

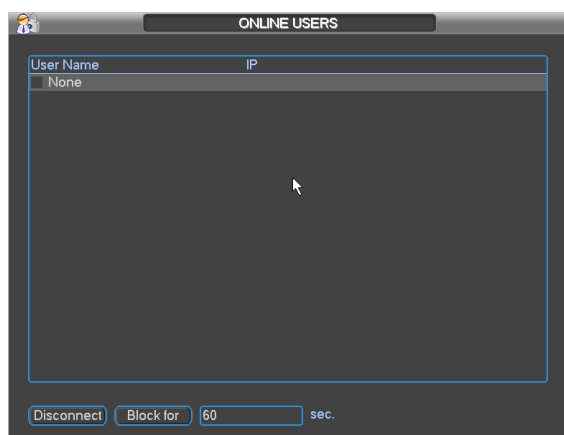


The Online Users sub-menu shows a list of users connected to the system using remote devices. You may Disconnect a user for up to 18 hours or Block a user from the system.


Remote Device Info

The Remote Device Info sub-menu shows information about IP cameras connected to the system, it contains the following tabs:

- **Channel Status:** Shows the IP address, model number, and camera status.

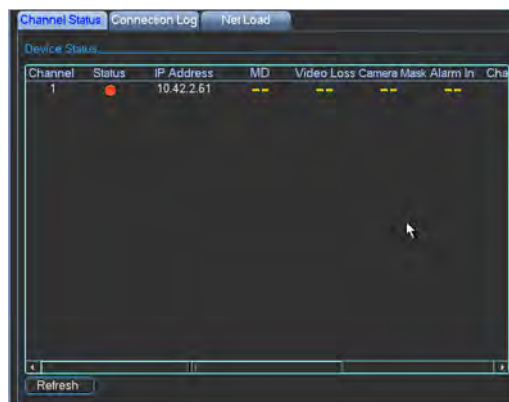


- **Connection Log:** Search for camera status logs, including user access to cameras.

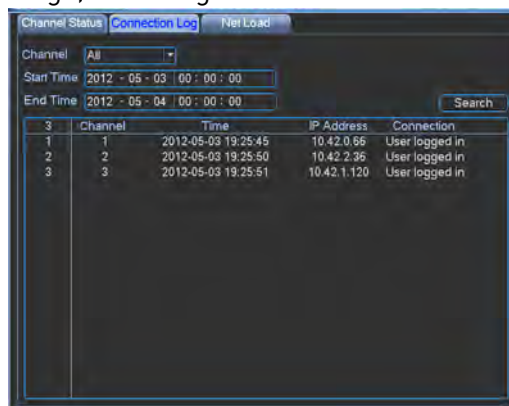

- **Net Load:** Shows a graph of upload and download traffic for your system.




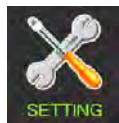

Setting

The Setting menu allows you to configure general system, schedule, network, recording, display, and motion settings. It also allows you to restore the system to factory defaults.

General

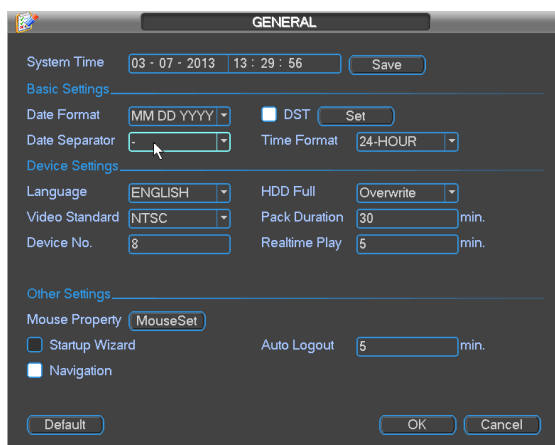

The General sub-menu allows you to Configure the time and general system settings.

The General sub-menu contains the following options:

- **System Time:** Select the current date and time and click **Save** to save changes.
- **Date Format:** Select the date format (YYYY MM DD, MM DD YYYY, or DD MM YYYY).
- **Date Separator:** Select if you would like a dot (.), dash (-), or slash (/) to separate the date display.
- **DST:** Check to enable daylight savings time adjustments. To configure the start and end times for daylight savings, click **Set**. Then, configure the **Start** and **End** as needed, and click **OK**.
- **Time Format:** Select **24-HOUR** or **12-HOUR**.
- **Language:** Select the system language.
- **Video Standard:** Select **NTSC** (North America) or **PAL** (Europe).
- **Device No.:** Select the Remote control ID for the NVR.
- **Device ID:** Enter a custom name for the NVR.
- **HDD Full:** Select **Overwrite** for the system to begin overwriting the oldest recordings when the hard drive is full or select **Stop Recording** for the system to stop recording when the hard drive is full.
- **Pack Duration:** Enter the desired pack duration. The pack duration determines the duration of video files saved to the system.
- **Realtime Play:** Select the duration of videos that will be played back in Quick Playback mode. For example, if Realtime Play is set to 5 minutes, Quick Playback will start playing back video recorded from 5 minutes ago on the selected channel.
- **Mouse Property:** Click **MouseSet**, adjust the double-click speed and click **OK**.
- **Startup Wizard:** Check to enable the Startup Wizard when your system starts. It is recommended to disable Startup Wizard once you have configured the system.
- **Navigation:** Check to enable the System Toolbar that appears when left clicking on the screen.
- **Auto Logout:** Enter the amount of time the system will wait before logging a user out when idle.
- **IPC Time Sync:** The NVR will regularly sync the internal clocks of connected IP cameras. Enter the interval between time syncs.

NOTE: Click **OK** when finished making changes.

Recording



The Recording sub-menu allows you to configure image quality settings for the recording stream and sub-stream (used during remote connection). Settings for the recording stream are shown on the left, and sub-stream settings are shown on the right.


To configure recording quality settings:

1. Under **Channel**, select the channel you would like to configure.
2. Under **Type**, select the type of recording you would like to configure: **Regular** (continuous recording), **MD** (motion detection recording), or **Alarm**.
3. Under **Resolution**, select the resolution for the selected recording type. Settings available depend on the model of IP camera connected.
4. Under **Frame Rate**, select the frame rate for the selected recording type on the left. Select the frame rate for the sub-stream on the right.
5. Under **Bit Rate Type**, select **CBR** (Constant Bit Rate) or **VBR** (Variable Bit Rate) for the selected recording type on the left and sub-stream on the right. If you select VBR, select the **Quality** from **1** (lowest) to **6** (highest).
6. Under **Bit Rate (Kb/S)**, select the bit rate for the selected recording type on the left and the sub-stream on the right.
7. Under **Audio/Video**, check the box on the left to enable audio recording (camera must have microphone attached). Check the box in the middle to enable audio

streaming to remote users. Check the box on the far right to enable video streaming to remote users (un-check to hide the channel from remote users).

8. (Optional) To copy settings to other channels, click **Copy**, select channels to apply settings to, and click **OK**.
9. Click **OK** to save changes.

Schedule

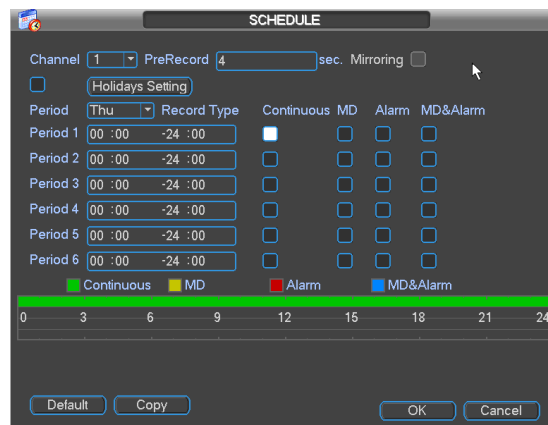

The Schedule sub-menu allows you to configure the recording schedule for continuous and motion recording. It also allows you to configure holiday, pre-recording, and redundancy settings.

NOTE: To use motion recording, motion detection must be enabled for the channel. For details, see "Motion" on page 28.

Configuring the Recording Schedule

1. Under **Channel**, select the channel you would like to configure or select **All**.
2. Under **Period**, select the day of the week you would like to configure, or select **Holiday** or **All**.
3. Configure up to 6 separate schedule periods.
 - Configure the start and end time for the time period on the left.
 - Check the types of recording that will apply to the time period on the right: **Continuous**, **MD** (Motion Detection), **Alarm**, or **MD&Alarm**.

- A visual representation of the current schedule is shown below.
- (Optional) Click **Copy** to copy the selected to schedule to other channels. Select the channels you would like to copy to and click **OK**.
 - Click **OK** to save changes.
 - Click days in the calendar to enable them as holidays. Selected holidays are highlighted in blue.
 - Click **OK**. Click **OK** to save changes.

Configuring Pre-Recording and Mirror Recording

Pre-recording determines the amount of time the system will record before events. Mirroring allows the camera to record simultaneously to a secondary mirror hard drive and primary recording hard drive.

NOTE: Secondary hard drive must be installed and configured for redundancy to use redundancy function.

To configure pre-recording and redundancy:


- Under **Channel**, select the camera you would like to configure or select **All**.
- Under **PreRecord**, select the duration for pre-recording.
- Check **Mirroring** to enable redundant recording for the selected channel.
- Click **OK** to save settings.

Configuring Holidays


Holiday settings allow you to configure a special recording schedule on certain days.

To configure holidays:

- Check the checkbox next to Holidays Setting to enable holidays.
- Click **Holidays Setting**.

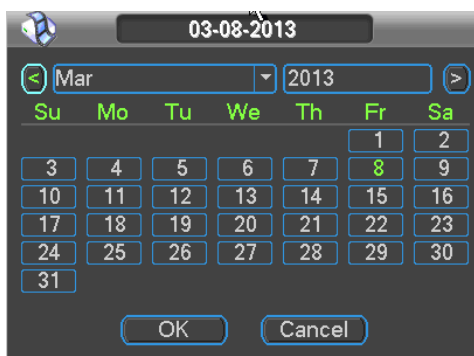

Network

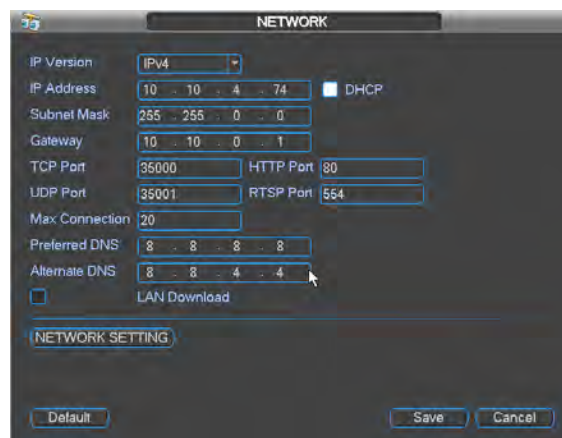

The Network sub-menu allows you to configure network settings.

Configuring DHCP or Fixed IP Address

- From live view, right-click and select **Main Menu**. Login if prompted.
- Click **Setting** → **Network**.
- Check **DHCP** to use DHCP or un-check to use a static IP address. If you un-check DHCP, configure the following:
 - **IP Address**
 - **Subnet Mask**
 - **Gateway**
 - **Preferred DNS**
 - **Alternate DNS**
- Click **Save** to save your changes. Restart the system to update the IP address.

Configuring System Ports

The system uses the following ports:

- **TCP Port (Client Port):** Used for remote video streaming to computers and mobile devices. The default port number is **35000**.

- **HTTP Port:** Used to enable connection to the system's web browser interface. The default port number is **80**.
- **UDP Port:** Used for special applications. The default port number is **35001**.
- **RTSP Port:** Used for special applications. The default port number is **554**.

You must port forward the TCP (Client) Port and HTTP Ports to enable remote access to the system.

To configure ports:

1. Configure the **TCP Port (Client)**, **HTTP Port**, **UDP Port**, and **RTSP Port** fields as needed.

NOTE: Please note that if the HTTP is port is anything other than 80, you must enter `http://` before the camera's IP address and colon (:) and the HTTP port after the IP address when connecting using an Internet browser (e.g. if the HTTP port is 85, enter `http://192.168.x.x:85`).

2. Click **Save**. The system will restart to update the ports used.

Configuring NTP

You can sync the system clock with an Internet NTP time server.

To sync the system with a time server:

1. Click **Network Setting**.
2. Check **NTP**.
3. Double-click **NTP** to open the configuration menu.
4. Configure the following:
 - Under **Server IP**, enter the **IP or DNS address of the NTP server**.

- Under **Port**, enter the NTP server port number.
- Under **Time Zone**, select your time zone.
- Under **Update Period**, enter the interval your system will sync the time with the selected server.

TIP: Click **Manual Update** to test the server settings entered and manually sync the system time.

5. Click **OK**. Click **Save** to save your changes.

Configuring DDNS

The DDNS Setup window allows you to enter your FLIR DDNS settings in the NVR. This step is required for remote access.

Prerequisites:

- Create a DDNS account. For details, see "Appendix D: Setting Up DDNS Service" on page 97.
- Port forward ports on your router to NVR's IP address (by default, ports **35000** and **80**).
- Have your DDNS account name, password, and domain name ready.

To configure DDNS settings:

1. Click **Network Setting**.
2. Check **DDNS**.
3. Double-click **DDNS**.
4. Ensure **Enable** is checked. The box will be white when DDNS is enabled.
5. Under **Domain Name**, enter the **Domain Name** from the confirmation email you received after registering for DDNS.

6. Under **User ID**, enter the **User Name** from the confirmation email.
7. Under **Password**, enter the **Password** from the confirmation email.
8. Click **OK**.
9. Click **OK**.
10. Click **Save**.

Connecting to your system

After you have port forwarded the required port, created a DDNS account, and enabled DDNS on your system, you must enter the DDNS URL into Internet Explorer to access your NVR.

The DDNS URL must include **http://**, the name of your DDNS URL, **followed by a colon**, then the **port number of your NVR**.

For example:

http://tomsmyth.myddns-flir.com:80

DDNS URL
Port Number


NOTE: If you change your HTTP port number (port 80) to a different port, you must enter your port number after the DDNS address.

alerts for motion detection or other events.

NOTE: To send out motion detection alerts, you must enable the **Send Email** option for motion detection on each camera. For details, see “Configuring Motion Detection Events” on page 28.


To configure Email Alerts:

1. From live view, right-click and select **Main Menu**. Log in if prompted.
2. Click **Setting**→**Network**.
3. Click **Network Setting**.

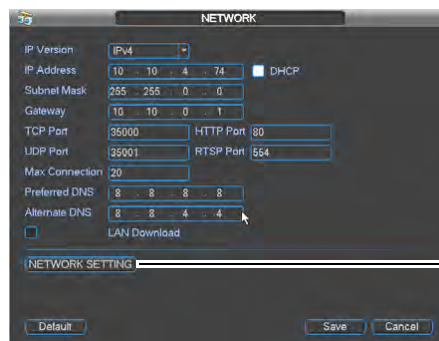


Click Network Setting

4. Check **Email**. Double-click **Email**.

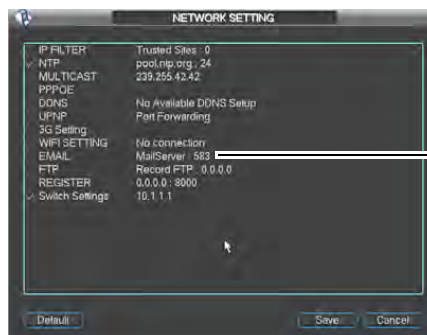


Check Email and then double-click Email

Configuring Email Alerts

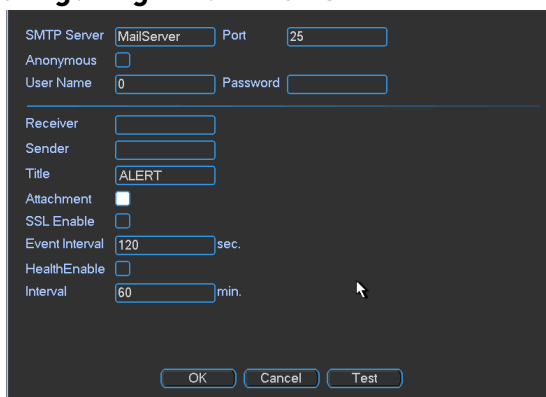

You can configure the system to send out email

5. Configure the following:

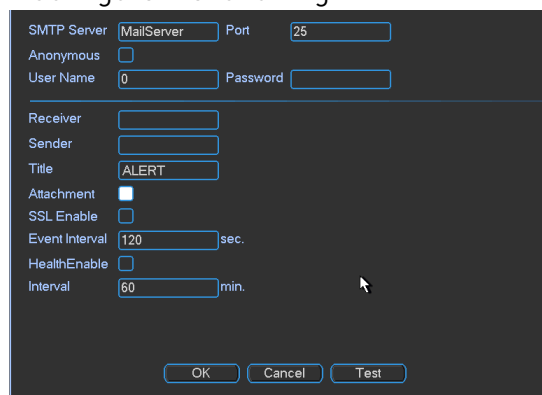


- **SMTP Server:** Enter the **SMTP server address**.

- **Port:** Enter the port used by the SMTP server.
- **Anonymous:** Check if your server supports anonymous log ins. Otherwise, leave this unchecked.
- **User Name:** Enter the **SMTP user name**.
- **Password:** Enter the **SMTP password**.
- **Receiver:** Enter the email address that will receive alerts.
- **Sender:** Enter the sender's email address.
- **Attachment:** Check to include a jpg image attachment of the camera.
- **Title:** Enter the subject line for email alerts.
- **Encrypt Type:** Select **SSL** or **TLS** if your server uses encryption. Select **None** if your server does not use encryption.
- **Event Interval:** Enter the interval between alert emails.
- **Health Enable:** Check to enable health check emails. Health check emails will be sent periodically to ensure that the system is functioning normally.
- **Interval:** Enter the interval in minutes for health check emails.

6. Click **Test** to send a test email.
7. Click **OK**.
8. Click **Save** to save settings.

Configuring Switch Settings

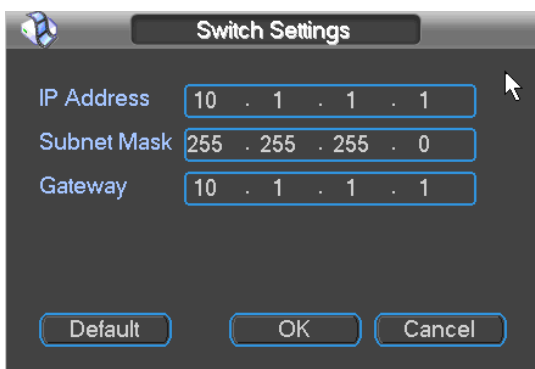

The screenshot shows a 'Switch Settings' dialog box with a dark background. It has three input fields: 'IP Address' with the value '10 . 1 . 1 . 1', 'Subnet Mask' with '255 . 255 . 255 . 0', and 'Gateway' with '10 . 1 . 1 . 1'. At the bottom, there are three buttons: 'Default', 'OK', and 'Cancel'.

You can configure the networking settings for

the internal PoE switch.

NOTE: Changing this information from the default values may disrupt the connection to the cameras. Make sure your IP cameras are using DHCP or IP addresses that are compatible with your selected settings.

To configure switch settings:

1. Click **Network Setting**.
2. Double-click **Switch Settings**.
3. Configure the **IP Address**, **Subnet Mask**, and **Gateway** for the internal PoE switch.
4. Click **OK**. Click **Save** to save changes. The system will restart.


Motion

The Motion sub-menu allows you to configure settings for motion detection.

Configuring Motion Detection Events

Motion Detection events allow the system to mark footage that has motion. This allows you to quickly locate relevant footage through Search. You can also configure system responses to motion detection events, such as activating the system buzzer or sending an email alert.

To configure Motion Detection events:

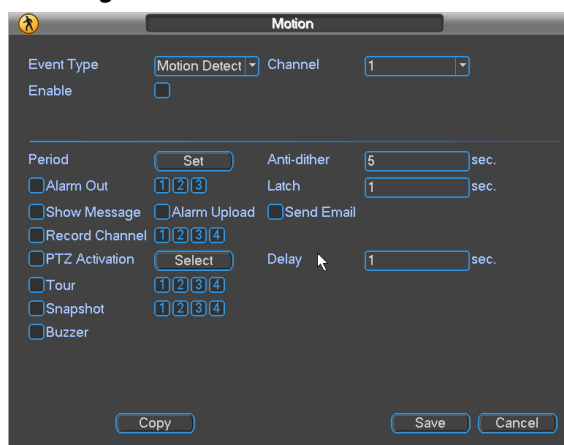

The screenshot shows a 'Motion' configuration dialog box. At the top, 'Event Type' is set to 'Motion Detect' and 'Channel' is set to '1'. Below this is an 'Enable' checkbox which is currently unchecked. The main section contains several options with associated settings: 'Period' with a 'Set' button, 'Anti-dither' set to '5' sec, 'Alarm Out' with a '1|2|3' selector, 'Latch' set to '1' sec, 'Show Message' with an unchecked checkbox, 'Alarm Upload' with an unchecked checkbox, 'Send Email' with an unchecked checkbox, 'Record Channel' with a '1|2|3|4' selector, 'PTZ Activation' with a 'Select' button, 'Delay' set to '1' sec, 'Tour' with a '1|2|3|4' selector, 'Snapshot' with a '1|2|3|4' selector, and 'Buzzer' with an unchecked checkbox. At the bottom, there are 'Copy', 'Save', and 'Cancel' buttons.


1. Under **Event Type**, select **Motion Detect**.
2. Under **Channel**, select the channel you would like to configure.
3. Check **Enable** to enable motion detection on the selected channel.

4. Under **Sensitivity**, select the motion detection sensitivity between **1** (lowest) and **6** (highest).
5. Under **Anti-dither**, enter the anti-dither time. After a motion event occurs and motion stops, if motion is detected within the anti-dither time, the system continues the motion event and includes the new motion within the first event, rather than creating a new motion event.
6. Under **Delay**, enter the post-recording time.
7. To configure a schedule when motion detection will be enabled on this channel, click **Set** next to Period. Configure times when motion detection will be enabled. For example, you may want to disable motion detection during business hours and enable it outside of business hours. Click **OK** when finished.

NOTE: This setting can override scheduled motion recording. This means that motion recording will only take place at times that are enabled both in the Schedule menu and here.

8. Configure the following system actions when motion is detected:
 - **Show Message:** Check to enable an on-screen pop-up. On-screen pop-up shows the channels an event occurred on and the type of event.
 - **Send Email:** Check to enable email alerts. You must configure email alerts before you will be able to receive them (see “Configuring Email Alerts” on page 27).
 - **Record Channel:** Select the channels that will record when motion is detected on the selected channel.
 - **Buzzer:** Check to enable the system buzzer.
 - **Snapshot:** Unsupported.
9. Click **Save** to save changes.

Display

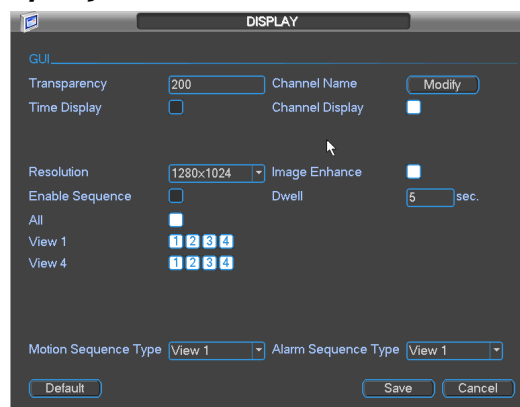

The Display sub-menu allows you to configure the system's display settings, such as the monitor resolution.

To configure display settings:

1. Configure the following, as needed:
 - **Transparency:** Select the menu transparency between **128** (lowest) and **255** (highest).
 - **Channel Name:** Click **Modify** and enter names for your IP cameras. Click **Save** when finished.
 - **Time Display:** Check to enable system time display.
 - **Channel Display:** Check to enable camera title display.
 - **Resolution:** Select the correct resolution for your monitor. The system will reboot when you save changes.
- NOTE:** If you select a resolution that is unsupported on your monitor, you may see a black screen when the system restarts. To reset the system resolution to the default resolution (1024x768), turn the system off and on using the power switch and immediately press the **Shift** button 7 times on the front panel.
- **Image Enhance:** Check for the NVR to digitally improve the video quality on the live display. This setting does not affect recordings.
 - **Enable Sequence:** Check to enable Sequence mode. When Sequence mode is

activated, the system will cycle through enabled views and a [arrows] icon is shown on screen. You can click this icon to pause Sequence mode.

- **View 1/View 4/View 8/View 9/View 16:**


Check to enable views to be shown in Sequence mode. View 1 allows you to enable/disable specific channels in Sequence mode. Other View options allow you to enable/disable views based on pages. On 8-channel models for example, View 4 #1 represents channels 1~4 and #2 represents channels 4~8.

NOTE: Available options depend on the number of channels your NVR has.

- **Dwell:** Enter the Dwell time in seconds. The Dwell time is the amount of time views are shown on screen before changing in Sequence mode.
- **Motion Sequence Type:** (8/16-channel models only) Select the view type that will be viewed when motion is detected.

2. Click **Save** to save changes.

Default

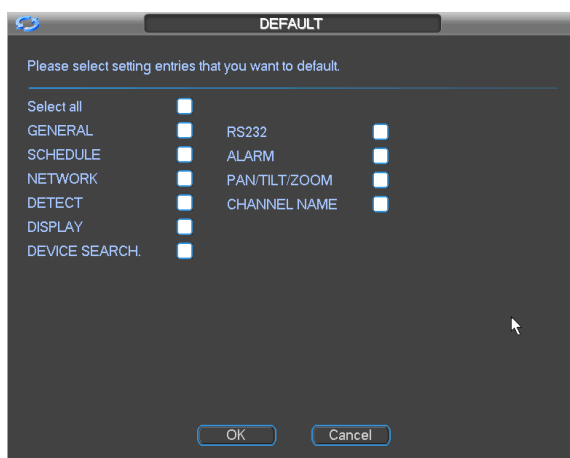

The Default sub-menu allows you to reset the system to factory default settings.

NOTE: Resetting to factory defaults does not reset user accounts or passwords.

To reset the system to factory default settings:

1. Check the settings you would like to reset to default settings.
2. Click **OK**.



Device Search

The Device Search menu allows you to manage connections to your IP cameras. SyncrolP cameras connected to the PoE (Power over Ethernet) Ports will automatically be detected by your NVR. Device Search also allows you to search for IP cameras connected to the LAN. Some configuration may be required to connect IP cameras from other manufacturers.

NOTE: For a list of 3rd party IP cameras supported, visit www.digimerge.com.

Adding Cameras from the LAN


1. Connect the camera to a router or switch on the same network as the NVR.
2. Right-click and select **Device Search**. Log in using the admin account (the default User Name is **admin** and the default Password is **000000**).
3. Click **IP Search**. The NVR scans your LAN for compatible IP cameras.



4. Check the camera(s) you would like to add and click **Add**.



5. If the Status indicator is green, the camera is connected and no further configuration is required. Click **OK** to save changes.
6. If the Status indicator is red, click . Update the following information, as needed.

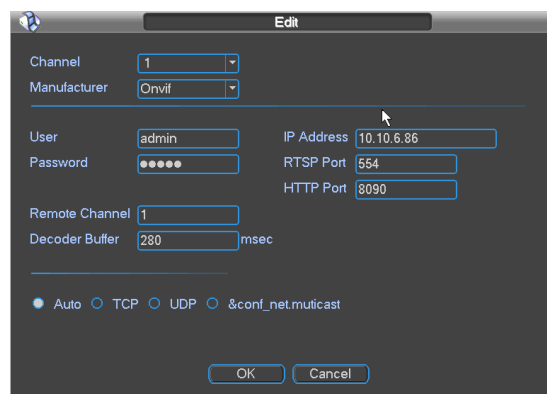


- **Manufacturer:** Select the manufacturer of your IP camera.
- **User:** Enter the camera's user name.
- **Password:** Enter the camera's password.
- **RTSP Port:** Enter the camera's **RTSP Port**.
- **HTTP Port:** Enter the camera's **HTTP Port**.

NOTE: See the manufacturer's user manual for your IP camera for the default user name, password, etc.

7. Click **OK**. Click **OK** again to save changes.

Manual Add

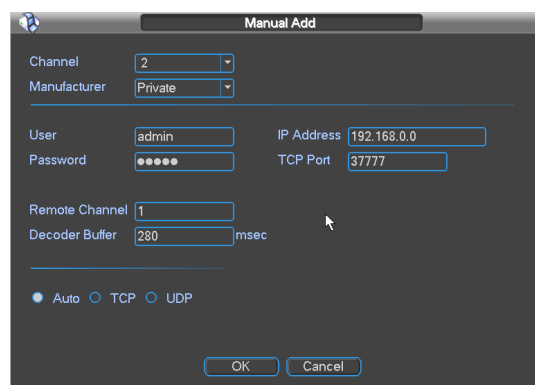

If the IP address of your IP camera does not appear when you run IP search, ensure that the camera is connected to the same LAN as

the NVR or is connected to the PoE Ports. You may attempt to manually connect IP cameras using Manual Add.

To manually add a camera to the NVR:

1. Click **Manual Add**. Configure the following:
 - **IP Address:** Enter the public IP address of your IP camera.
 - **Manufacturer:** Select the manufacturer of your IP camera.
 - **User:** Enter the camera's user name.
 - **Password:** Enter the camera's password.
 - **RTSP Port:** Enter the camera's **RTSP Port**.
 - **HTTP Port:** Enter the camera's **HTTP Port**.


NOTE: See the manufacturer's user manual for your IP camera for the default user name, password, etc.

2. Click **OK**. Click **OK** again to save changes.


Editing Cameras

If the Status indicator on cameras connected to the NVR via PoE or LAN is red or if you change the connection details for your IP cameras, you will need to update this information.

To edit cameras:

1. Click  next to the camera you would like to edit.
2. Configure the connection information as needed.
3. Click **OK**. Click **OK** again to save changes.

Deleting Cameras

- Click  next to the camera you would like to delete.



Advanced

Configure HDD, user accounts, and error functions. Configure auto-restart. Save/restore system configuration. Access Recording Menu.

HDD Management



HDD Management allows you to format hard drives and manage hard drive settings. The top right corner shows hard drive status.

- **O:** Normal hard drive operation.
- **X:** Hard drive error.
- **-:** Hard drive is not installed.

Formatting Hard Drives


You must format hard drives before you may use them with the system.

ATTENTION: Formatting the HDD erases *all data* on the hard disk. This step cannot be undone. System settings will not be erased.

To format a hard drive:

1. From Live View, right-click and select **Main Menu→Advanced→HDD Management**.
2. Under **HDD No.**, select the hard drive you would like to format. Information about the hard drive appears in the lower section of the menu.
3. Under **Set to**, select **Format**.

- Click **Apply**. Click **OK** to confirm. Wait for the hard drive to format. Hard drives become Read/Write hard drives by default when formatted.

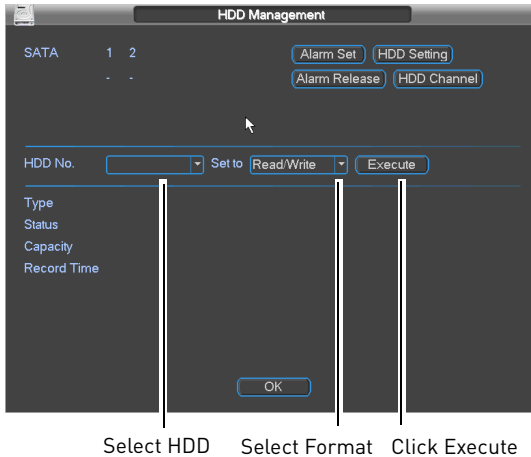

Selecting Hard Drive Types

The system supports the following hard drive types:

- **Read/Write:** Normal recording hard drive.
- **Read only:** Do not record on the hard drive.
- **Mirroring:** Record in parallel to Read/Write hard drive for cameras enabled for mirroring. This allows you to create automatic backups of recordings.

NOTE: Mirroring must be enabled in the schedule (for details, see "Schedule" on page 24).

NOTE: Mirroring begins backing up data starting when the hard drive is configured for mirroring.

To select hard drive types:


- Under **HDD No.**, select the hard drive you would like to format.
- Under **Set to**, select the hard drive type.
- Click **Execute**.
- Right-click to exit the HDD Management menu. The system will restart.

Configuring Hard Drive Group Settings


Hard drive group settings allows you to balance recordings for your IP cameras across multiple hard drives.

To configure hard drive group settings:

- Click **HDD Setting**.
- Under **HDD Group** select the group number you would like to assign to each hard drive.

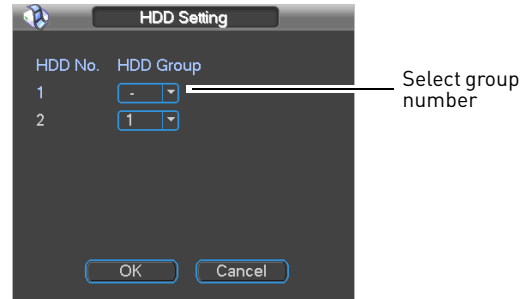


- Click **OK**. The system will restart.
- Return to the HDD Manage menu (right-click→**Main Menu**→**Advanced**→**HDD Manage**). Click **HDD Channel**.

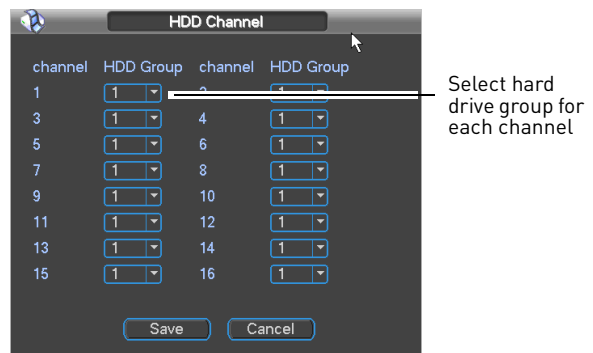

- For each channel, select the hard drive group you would like it to record to.
- Click **OK**.

Warning

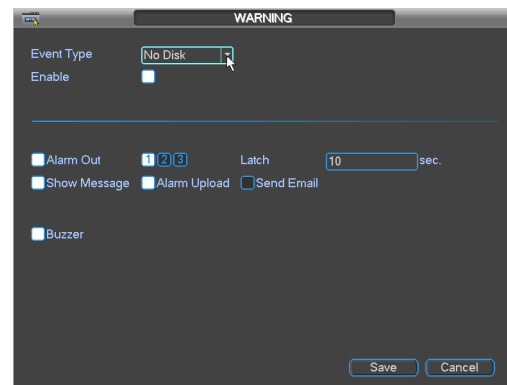


The Warning sub-menu allows you to

configure actions taken when system errors occur.

To configure system error actions:

- Under **Event Type**, select one of the following system errors to configure: **No Disk**, **Disk Error**, **Disk No Space**, **Net Disconnection**, **IP Conflicted**, or **MAC Conflicted**.
- Check **Enable** to enable warnings for the selected Event Type.
- Configure the following actions that will be taken when errors occur:
 - **Show Message:** Check to show pop-up window with information related to the error.
 - **Send Email:** Check to enable email message. You must configure email alerts before you will be able to receive them.
 - **Buzzer:** Check to enable system buzzer.
- Click **Save** to save changes.

Record

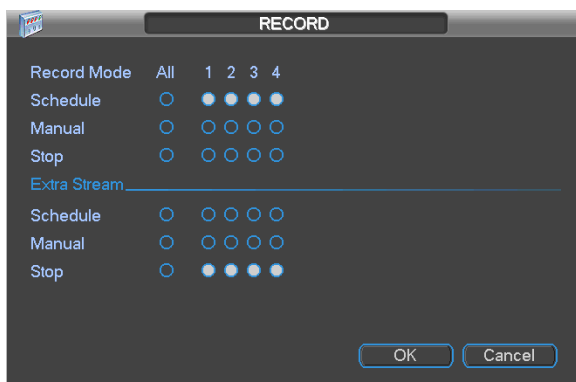

The Record menu is used control manual recording for connected cameras.

The Record menu is divided into the following sections.

- The Record Mode section defines settings for the main (high quality) recording stream.
- The Extra Stream section defines settings for an optional lower quality recording stream. This is useful because you can record the Extra Stream to the hard drive

and stream it for playback to remote devices. This saves bandwidth during remote playback.


NOTE: Enabling Extra Stream Recording is required to use playback mode on a smartphone or tablet.

NOTE: Recording the Extra Stream will increase the amount of disk space required for recording.

To configure manual recording:

- Right-click in live view and select **Record**. Log in if prompted.
OR
Click **Main Menu**→**Advanced**→**Record**. Log in if prompted.
- Under **Record Mode**, select the main stream recording option under each camera or under **All** to configure all cameras:
 - **Schedule:** Camera will record according to settings configured in the schedule.
 - **Manual:** When selected, the camera will use continuous recording.
 - **Stop:** When selected, the camera will not record.
- Under **Extra Stream**, configure recording options for the Extra Stream.
- Click **OK** to save changes.

Account

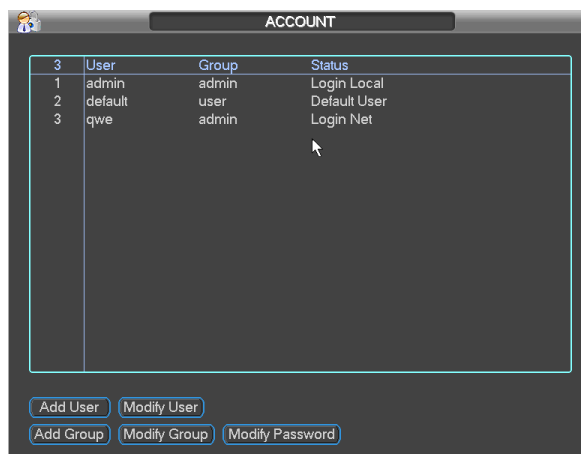


The Account sub-menu allows you to configure user accounts. Accounts are organized into groups, and receive permission to access

system functions based on their group's settings. By default, the following user groups are configured on the system:

- **admin:** Accounts in the admin group are system administrators. They have full access to the system, may configure all system settings, and can manage user accounts.
- **user:** Accounts in the user group are normal users. They have limited access to system menus.

Adding Accounts

1. Click **Add User**.

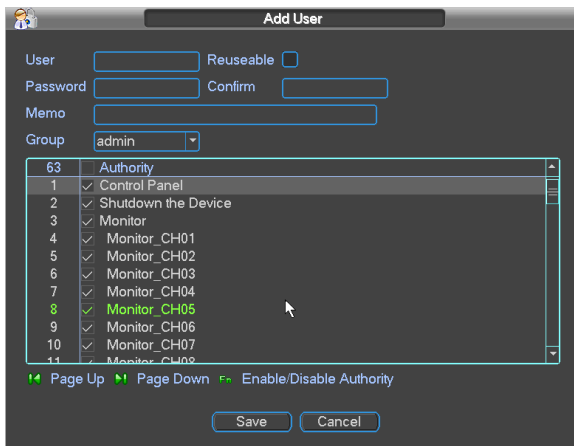


2. Configure the following:
 - **User:** Enter a user name for the account.
 - **Memo (Optional):** Enter comments for the account.
 - **Password:** Enter a password for the account. Repeat password under **Confirm**.
 - **Reusable:** Check to enable multiple users to connect using this account.
 - **Group:** Select the group that the account will be included in.
3. In the bottom portion of the screen, select the permissions that will apply to the user. By default the account will have all permissions that are enabled for its group. An account cannot have more permissions than its group.
4. Click **Save** to save changes.

Modifying Accounts

Admin accounts may modify the user name, password, and permissions of user accounts. User accounts may modify their own password.

To modify account settings:

1. Click the account in the list.
2. Click **Modify User**.

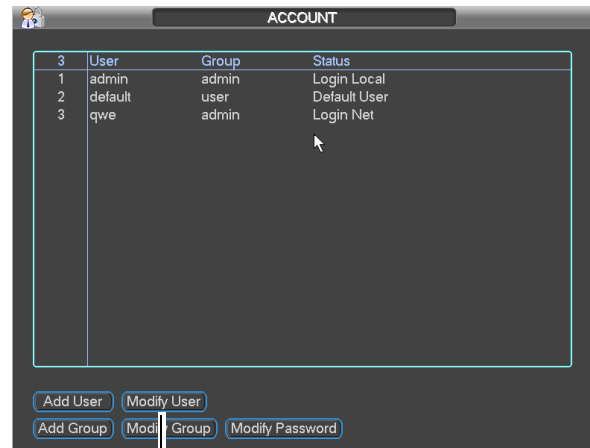


Click Modify User

3. Under **User**, select the account you would like to modify.
4. Configure the account settings and permissions as necessary and then click **Save**.

To modify an account password:

1. Click **Modify Password**.

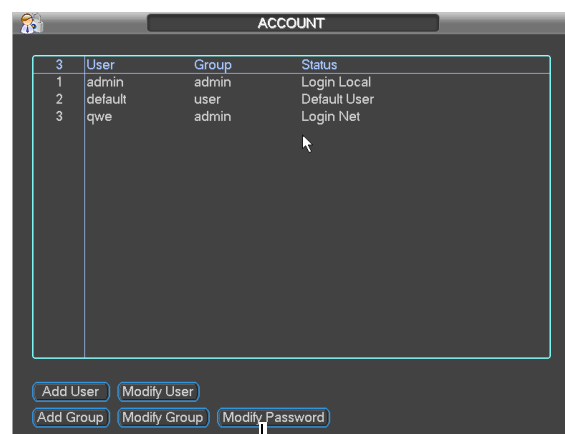

Click Modify Password

2. Under **User**, select the account you would like to modify.
3. Under **Old Password**, enter the account's previous password.
4. Under **New Password**, enter the new password for the account. Repeat it under **Confirm**.
5. Click **Save**.

Deleting Accounts


1. Click the account in the list.
2. Click **Modify User**.
3. Under **User**, select the account you would like to delete.
4. Click **Delete** then click **OK** to confirm.

Adding Groups

Groups allow you to easily manage permissions for multiple user accounts. A user account by default has all permissions available to the group it is in, and it cannot be given permissions the group does not have.

To add a group:


1. Click **Add Group**.

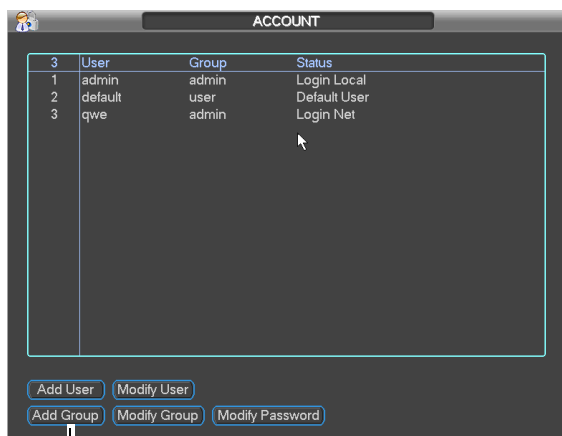

Click Add Group

2. Under **Name**, enter a name for the group.
3. (Optional) under **Memo**, enter comments for the group.
4. Configure group permissions as needed. Note that any user accounts added to the

group may not be given any permissions that are not selected.

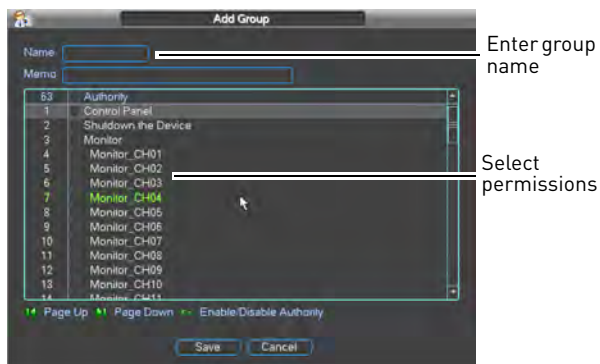

5. Click **Save**.


Deleting Groups

1. Click **Modify Group**.
2. Under **Group**, select the user group you would like to delete.
3. Click **Delete** and then click **OK** to confirm.

Modifying Groups

1. Click **Modify Group**.
2. Under **Group**, select the user group you would like to modify.
3. Update group settings as needed and then click **Save**.

Auto Maintain

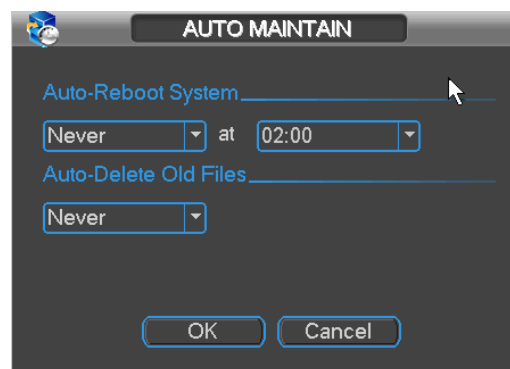

The Auto-Maintain sub-menu allows you to configure your NVR to automatically reboot once a day or once a week. For system stability, it is recommended to enable auto-rebooting.

The Auto-Maintain sub-menu also allows you to set the NVR to automatically delete files that are older than a specified number of days.

To configure Auto Maintain settings:

1. Under **Auto-Reboot System**, select the day of the week you would like the system to reboot on, select **Everyday** to reboot the system everyday, or select **Never** to disable auto-rebooting. On the right, select the time of day you would like the system to reboot.
2. Under **Auto-Delete Old Files**, select **Never** to disable auto-deleting of old recordings or select **Customized** to enable auto-deleting.
 - If you select Customized, enter the number of days the system will retain recordings.

NOTE: The system must have sufficient storage space to keep recordings for the specified duration.


3. Click **OK** to save changes.

4. Click **Export**.

To import a saved system configuration:

1. Insert a USB flash drive with a saved system configuration into one of the USB ports on the system.
2. Right-click and select **Main Menu→Advanced→Config Backup**.
3. Check the USB flash drive with the saved system configuration file.
4. Click **Import**.
5. Click **OK**. The system will restart.


Config Backup

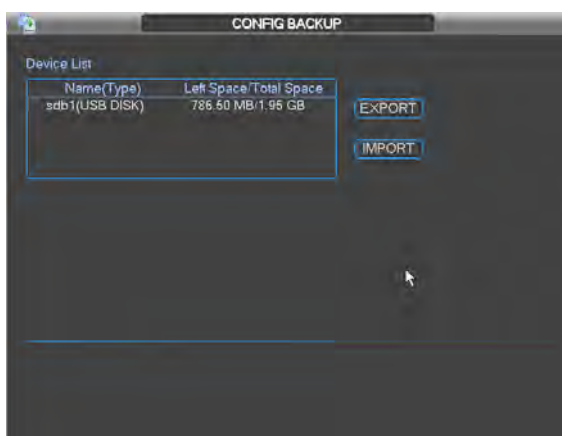

The Config Backup sub-menu allows you to export your system configuration to a USB flash drive (not included) or to import a saved configuration. You can import a saved configuration from another NVR of the same model and channel configuration.

To export the system configuration to a USB flash drive:

1. Insert a USB flash drive into one of the USB ports on the system.
2. Right-click and select **Main Menu→Advanced→Config Backup**.
3. Check the USB flash drive you would like to export to in the list.

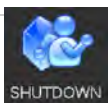


Shutdown

Use the Shutdown menu to shutdown, restart, or log out of the system.

To access the Shutdown menu:

1. From live view, right-click and select **Main Menu**. Login if prompted.
2. Click **Shutdown**.
3. Select one of the following:

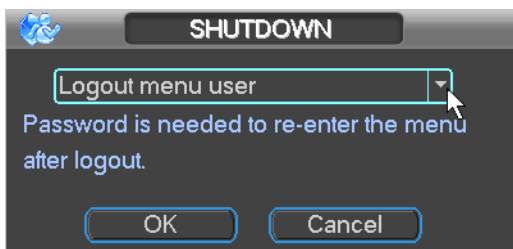

- **Logout menu user:** Log out the account that is currently active.
 - **Switch user:** Log out the account that is currently active, and sign in with a new account.
 - **Shutdown**
 - **Restart system**
4. Click **OK** to complete the selected action.

FLIR SYNCROIP NVR CENTRAL MANAGEMENT SOFTWARE

FLIR SyncroIP NVR CMS is a central management software that allows you to view and manage multiple DNR200 series NVRs.



System Requirements

Your system must meet or exceed the system requirements below:

Description	Requirement
CPU	Core 2 Duo 3.0GHz
Operating System	Windows™ 8/7/Vista
Memory	2GB
Video	512 MB of video memory and above
Network (LAN)	10/100 BaseT Network
Network (WAN)	1 Mbps upstream High-speed Internet service is required to remotely connect to your system.

NOTE: To connect to your system on Mac, please visit www.digimerge.com for instructions.

Prerequisites


- Port forward the Client and HTTP ports (default 80 and 35000) on the router that the NVR is connected to.
- Create a DDNS account.
- Enable DDNS in the NVR.


- Enter the DDNS information into the NVR.
- NVR must have access to the Internet or Local Area Network (LAN).

Installing FLIR SyncroIP NVR CMS

Install FLIR SyncroIP NVR CMS from the CD included with your NVR or by downloading it from www.digimerge.com. It is recommended to visit www.digimerge.com for the latest software versions.

To start the software:

- Double-click the FLIR SyncroIP NVR CMS icon () on the desktop.
- Click **Login**.

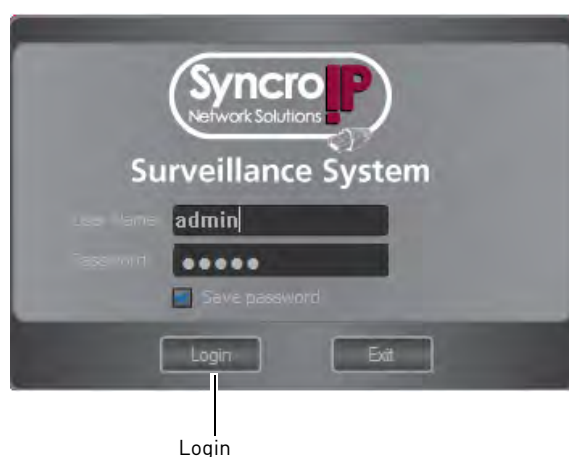

NOTE: The CMS default User Name is **admin** and the Password is **admin**.

Adding a NVR from the local area network (LAN)


Once you open the software, you can add a NVR.

Prerequisites:


- Connect the NVR to a router or switch on the network.
- Install the CMS on a computer in the same LAN as the NVR.

To add a NVR:


1. Click **Config Manager**→**Device Manage**.

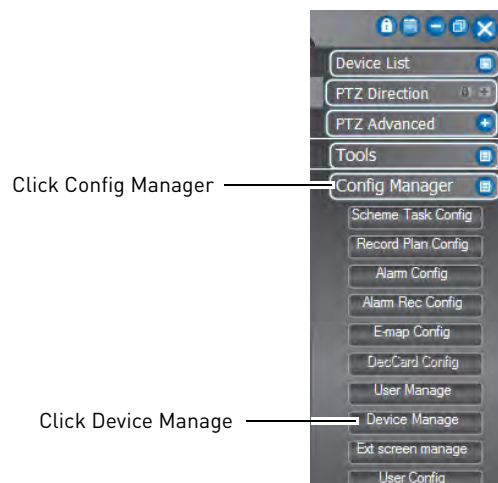

2. Click **Search Device**. If a Windows Firewall alert appears, click **Allow**.
3. Check the NVR and click **Add Management**.

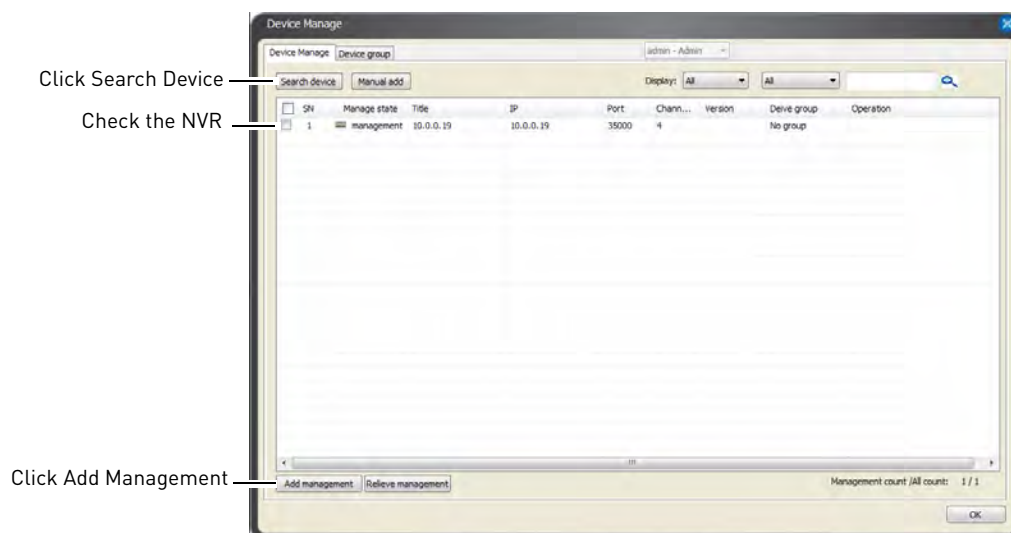


4. Enter the **User Name** (default: **admin**) and **Password** (default: **000000**) for the NVR and click **OK**.

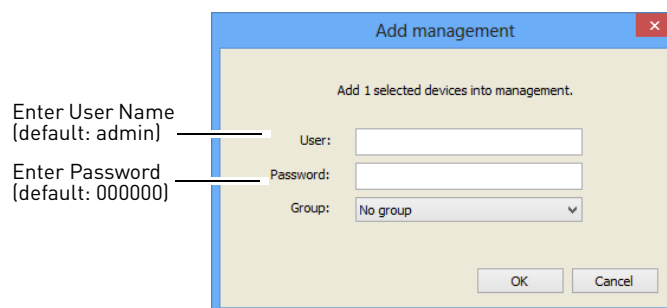

5. Click **OK**.
6. Click **Device List**.

7. Click **+** next to No Group.
8. Double-click the NVR.
9. Click-and-drag the NVR to the display area to view.

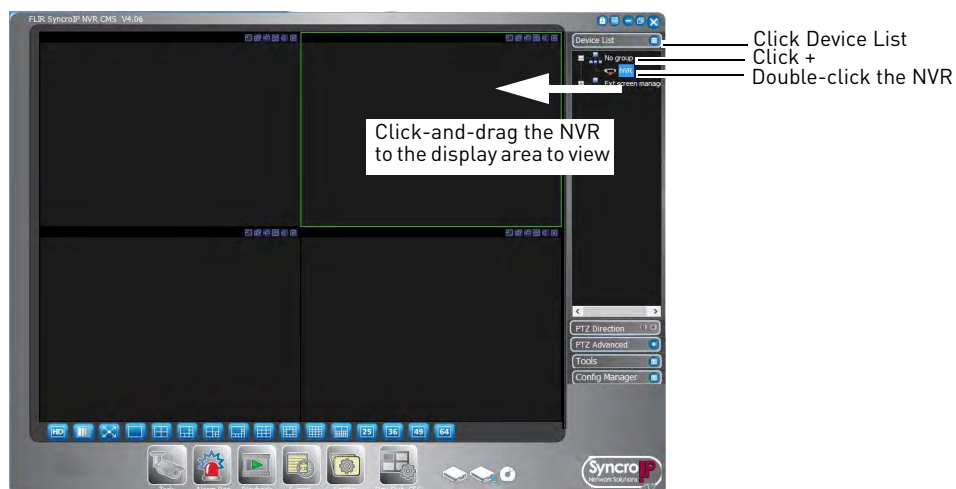

Adding a NVR using a DDNS address


If you have NVR systems with DDNS set up, you can add them to the CMS.

Prerequisites:

- Create a DDNS account. For details, see “Appendix D: Setting Up DDNS Service” on page 97.
- Enter the DDNS information into the NVR locally.
- Port forward the Client and HTTP ports (default, ports **80** and **35000**) on the router.


To add a NVR using a DDNS address:

1. Click **Config Manager**→**Device Manage**.

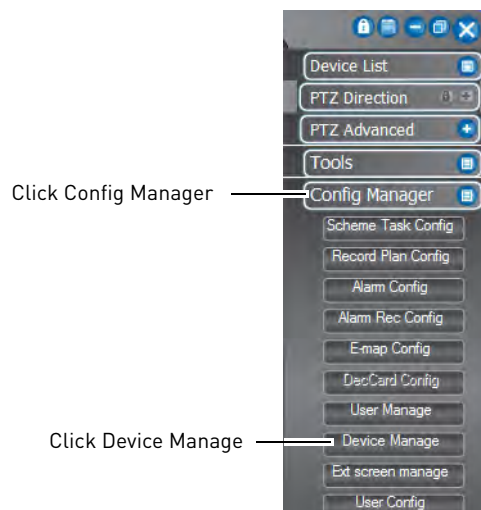

2. Click **Manual Add**.

Click Manual Add

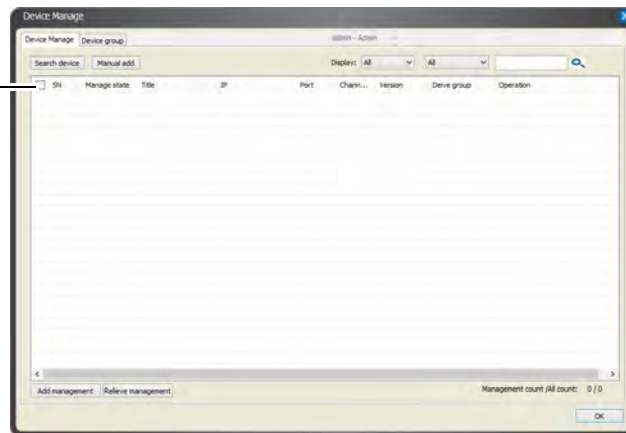


3. Configure the following:

- **Title:** Enter a name for your NVR of your choice (e.g. home or office).
- **Type:** Select **NVR**.
- **Add Type:** Select **Domain Name**.
- **Domain Name:** Enter the **Domain Name** from the confirmation email after your registered for DDNS, followed by **.myddns-flir.com**.
- **Port:** Enter the **Client Port** (default: **35000**).
- **User:** Enter the NVR's user name (default: **admin**).
- **Password:** Enter the NVR's password (default: **000000**).


A screenshot of the 'Add device' dialog box. It has a title bar with 'Add device' and a close button. The main area is titled 'Input information' and contains several fields: 'Title' (text box with 'NVR'), 'Type' (dropdown menu with 'NVR'), 'Display Amount' (dropdown menu with '1'), 'Add type' (radio buttons for 'Single device' and 'Domain name', with 'Domain name' selected), 'Domain name' (text box with 'tomsmith.myddns-flir.com'), 'Port' (text box with '35000'), 'User' (text box with 'admin'), 'Password' (text box with masked characters), and 'Group' (dropdown menu with 'No group'). There are also checkboxes for 'Continuous add' and buttons for 'Add' and 'Close'. Lines connect the text instructions from the previous list to the corresponding fields in this dialog box.

4. Click **Add**, then click **OK**.
5. Click **Device List**.
6. Click **+** next to No Group.
7. Double-click the NVR.


8. Click-and-drag the NVR to the display area to view.

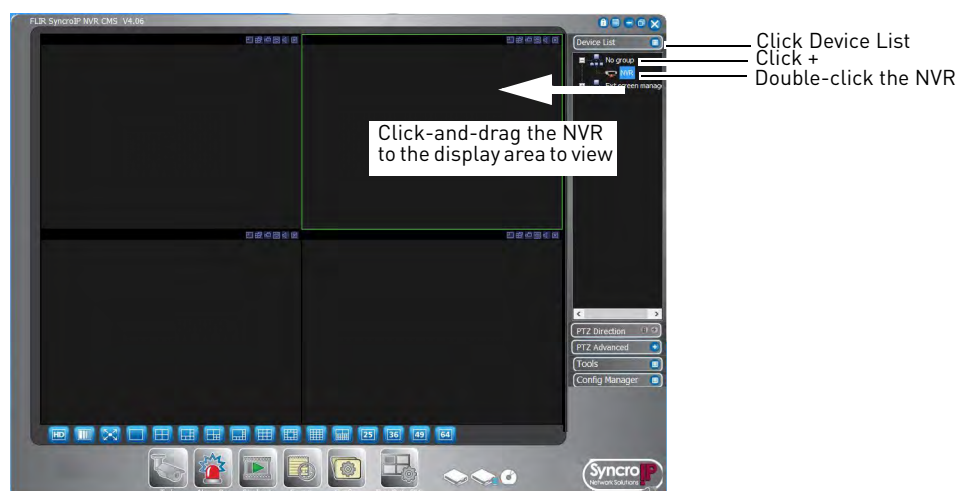

CMS Live Viewing Overview

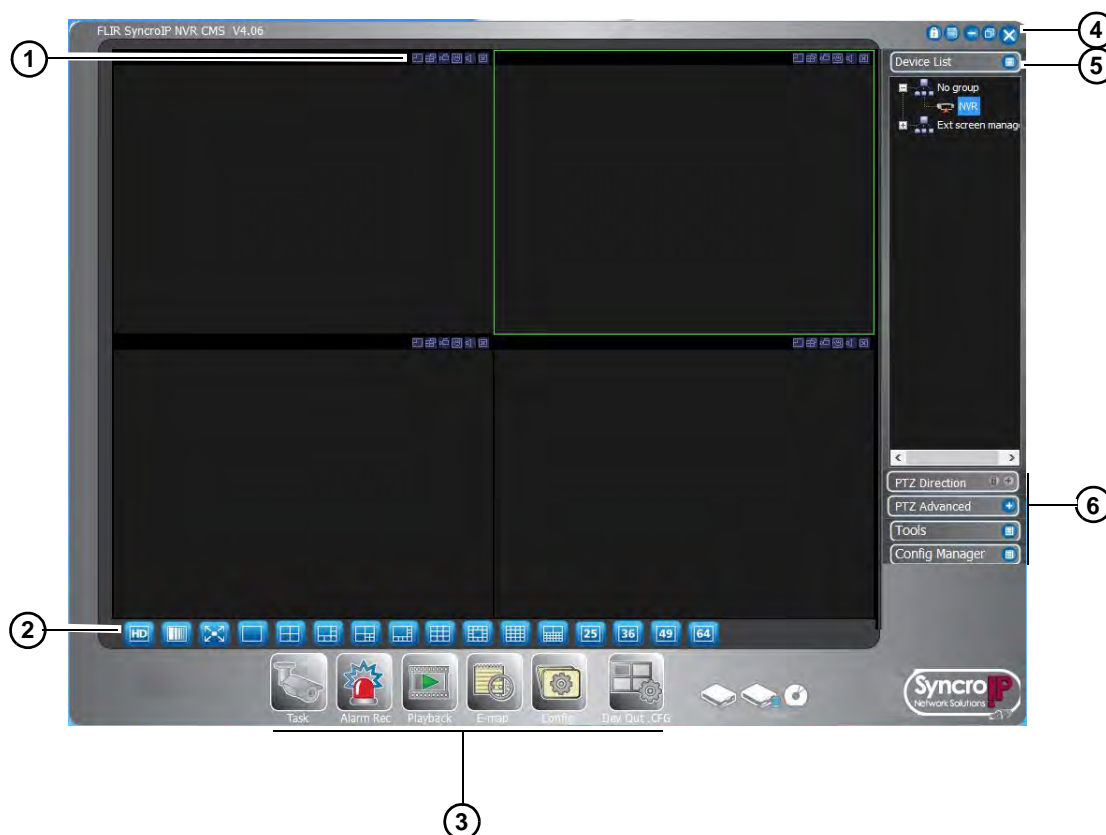

1. **Camera Controls:**

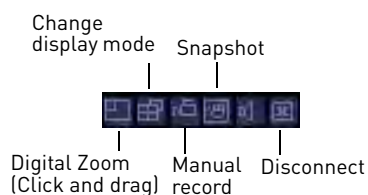


2. Live View Toolbar:



3. **CMS Quick Menus:** Click to access key CMS and NVR functions, such as Playback, event search (Alarm Rec), E-Map, and software configuration (Config).

4. CMS Window Controls:

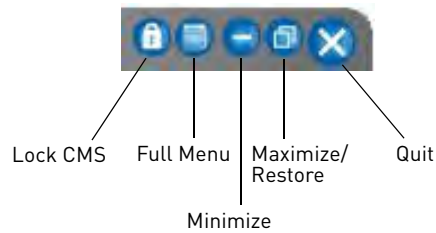


5. **Device List:** Open NVR's and IP cameras in live display.

- Click + next to NVR's or Groups to expand.
- Click and drag NVR's, Groups, or Cameras to the display area to open.
- Right-click NVR's, Groups, or Cameras to view system options.

6. CMS Menus:


- **PTZ Direction:** Access basic PTZ controls.
- **PTZ Advanced:** Access advanced PTZ controls (e.g. Auto Scan, Tour, etc.).
- **Tools:** Contains the following menus: Begin Record Plan, NVD Control, Health Report, Log Search, Alarm Video, Alarm Output, Color Config, Volume.
- **Config Manager:** Contains the following menus: Scheme Task Config, Record Plan Config, Alarm Config, Alarm Rec Config, E-Map Config, DecCard Config, User Manage, Device Manage, Ext Screen Manage, User Config.

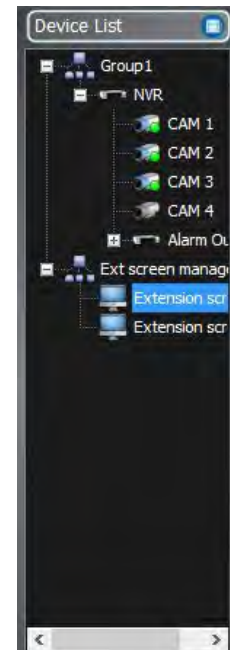


Using Alarm Rec (Event Search)

Alarm Rec allows you to search for events saved on the NVR.

To use Alarm Rec:

1. Click **Alarm Rec** ().
2. At the top of the screen, select the alarm type you would like to search.

3. Check **Search**.

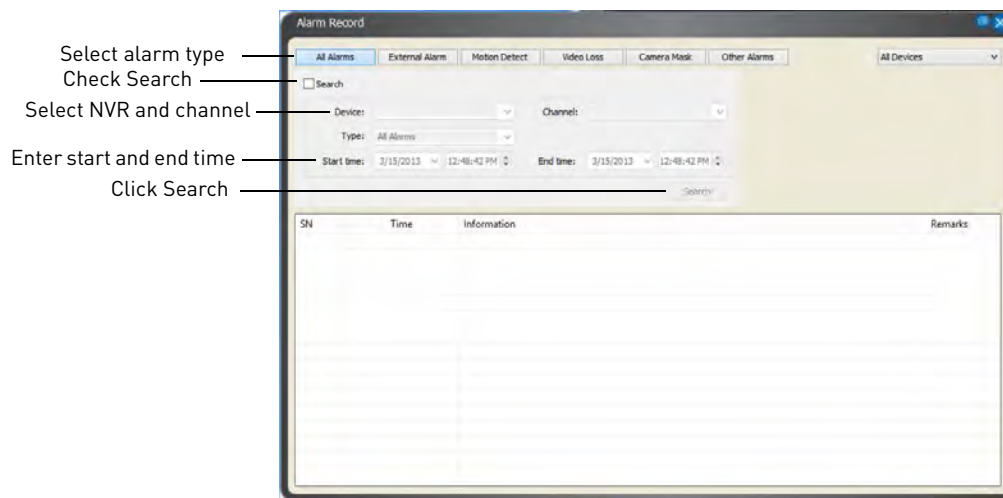


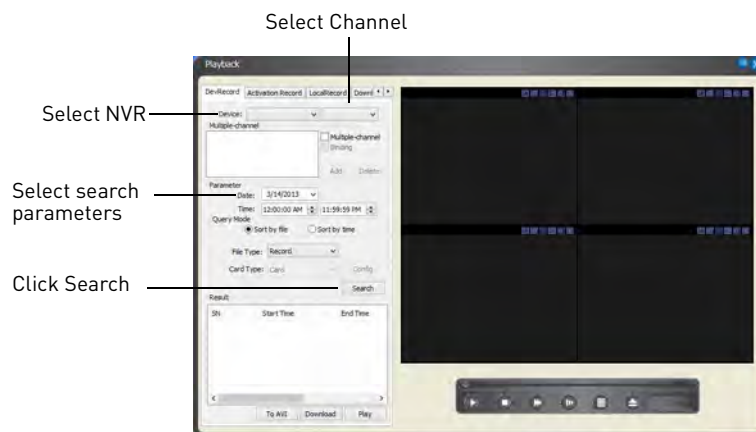
4. Under **Device**, select the NVR you would like to search.
5. Under **Start Time** and **End Time**, enter the start and end times for your search.
6. Click **Search**. A list of relevant alarms appears below.

Using Playback Mode

You can view recorded footage from your NVR's in the CMS software.

To use playback mode:

1. Click **Playback** ().
2. Under **Device**, select the NVR and channel you would like to search.




- Check **Multiple channel** to playback video from multiple cameras. Select camera and then click **Add**. Repeat to add additional cameras.
3. Under **Parameter**, select the start and end time for the search.
 4. Click **Search**.

5. Check video files to select and click **Play** to open.
OR, click **Download** to download the video files to the local computer.
OR, click **To AVI** to convert the video files to AVI and save to your local computer.

NOTE: You must stop playback before you may download video files.

Playback Controls

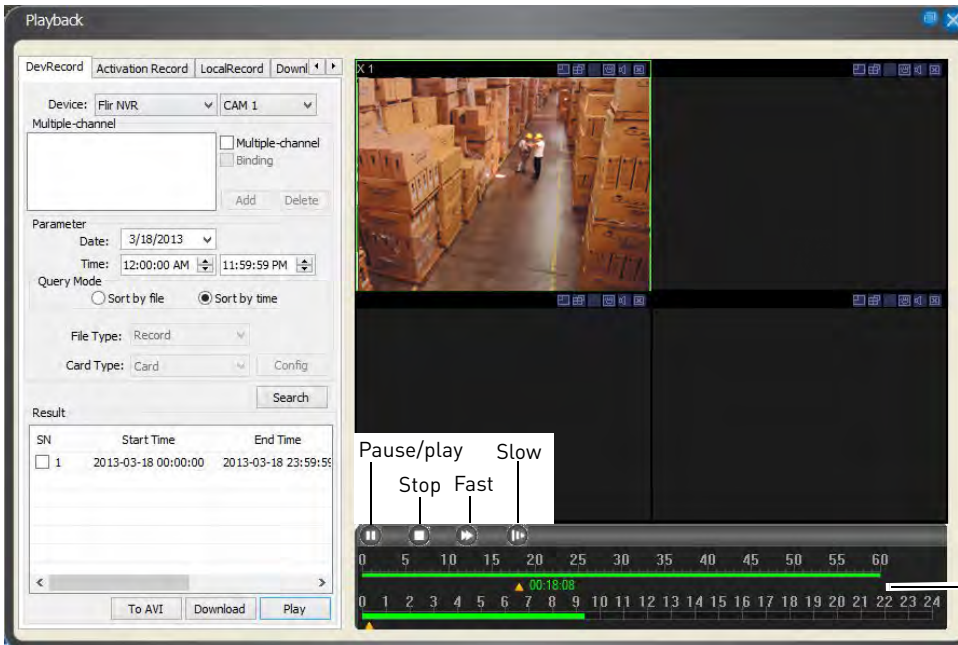

Configuring Monitoring Tasks and Projects


Tasks are used to configure the CMS to automatically cycle through different channel arrangements. Projects are used to automatically cycle through multiple tasks.

Configuring Tasks


1. Click **Config Manager**→**Scheme Task Config**.

2. Click **Monitor Task**.

Click Monitor Task

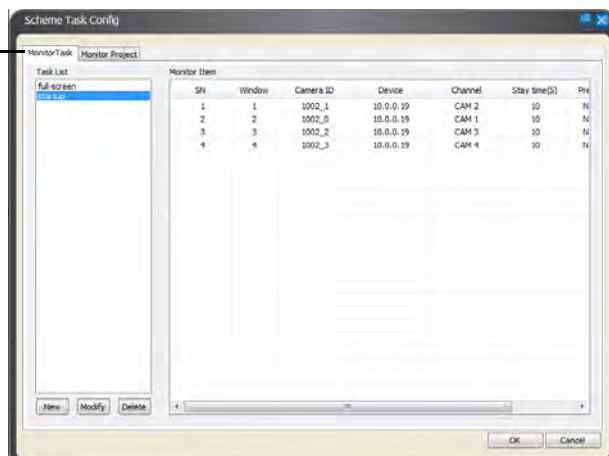3. Click **New**.4. Enter a **Task Name** of your choice.5. Under **Window**, select the split-screen mode you would like to show in the task.6. Under **Monitor Item**, configure the following:

- **Window:** Select the display window you would like to configure.
- **Device:** Click and drag the camera from the Device List in the main CMS window to the field to add it.
- **Stream Type:** Select **Main Stream** or **Extra Stream** to view the sub-stream.

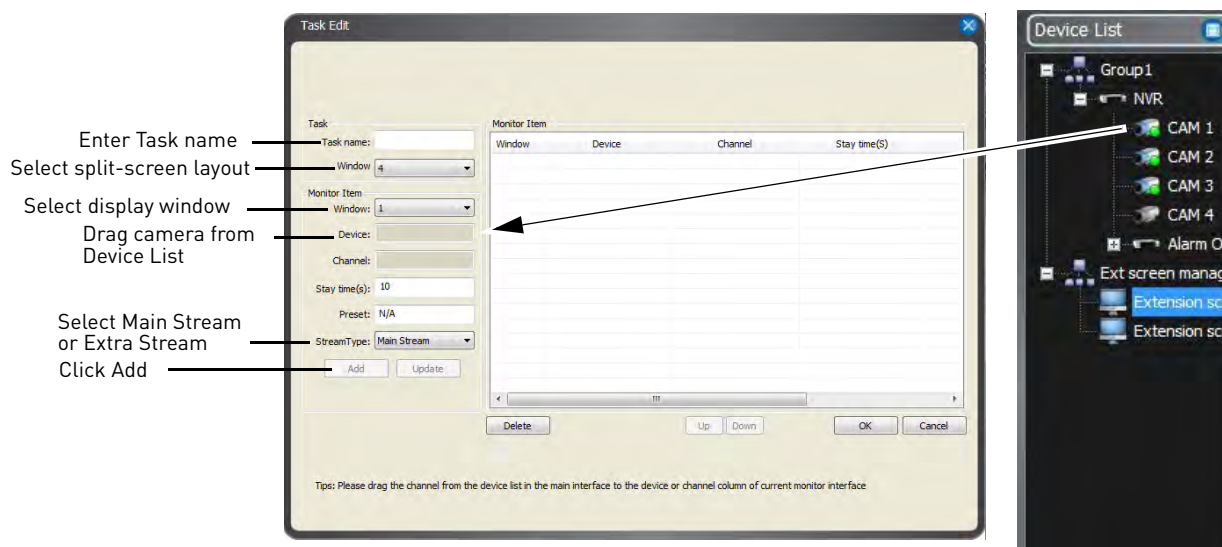7. Click **Add**. Repeat Steps 6 & 7 to configure additional screens.8. Click **OK**. Click **OK** to save changes.


Configuring Projects

Once you have multiple tasks set up, you can configure projects to automatically cycle through them.


To configure a project:

1. Click **Config Manager**→**Scheme Task Config**.
2. Click **Monitor Project**.

Click Monitor Project

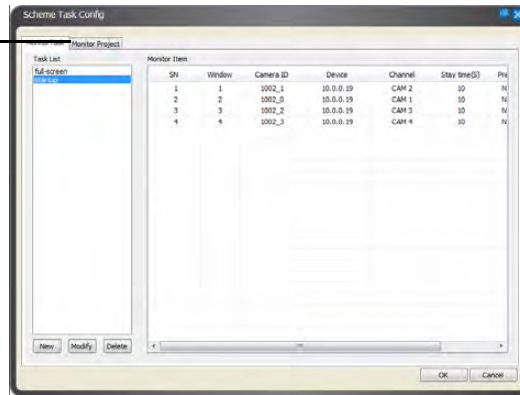

3. Click **New**.
4. Enter a **Name** for the project. **You may not change the name after the project is created.**
5. Under **Mode**, select **Tour Mode** or **Schedule Mode**. Tour Mode will cycle through tasks on a fixed interval. Schedule Mode will switch tasks at a pre-defined time of the day.

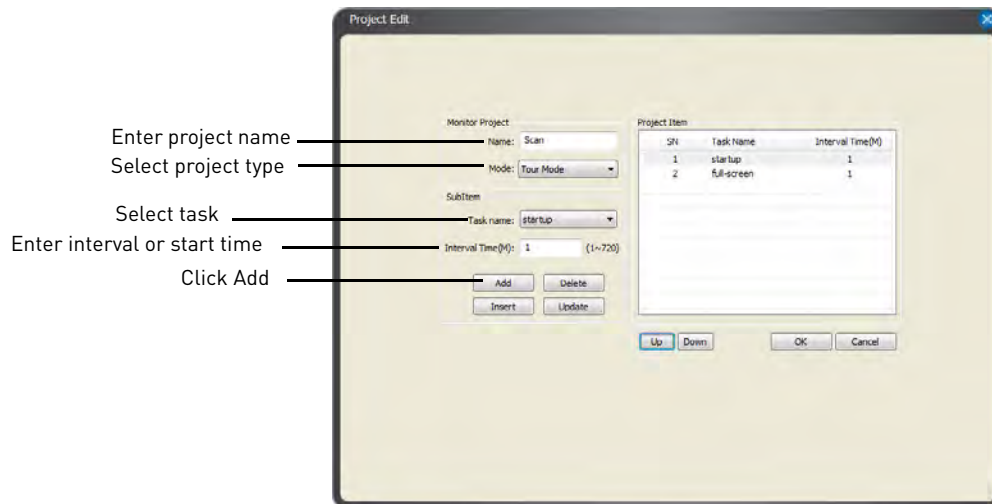

6. Under **Task Name**, select the task you would like to add to the project.
 - If you selected Tour Mode, enter the **Interval Time** in minutes that the task will run for before changing to the next task.
 - If you selected Schedule Mode, enter the time of day when the task will start running.
7. Click **Add**.
8. Repeat steps 6-7 for each additional task you would like to add to the project.
9. Click **OK**. Click **OK** to save changes.

Running Tasks and Projects

- Once you have configured tasks or projects, you may run them by clicking **Task (Task icon)** and then selecting the task or project you would like to run.

- You may also select a task or project to run when you first launch the CMS. For details, see “Configuring CMS Options” on page 52.

Using E-Map


The E-Map feature allows you to visually map your cameras over a .jpg image.

Configuring E-Map

Use the steps below to select a .jpg image to use for the E-Map and place your cameras.


To configure the E-Map:

1. Click **Config Manager**→**E-Map Config**.
2. Click **Picture Edit**.

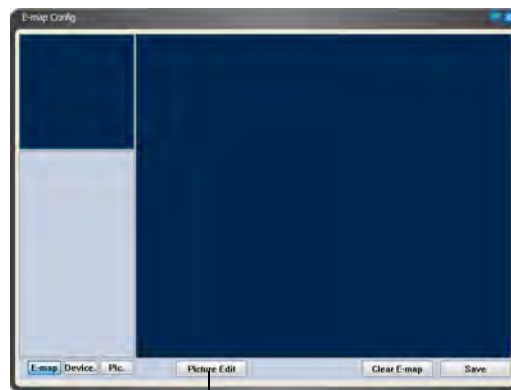


Click Picture Edit

3. Click **Add**.

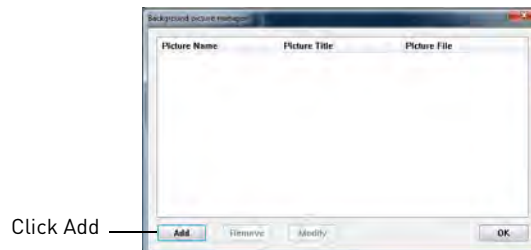

Click Add


4. Click **Browse**. Select a .jpg image on your computer to use as the E-Map.
5. Enter a **Name** and **Title** for your E-Map of your choice.

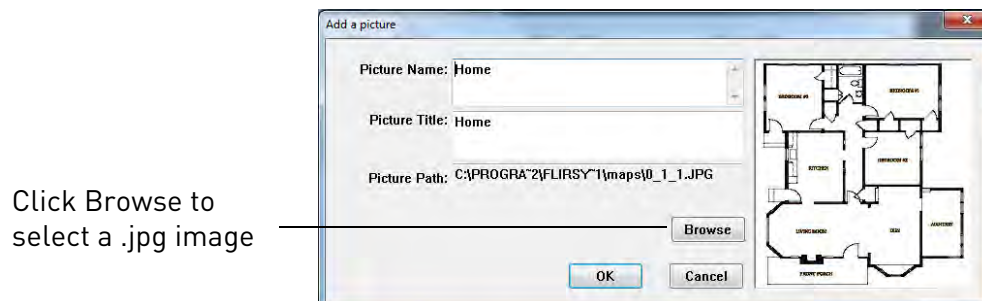


Click Browse to
select a .jpg image

6. Click **OK**.

7. Click **Pic**.

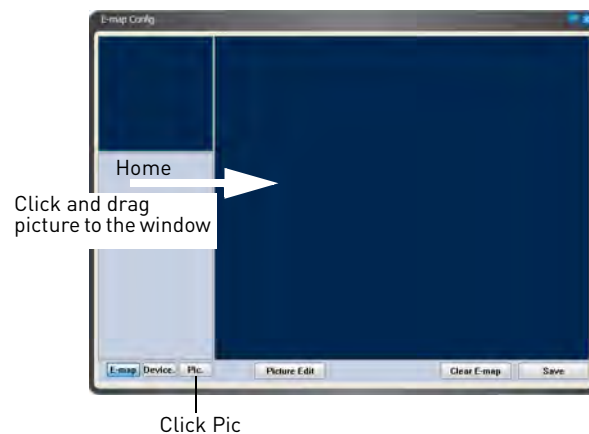

8. Click-and-drag the picture to the window to use it for the E-Map.
9. Click **Device** to view a list of connected NVR's.
10. Click **+** next to an NVR. To place cameras, drag cameras from the list to the map.

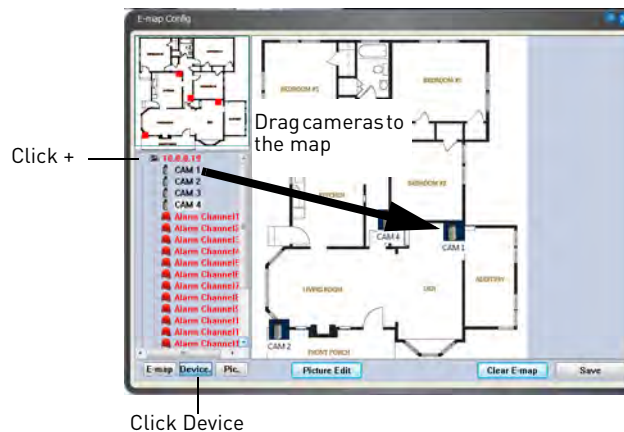

11. Click **Save**.

NOTE: To delete all E-Map data, including images and camera positions, click **Clear E-Map**.


Opening Cameras from E-Map

Once you have configured your E-Map, you can use it to open cameras in live display.

To open cameras from E-Map:

1. Click **E-Map** ().

- Click on a display area in the main CMS window, then double-click on the camera to open it.

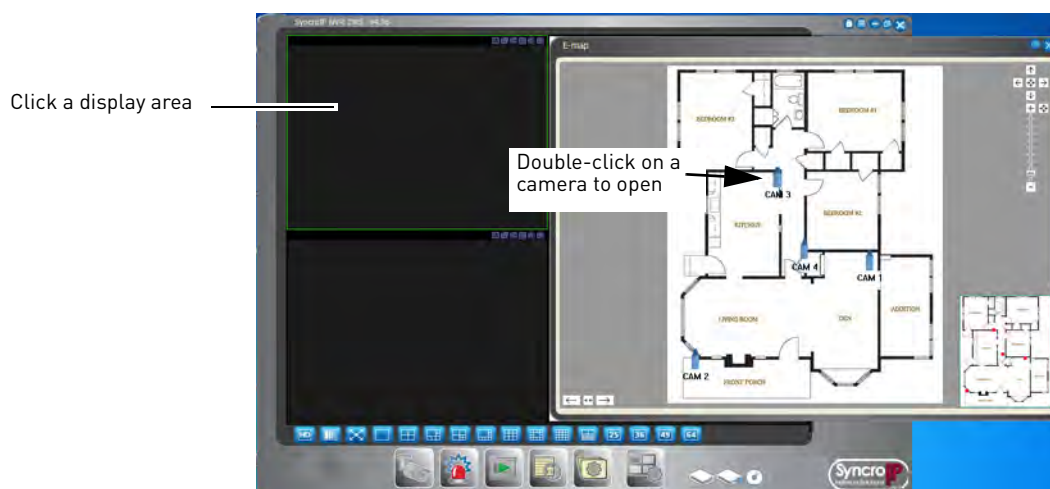


Configuring the CMS

You can configure settings for the CMS such as the admin password, recording directories, and start up settings through the Config menu.

Configuring CMS Options



- Click **Config** (gear icon) → **Options**.
- Configure the following:

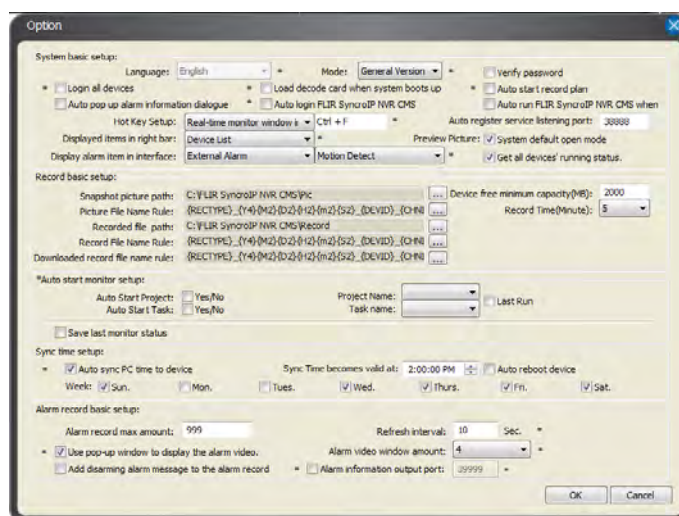

- **Verify password:** Check to require passwords when logging into or closing the CMS.
- **Log in all devices:** Check to allow the CMS to log into all NVR's when it opens.
- **Auto start record plan:** Check to have the CMS automatically start the record plan, which allows recording to the computer hard drive when it opens. To configure the record plan, click **Config Manager** → **Record Plan Config**.

- **Auto Login FLIR SyncrolP NVR CMS:** Check for the CMS to automatically log in the admin account when it is opened.
- **Hotkey Setup:** Configure hotkeys for the CMS. Use the drop-down menu to select the command, and then click inside the box on the right and enter the hotkey.

NOTE: Do not use F12 as a hotkey. F12 is reserved for the system debug command.

- **Displayed items in the right bar:** Select which right-side menu is opened when the CMS opens.
- **Record Time (M):** Select the length in minutes of video files recorded on your computer hard drive. For example, if you select 15 minutes, the system will save a new video file for every 15 minutes of recording.
- **Snapshot picture path:** Click ... to select the default save folder for snapshots.
- **Picture file name rule:** Click ... to define the file name rule for snapshots.
- **Recorded file path:** Click ... to select the default save folder for manual recordings.
- **Recorded file name rule:** Click ... to select the file name rule for manual recordings.
- **Downloaded file path:** Click ... to select the folder for downloaded recording files.
- **Download record file name rule:** Click ... to define the file name rule for downloaded recording files.
- **Device free minimum space (MB):** Enter the amount of minimum space in MB to maintain on the computer hard drive. The system will stop recording when only this much space is left.
- **Auto Start Project:** Check for the CMS to automatically run a project when opened. Select the project it will run under **Project Name**.
- **Auto Start Task:** Check for the CMS to automatically run a task when opened. Select the task it will run under **Task Name**.
- **Last Run:** Check for the CMS to start the last used task or project when opened.
- **Save last monitor status:** Check to have the CMS restore the previously used display mode when opened.
- **Auto sync PC time to device:** Check to have the NVR sync the clock with the system time on the PC.
- **Sync time becomes valid at:** Select the time that the NVR will sync its clock with the PC's system time.
- **Week:** Select days that the NVR will sync its clock with the PC's system time.
- **Auto reboot device:** Check to enable the NVR to reboot when the time sync occurs.


3. Click **Ok** to save changes. Close the CMS and restart it to update the configuration.


Changing the CMS Admin Password

You can change the admin password that is used to log into the CMS. The default password is admin.

NOTE: The CMS will automatically populate the admin password unless you enable Verify Password under **Config→Options**.

To change the CMS admin password:

1. When logged in as the admin account, click **Config**  → **Modify Password**.
2. Under **Old Password**, enter the old password.
3. Under **New Password** and **Confirm Password**, enter the new password.

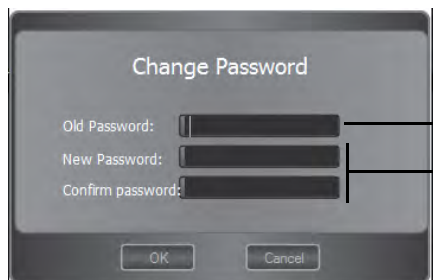

The 'Change Password' dialog box contains three input fields: 'Old Password:', 'New Password:', and 'Confirm password:'. Each field has a corresponding label to its right: 'Enter old password', 'Enter new password', and 'Enter new password' (implied for confirm). At the bottom are 'OK' and 'Cancel' buttons.

4. Click **OK**.


Adding User Accounts to the CMS

You can add multiple user accounts to the CMS with varying levels of access to the system.

NOTE: To make sure users must enter their user name and password to access the CMS, you must make sure Verify User is checked and Auto Login is unchecked in **Config→Options**. For details, see “Configuring CMS Options” on page 52.

To add a user account to the CMS:

1. Click **Config Manager→User Manage**.
2. Click **Add**.

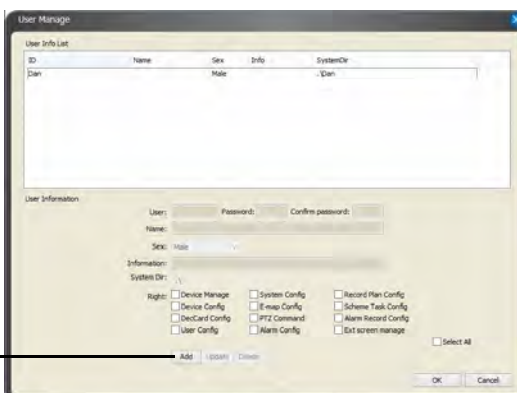

The 'User Manage' dialog box shows a 'User Info List' table with columns: ID, Name, Sex, Info, and SystemDir. Below the table is the 'User Information' section with fields for Name, Sex, and Information. The 'Rights' section contains a grid of checkboxes for various permissions. At the bottom are 'Add', 'Update', and 'Delete' buttons. A label 'Click Add' points to the 'Add' button.

3. Configure the following:
 - **User:** Enter the user name for the account.
 - **Password/Confirm:** Enter the password for the account.
 - **Name/Sex/Information:** (Optional) Enter descriptive details about the user account.
 - **Right:** Check the permissions that will apply to the user account.
4. Click **Save**. Click **OK** to save changes.

Multi-Monitor Support


The CMS supports multiple monitors on a single system. The recommended system specifications is listed below. If your system does not meet the requirements below, you may experience slow system performance.

Minimum system recommendations to run the CMS on multiple monitors:

- Intel Core i5 or i7 processor.
- 6 GB of RAM.
- Geforce 9500GT video card, 1GB or greater.

Opening Cameras in Secondary Monitors

- **To open a single channel on a secondary monitor:** Open it in a window on the main screen, then right-click on the display area, and select **Output current window to extension screen**. Select the monitor you would like to send the channel to.
- **To open multiple-channels on a secondary monitor:** Open your desired channel view, then right click in the display area, and select **Output all windows to extension screen**. Select the monitor you would like to send them to.

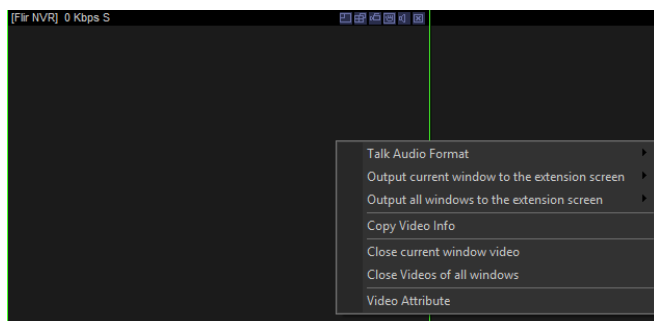

Right-click and select output option to open channels on a secondary monitor

Managing Secondary Monitors


Use Ext Monitor Config to configure settings for secondary monitors. You can select which monitors you would like to enable. Enabled monitors start up when you open the CMS software.

You can close secondary monitors by clicking on them and then pressing **ESC**. However, you cannot re-open the display on the secondary monitor without restarting the CMS software.


To manage secondary monitors:

1. Click **Config Manager**→**Ext Screen Manager**.

2. Click **Search** to detect secondary monitors or **Identify** to display the monitor number assigned to each secondary monitor.

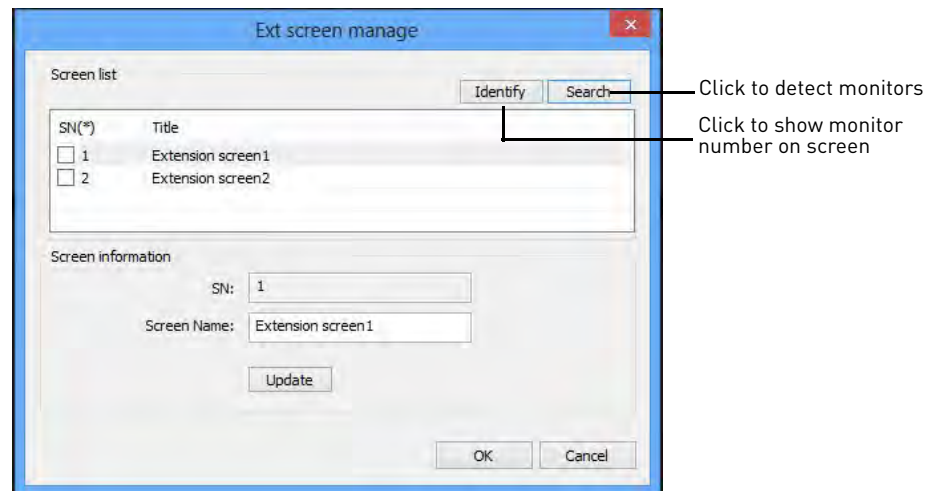

3. Check monitors to open them when the CMS software opens or uncheck to disable.

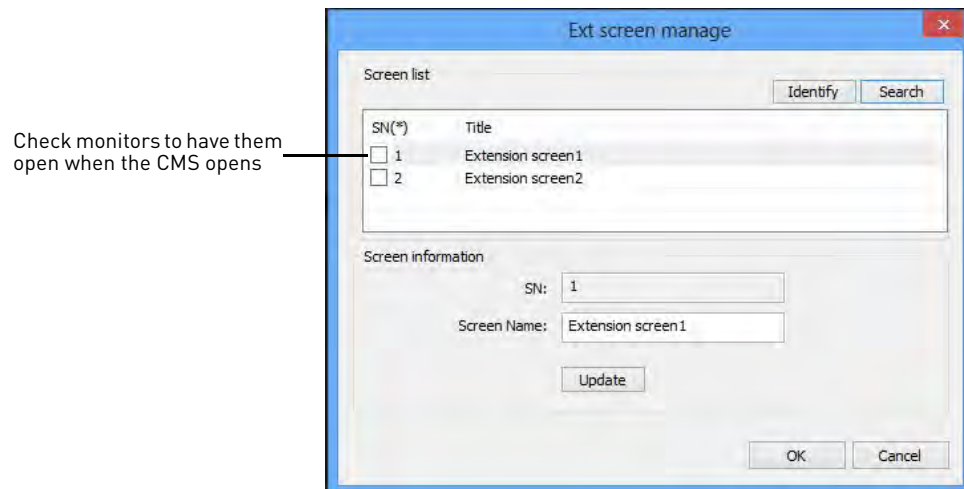

4. Click **OK** to save changes. Restart the CMS software to open the new monitor configuration.

REMOTE VIEWING ON INTERNET EXPLORER

You can also view your system remotely using Internet Explorer (version 8 or later required).

NOTE: Remote viewing is only compatible with Internet Explorer. Mozilla Firefox, Opera, Safari, and other browsers are not supported.

Prerequisites


- The HTTP Port (default: **80**) and Client Port (default: **35000**) must be port forwarded to your router.
- You must create a DDNS account, and have the DDNS settings configured in your NVR. For details, see "Appendix D: Setting Up DDNS Service" on page 97.
- The NVR must have internet access.

To view your system using Internet Explorer:

1. Open Internet Explorer. Note that it is recommended to select **Run as Administrator** when opening Internet Explorer to ensure full functionality.
2. In the address bar, enter your system's IP address or DDNS address followed by the HTTP Port (default: **80**). For example, *http://192.168.1.1:80* or *http://tomsmith.myddns-flir.com:80*


NOTE: You MUST include **http://** in order to access your system.

3. An attention bar appears at the top or bottom of the screen to prompt you to install ActiveX plugins, click **Install** or **Allow** and follow the prompts to install the plugins.
4. Enter the system user name and password (by default **admin / 000000**).
5. Select **LAN** to connect using the main (high quality) stream. Select **WAN** to use the sub-stream to conserve bandwidth and for improved performance when connecting over the Internet.
6. Click **Login** to log in.

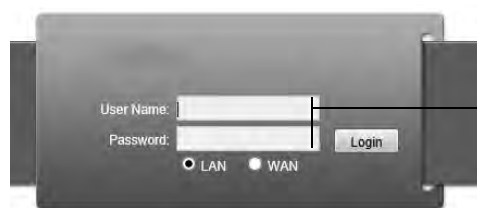


Enter the system User Name and Password

- Click and drag cameras to the display window to view them live.

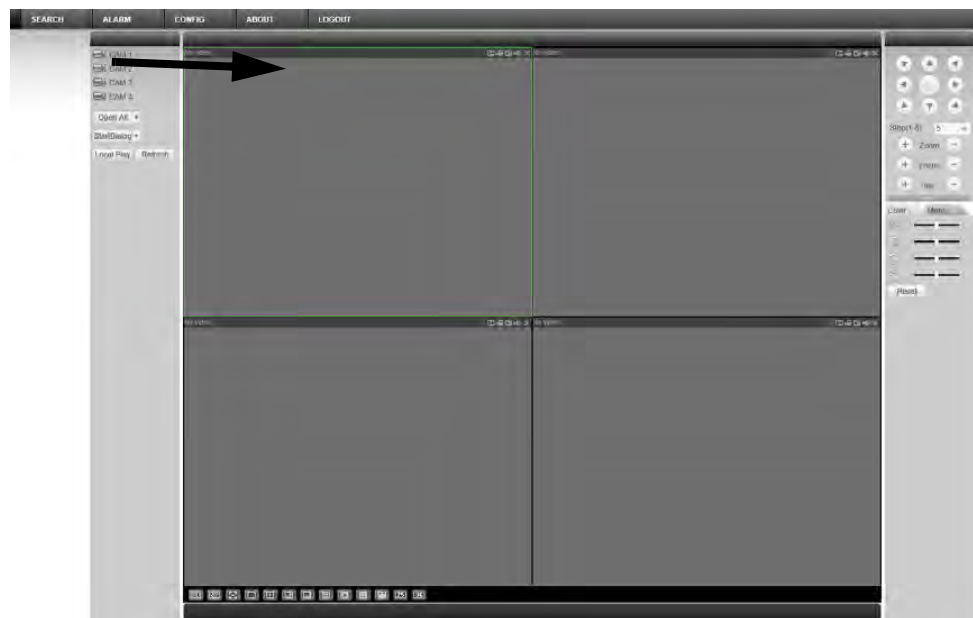

IE Live Display Overview


NOTE: Some options are not available in WAN mode.

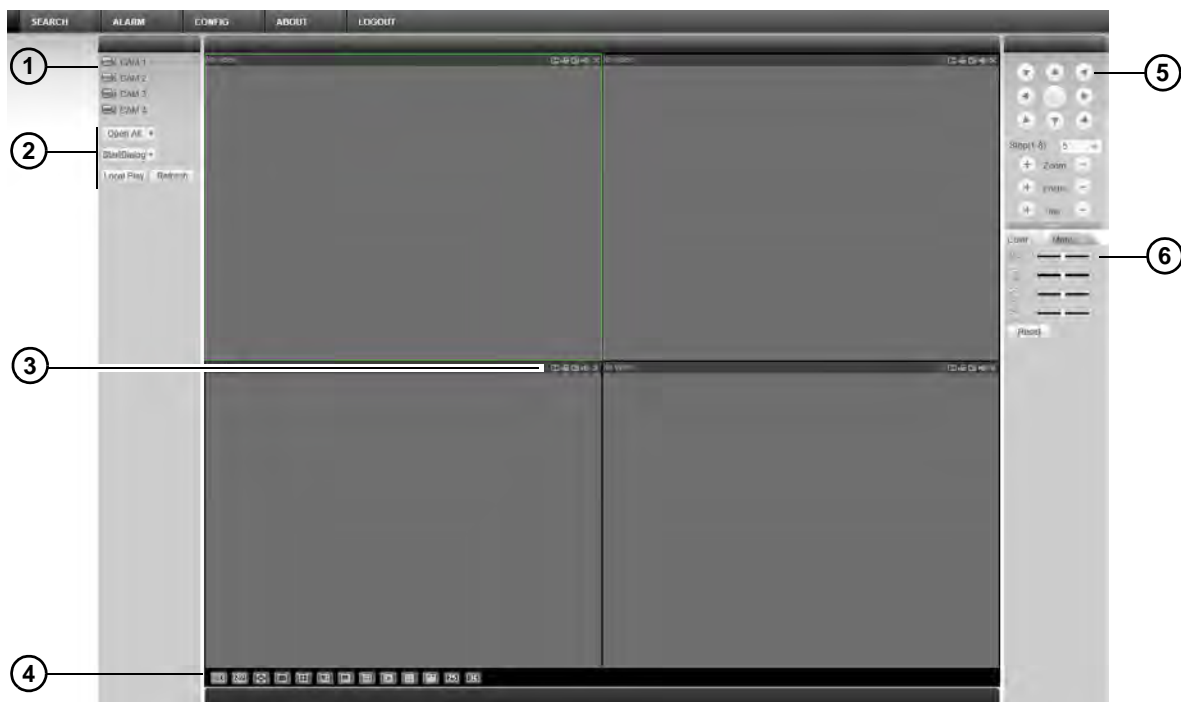

- Cameras:** Click and drag to the display area to view.
- Live View Controls:**
 - **Open All:** Click to open all cameras.


- **Local Play:** Open recorded or back up video files (.dav) saved on the local computer.
- **Refresh:** Click this button to refresh monitor channel name.

3. Camera Controls:

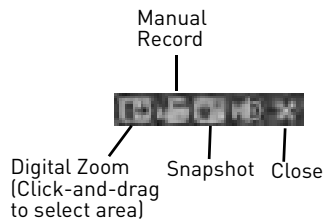

NOTE: Manual Recordings are saved to *C:\RecordDownload*. Snapshots are saved to *C:\PictureDownload*. You must select Run as Administrator when you open Internet Explorer to use these functions.

4. Live View Toolbar:

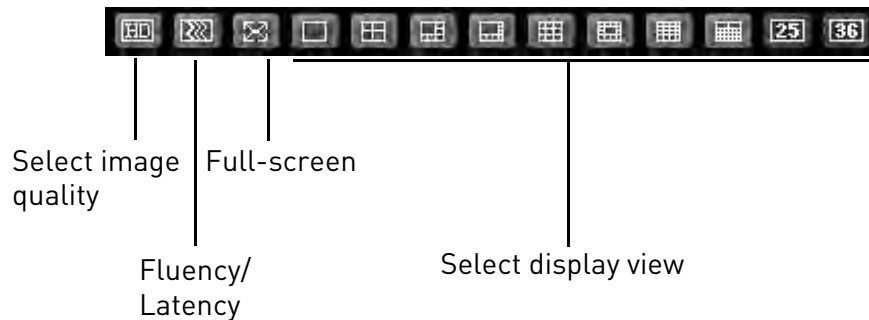

5. PTZ Controls

6. **Color Settings:** Use the sliders to adjust the brightness, contrast, saturation, and hue for the selected camera.


Using Search Mode in IE (Playback)

You can access recorded video from your NVR using the Internet Explorer client.


To access recorded video from your NVR:

1. Click **Search**.
2. Configure the following search options:
 - **Type:** Select the type of recording to search for.
 - **Begin Time/End Time:** Select the start and end for your search.
 - **Channel:** Select the channel you would like to search or select **All**.
 - **Main Stream:** Check to search for main stream recordings.
 - **Extra Stream:** Check to search for Extra Stream recordings. Extra Stream recordings are lower recording that may be saved on the system to reduce the bandwidth required for remote playback.
3. Click **Search**.
4. Under **Multiple-channel Playback**, select the channels you would like to playback.

- Click a search result and then click **Playback** to open or **Download** to save the file to your computer hard drive.

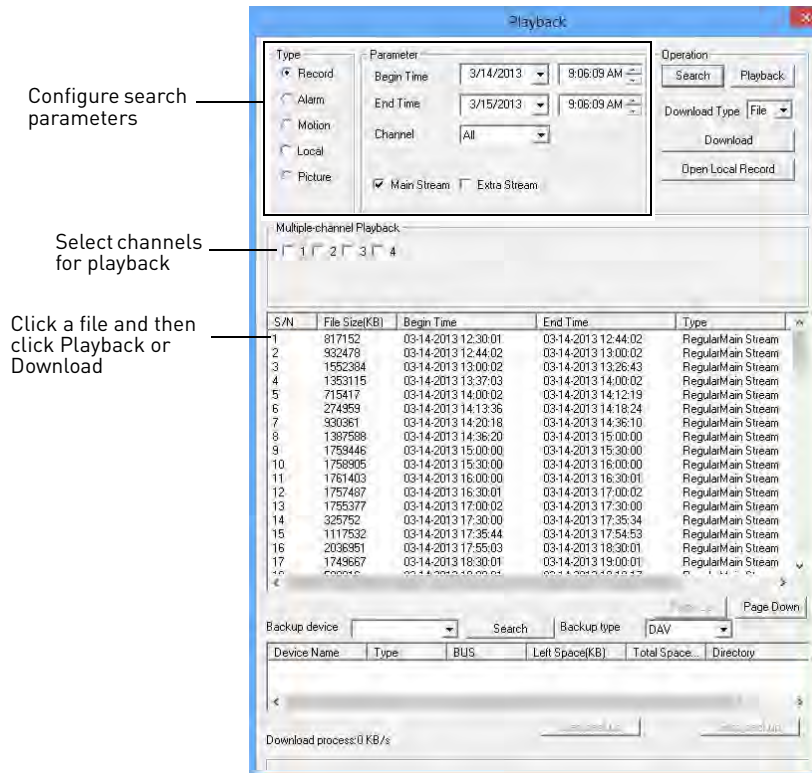

Playback Controls

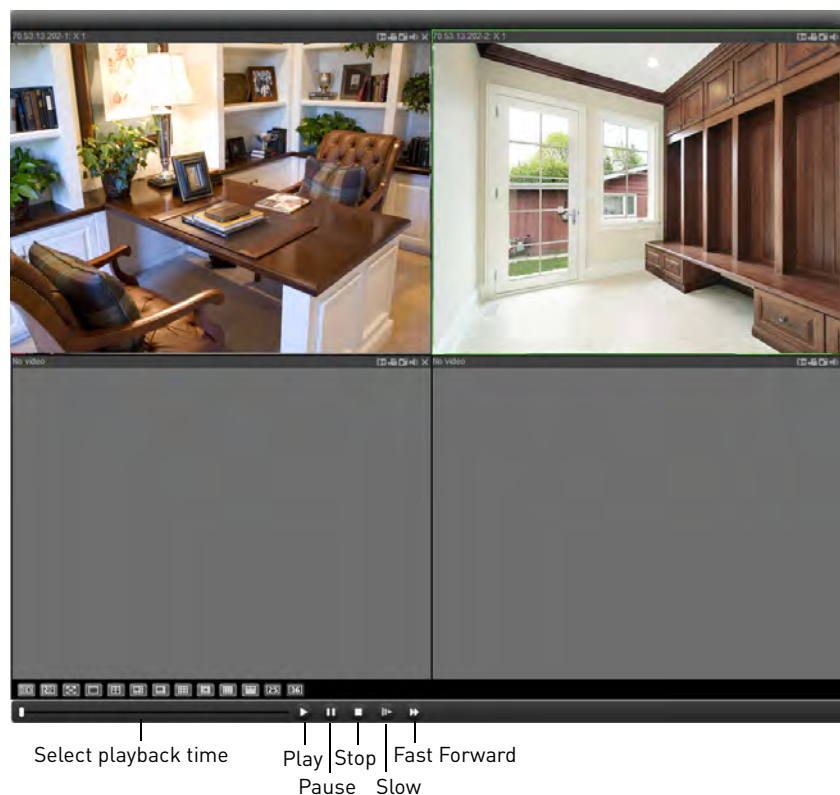

MOBILE CONNECTIVITY

The DNR200 Series is compatible with iPhone, iPad and Android devices.

iPhone

FLIR SyncroIP NVR is an iPhone app that allows you to remotely view your NVR.

System Requirements



- iOS 4.3 or later.


Prerequisites

- Port **80** (or whichever port your system is using) must be port forwarded to your router.
- You must create a DDNS account, and have the DDNS settings configured in your NVR.
- The NVR must have internet access.
- You must have a DDNS address to log in remotely.
- An iTunes account.


NOTE: You will need to create an iTunes account before you can download the app. An iTunes store account requires a valid credit card number. The app is free of charge.

Connecting to your NVR on an iPhone

1. Download **FLIR SyncroIP NVR** for free from the App Store.
2. Tap on the FLIR SyncroIP NVR icon () to start the app.
3. Tap .
4. Tap **Device Manager**.

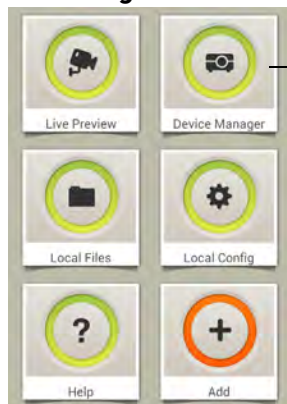


5. Tap **Add→Manually Add**.

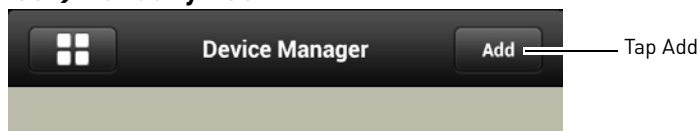

6. Configure the following:

- **Name:** Enter a name for your NVR of your choice.
- **Address:** Enter your **DDNS address** (e.g. *tomsmith.myddns-flir.com*).
- **Port:** Enter the **Client Port** (default: **35000**).
- **Username:** Enter the NVR's **User Name** (default: **admin**).
- **Password:** Enter the NVR's **Password** (default: **000000**).
- **Channel:** Enter the number of channels your NVR has.

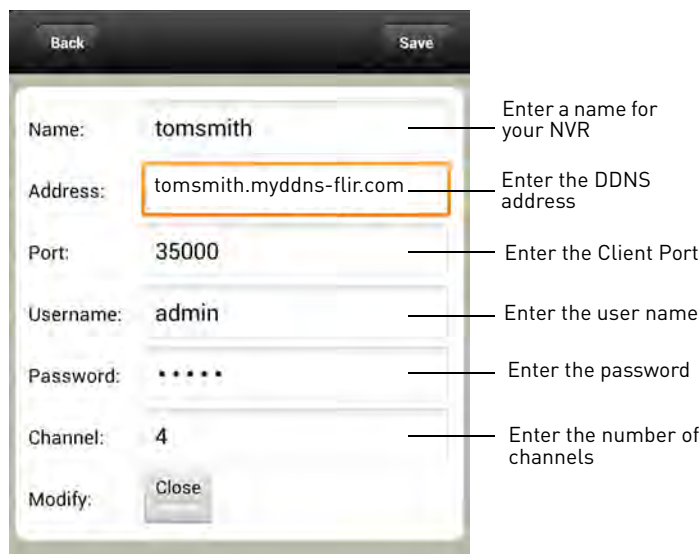


7. Tap **Save**.

8. Tap .

9. Tap **Live Preview**.


10. Tap **+** on one of the display areas and select the camera you would like to open in the selected display area.

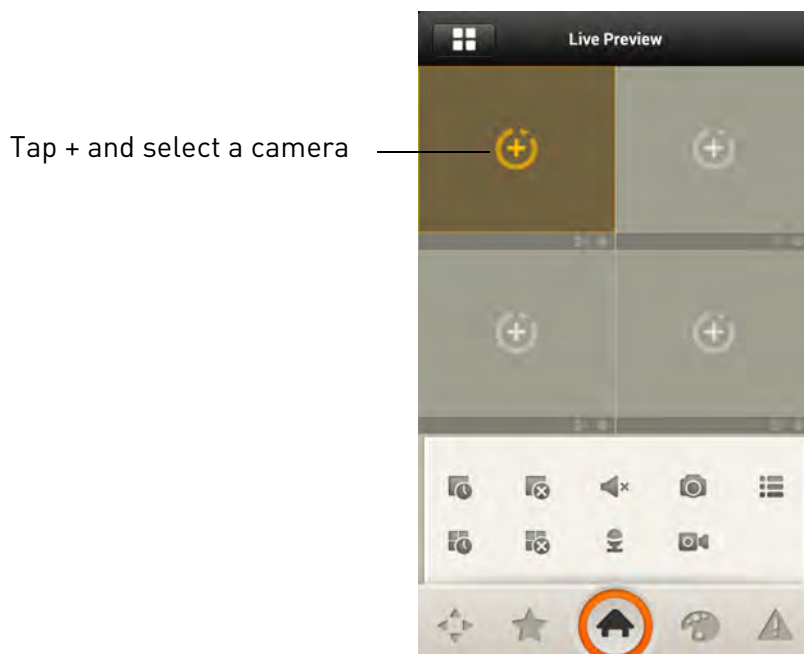

11. Repeat to view additional cameras.

FLIR SyncroIP NVR Interface

You can use **FLIR SyncroIP NVR** in portrait and landscape mode.

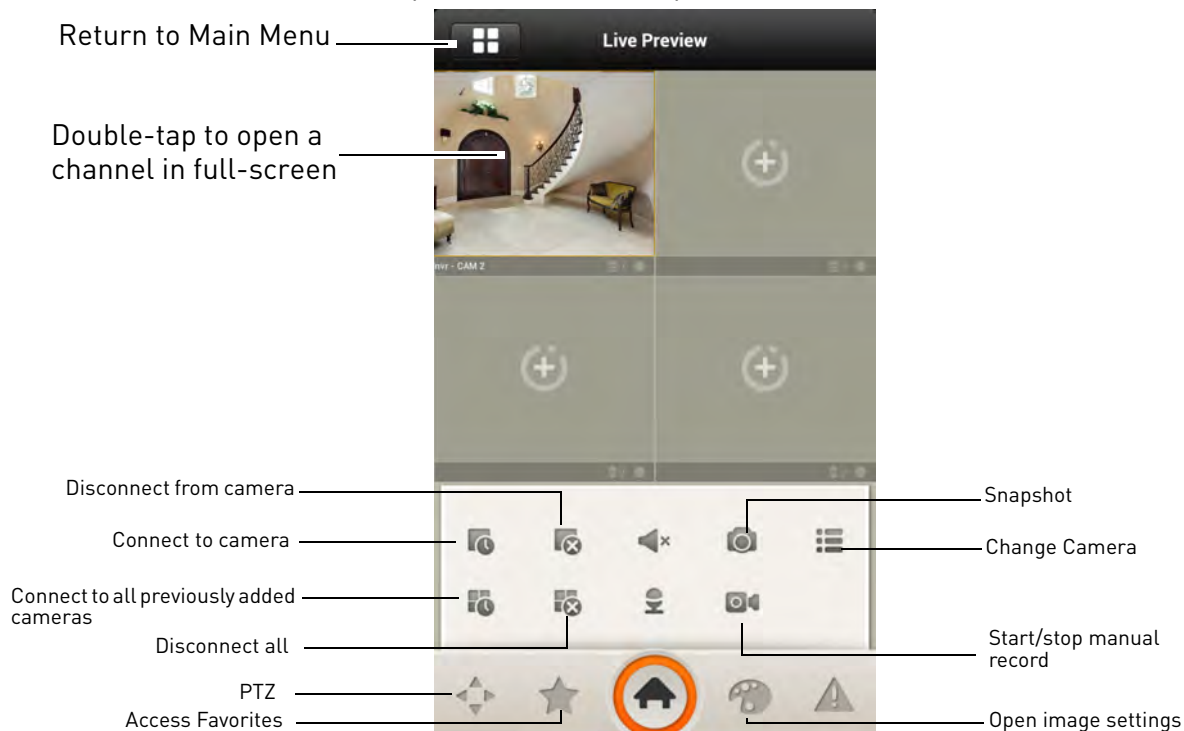


Viewing Videos with Local File

If you have saved videos using **FLIR SyncroIP NVR**, you may open them with Local File.

NOTE: You may open screenshots using the Photos app.

To access Local File:

- From the Main Menu, tap **Local File**.

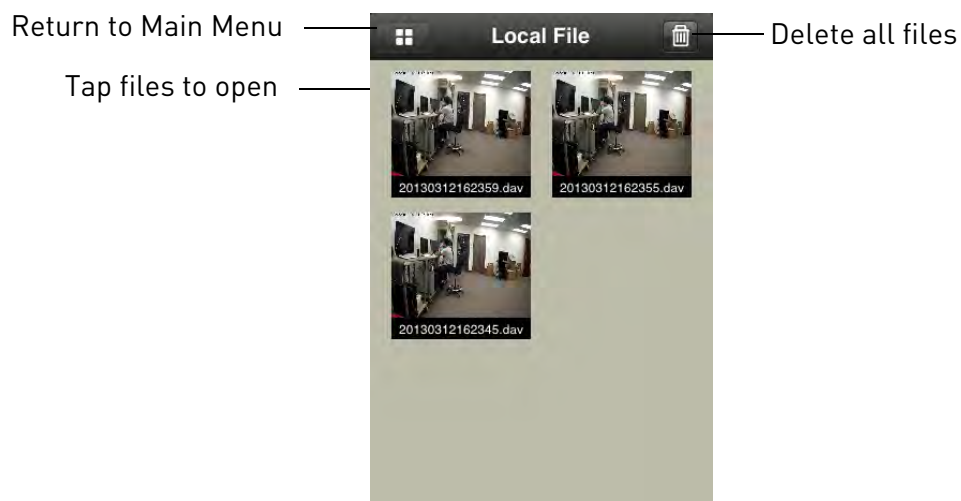

Using Playback Mode on iPhone

You can access recorded video on your NVR using your iPhone.

NOTE: You must enable Extra Stream Recording to use playback mode on mobile devices. For details on enabling Extra Stream Recording, see “Recording” on page 24.

To use Playback Mode:


1. From the Main Menu, tap **Playback**.

NOTE: If Playback is not shown, tap **Add**, check **Playback**, and return to the Main Menu.


2. Tap **+**.



3. Select the start and end times to playback.
4. Select a channel to playback.

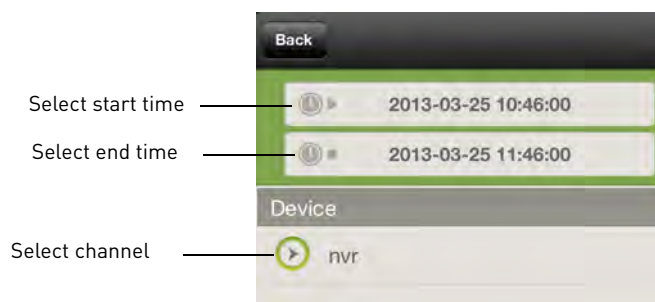


5. Use the on-screen controls to control playback.

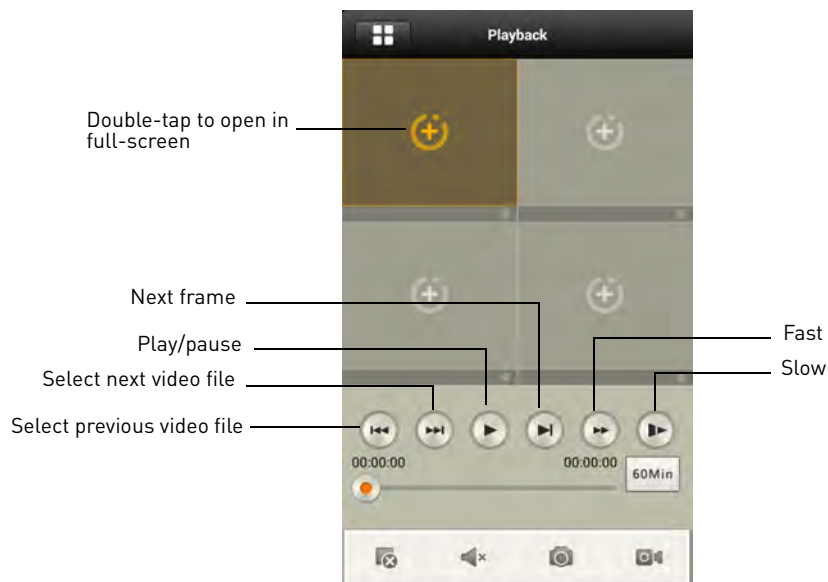

Enabling Push Notifications

You can have the app send push notifications to the notifications area on your device when one of your cameras detects motion. Once you have received a push notification, you can select it to open live video from the camera that detected motion.

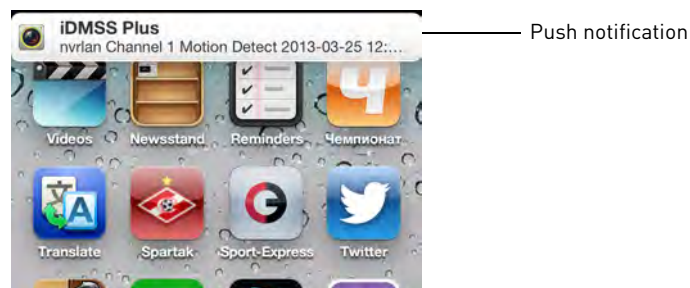


NOTE: Your cameras must have motion detection activated to receive push notifications. For details on enabling motion detection, see "Motion" on page 28.

To enable Push Notifications:


1. From the Main menu, tap **Push Config**.

NOTE: If Push Config is not shown, tap **Add**, check **Push Config**, and then return to the Main Menu.

2. For the NVR you would like to configure, set the slider to ON.

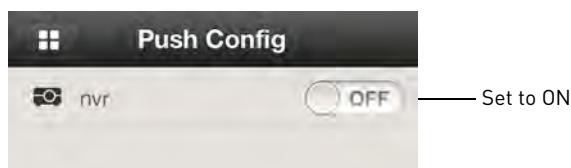


3. Tap **Motion Detect** and then check each channel you would like to receive push notifications from.

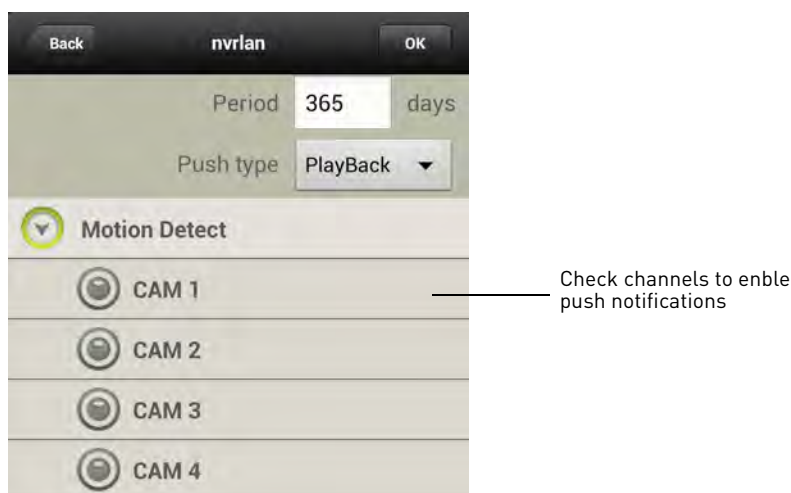

4. Tap **OK**. A test notification will be sent to your device. After this, whenever the selected cameras detect motion, you will receive a notification.

NOTE: You can see a list of notifications through the Event List menu. To show the Event List menu, tap **Add** and check **Event List**. Return to the Main Menu and select **Event List**. Tap on events to view live video from the camera.

Tap to view
live video

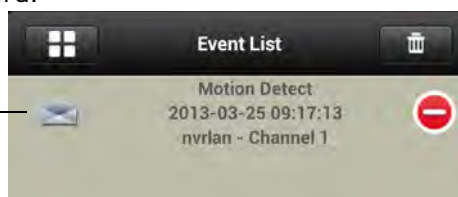

Device Manager

You can use Device List to manage your NVR's.

To access Device List:


- From the Main Menu, tap **Device Manager**.

To edit an NVR:

1. Tap the NVR in Device Manager.
2. Edit the connection details as needed.
3. Tap **Save**.

To delete an NVR:

1. Swipe right on the NVR you would like to delete.

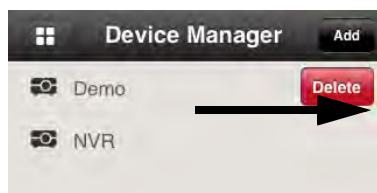

Swipe right on the NVR you would like to delete and tap delete

2. Tap **Delete**. Tap **OK** to confirm.

iPad

FLIR SyncroIP NVR HD is an iPad app that allows you to remotely view your NVR.

System Requirements

- iOS 4.3 or later.

Prerequisites

- Port **80** and **35000** (or your HTTP and Client Ports, if you have changed them) must be port forwarded on your router to your NVR's IP address.
- You must create a DDNS account, and have the DDNS settings configured in your NVR.
- The NVR must have internet access.
- You must have a DDNS address to log in remotely.

NOTE: You will need to create an iTunes account before you can download the app. An iTunes store account requires a valid credit card number. The app is free of charge.


Connecting to your NVR on an iPad

1. Install **FLIR SyncroIP NVR HD** for free from the App Store.

2. Tap on the **FLIR SyncroIP NVR HD** icon () to start the app.


3. Tap  then .

4. Tap **Device Manager**.

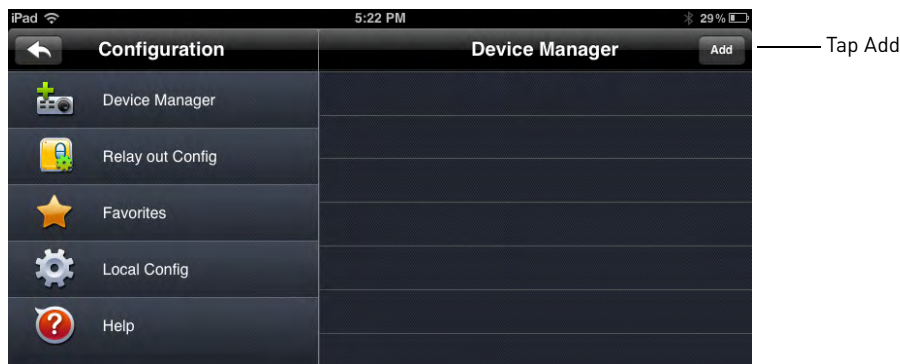

5. Tap **Add**.

6. Configure the following:

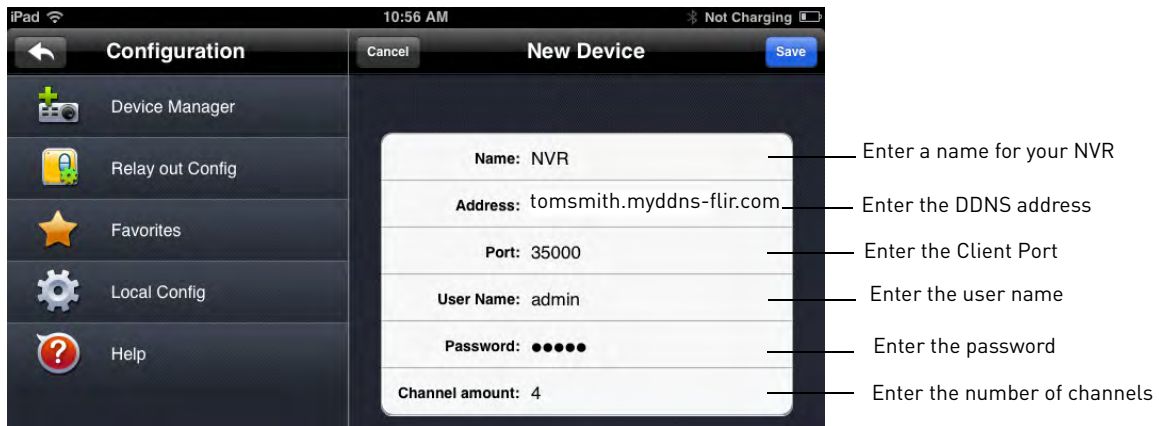

- **Name:** Enter a name for your NVR of your choice.
- **Address:** Enter your **DDNS address** (e.g. *tomsmith.myddns-flir.com*).
- **Port:** Enter the **Client Port** (default: **35000**).
- **Username:** Enter the NVR's **User Name** (default: **admin**).
- **Password:** Enter the NVR's **Password** (default: **000000**).
- **Channel amount:** Enter the number of channels your NVR has.


7. Tap **Save**.

8. Tap .

9. **In landscape mode:** tap a channel and then select the camera you would like to view on the left.


OR

In portrait mode: tap **+** on one of the display areas and select the camera you would like to open.

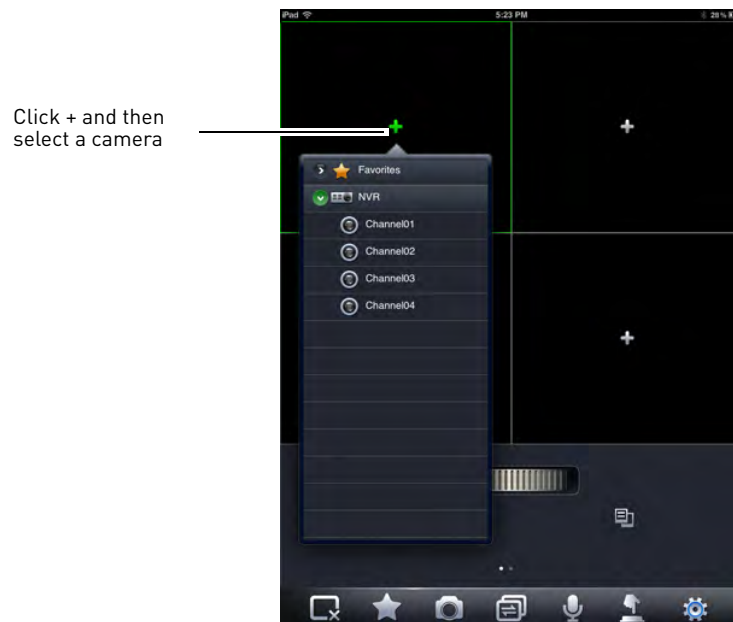

FLIR SyncroIP NVR HD Interface

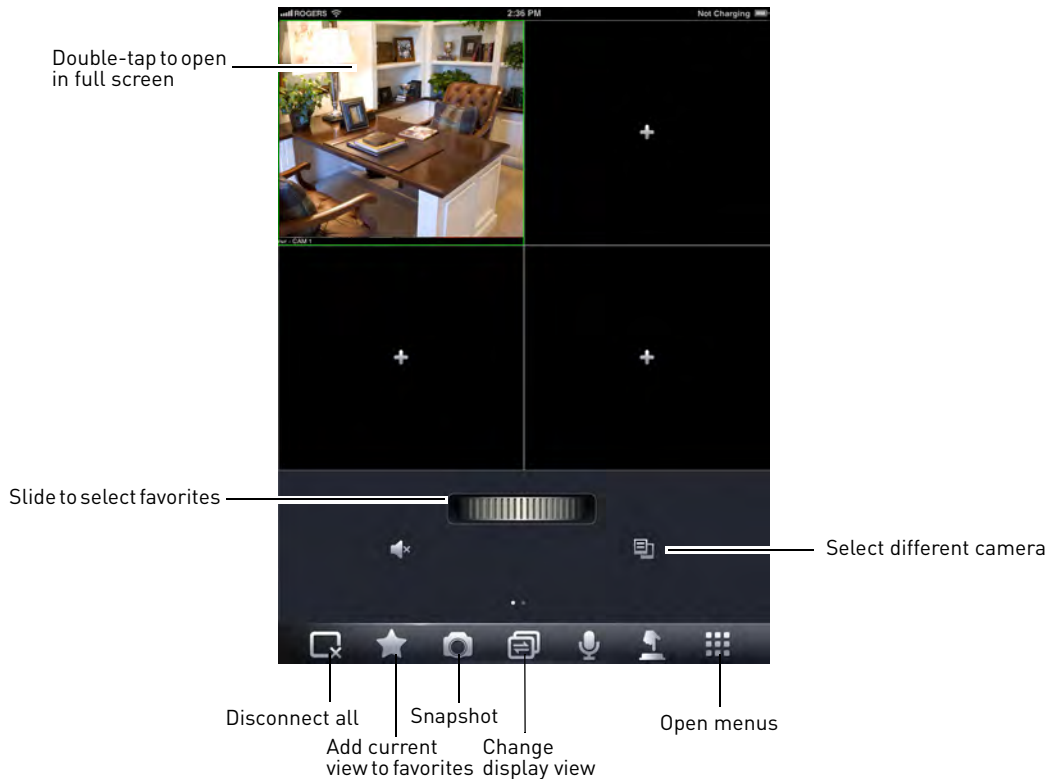

You can use **FLIR SyncroIP NVR HD** in landscape or portrait mode.




Device Manager

Device Manager allows you to manage your NVR's.

To access Device Manager:

1. From live view, tap  then .
2. Tap **Device Manager**.

To delete an NVR:

1. Tap the NVR to select it.
2. Tap . Tap **Yes** to confirm.



To modify an NVR:



1. Tap an NVR to select.
2. Tap the NVR again to open the edit screen.
3. Update the connection details as needed and then tap **Save**.

Using Playback Mode on iPad

You can access recorded video on your NVR using your iPad.


NOTE: You must enable Extra Stream Recording to use playback mode on mobile devices. For details on enabling Extra Stream Recording, see “Recording” on page 24.

To use Playback Mode:


1. From Live View tap  then .
2. **In Portrait Mode:** Tap **+**, select the start time and end time for your search, and select the camera you would like to playback.

OR

In Landscape Mode: Select the start time and end time for your search, and select the camera you would like to playback.

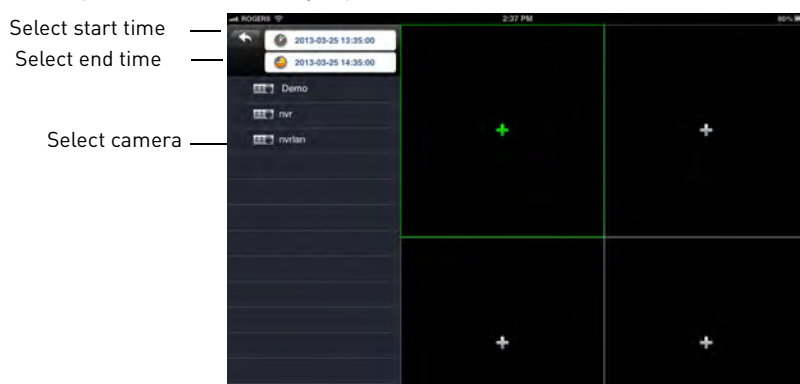

3. Use the playback controls.

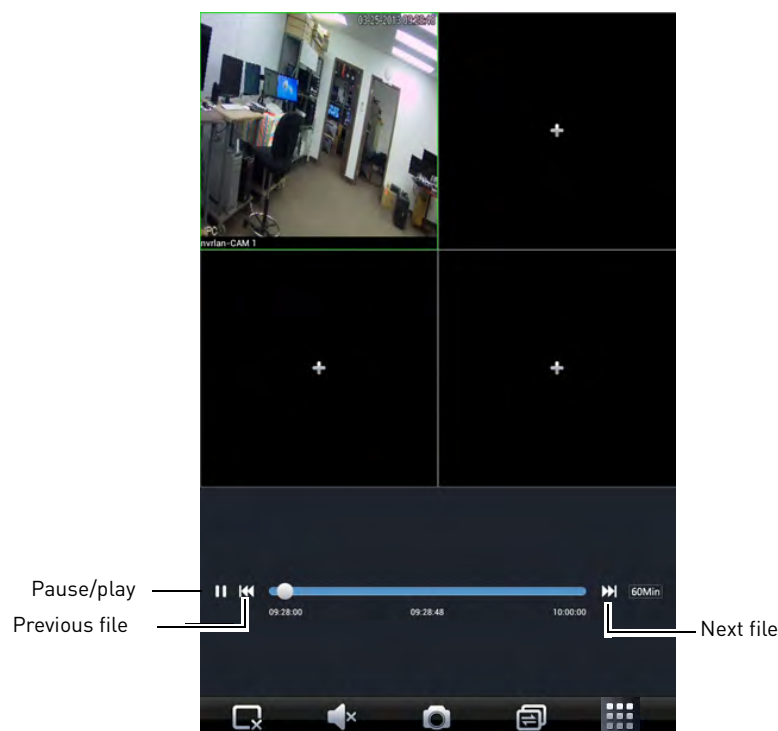

NOTE: Playback controls are only shown in portrait mode.



Enabling Push Notifications


You can have the app send push notifications to the notifications area on your device when one of your cameras detects motion. Once you have received a push notification, you can select it to open live video from the camera that detected motion.




NOTE: Your cameras must have motion detection activated to receive push notifications. For details on enabling motion detection, see “Motion” on page 28.

To enable Push Notifications:

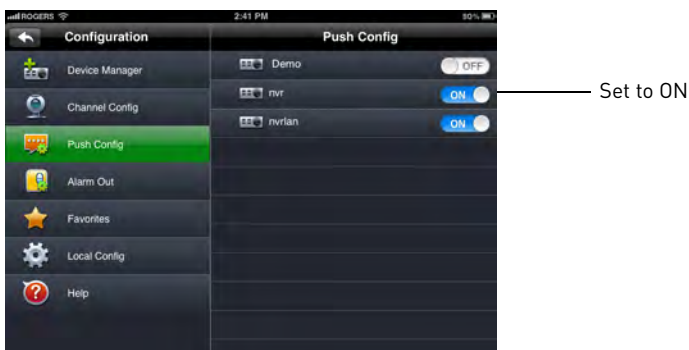

1. From live view, tap  then .
2. Tap **Alarm Push**.
3. Set the slider to **ON** next to the NVR you would like to configure.

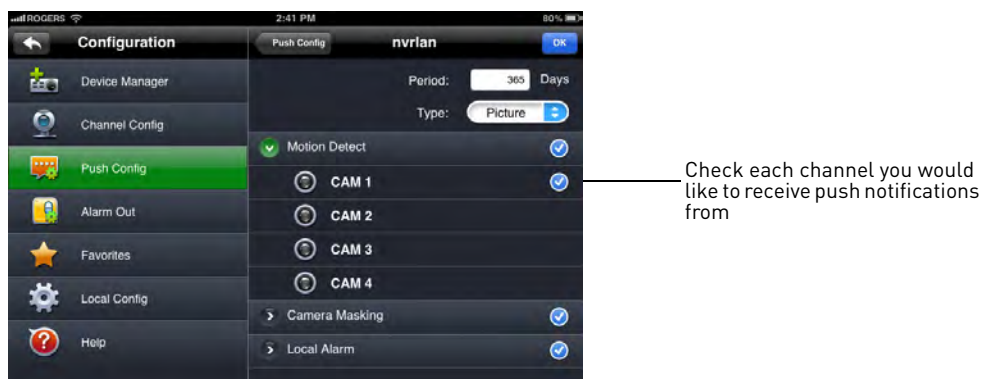

4. Tap **Motion Detect** then check each channel you would like to receive push notifications from.



5. Tap **OK**. A test notification will be sent to your device. After this, whenever the selected cameras detect motion, you will receive a notification.

NOTE: You can see a list of notifications through the Event List menu. To show the Event List menu, from live view, tap  then .

Tap on an event to view live video from the camera



Android Phones

FLIR SyncroIP NVR allows you to remotely view your NVR on Android smartphones.

A separate app is available to remotely view your NVR on Android tablets, to make better use of the larger screen size. For details, see “Android Tablets” on page 78.



Compatible Devices



- Android OS (2.2 and above).

Prerequisites

- Port **80** and **35000** (or your HTTP and Client Ports, if you have changed them) must be port forwarded on your router to your NVR’s IP address.
- You must create a DDNS account, and have the DDNS settings configured in your NVR.
- The NVR must have internet access.
- You must have a DDNS address to log in remotely.

Connecting to your NVR on an Android Phone

1. Download **FLIR SyncroIP NVR** for free from the Google Play Store.
2. Tap on the FLIR SyncroIP NVR icon () to start the app.
3. Tap .

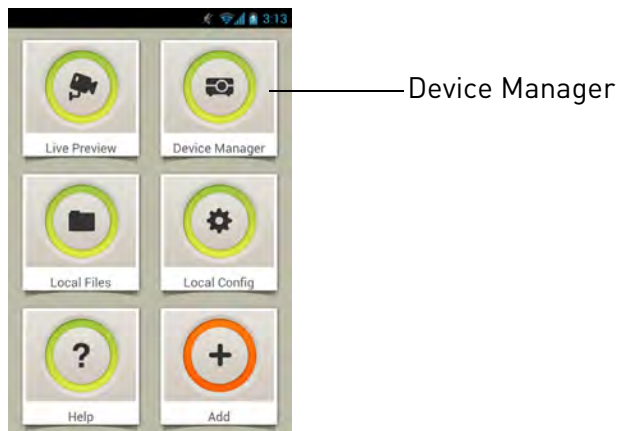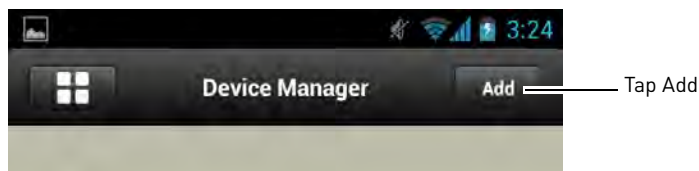4. Tap **Device Manager**.5. Tap **Add** → **Manually Add**.

6. Configure the following:

- **Name:** Enter a name for your NVR of your choice.
- **Address:** Enter your **DDNS address** (e.g. *tomsmith.myddns-flir.com*).
- **Port:** Enter the **Client Port** (default: **35000**).
- **Username:** Enter the NVR's **User Name** (default: **admin**).
- **Password:** Enter the NVR's **Password** (default: **000000**).
- **Channel:** Enter the number of channels your NVR has.

Back Save

Name: tosmith — Enter a name for your NVR

Address: tosmith.myddns-flir.com — Enter the DDNS address

Port: 35000 — Enter the Client Port

Username: admin — Enter the user name

Password: — Enter the password


Channel: 4 — Enter the number of channels

Modify: Close

7. Tap **Save**.8. Tap .9. Tap **Live Preview**.

10. Tap **+** on one of the display areas and select the camera you would like to open in selected display area.

Tap + and select a camera

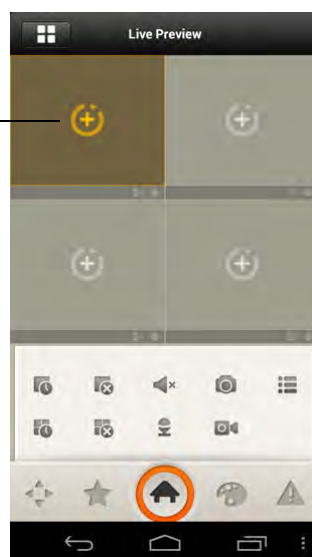

11. Repeat to view additional cameras.

FLIR SyncroIP NVR Interface

You can use **FLIR SyncroIP NVR** in portrait and landscape mode.

Return to Main Menu

Double-tap to open a channel in full-screen

Disconnect from camera

Connect to camera

Connect to all previously added cameras

Disconnect all

PTZ


Access Favorites

Snapshot

Change Camera

Start/stop manual record

Open image settings

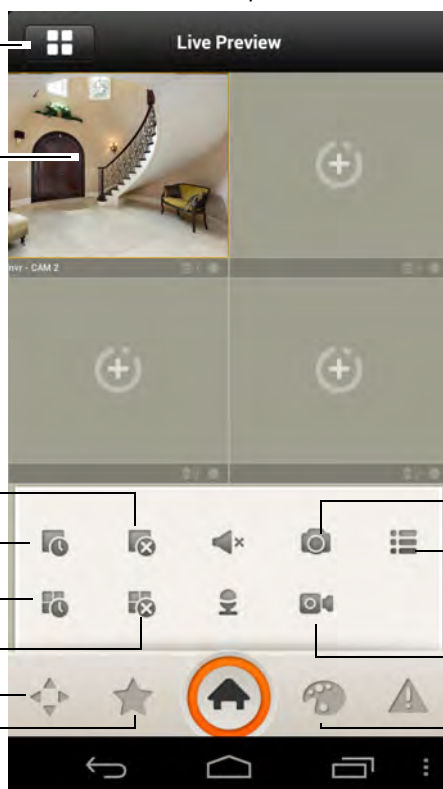


Viewing Snapshots and Videos with Local Files

If you have saved snapshots or videos using **FLIR SyncrolP NVR**, you may open them with Local Files.

To access Local Files:

- From the Main Menu, tap **Local Files**.

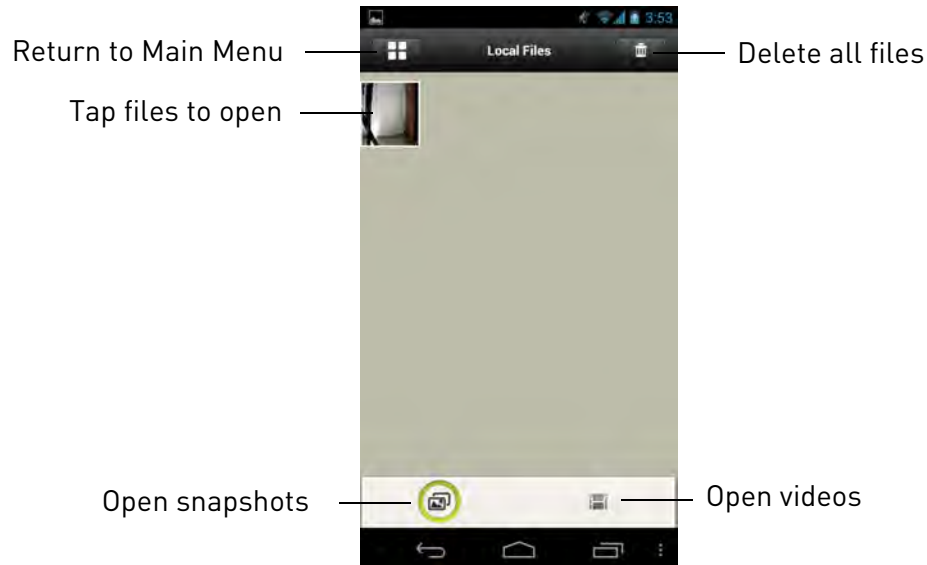

Using Playback Mode on Android Phones


You can access recorded video on your NVR using your Android phone.

NOTE: You must enable Extra Stream Recording to use playback mode on mobile devices. For details on enabling Extra Stream Recording, see “Recording” on page 24.


To use Playback Mode:

1. From the Main Menu, tap **Playback**.
2. If Playback is not shown, tap **Add**, check **Playback**, and return to the Main Menu.

3. Tap **+** and select a channel to playback.

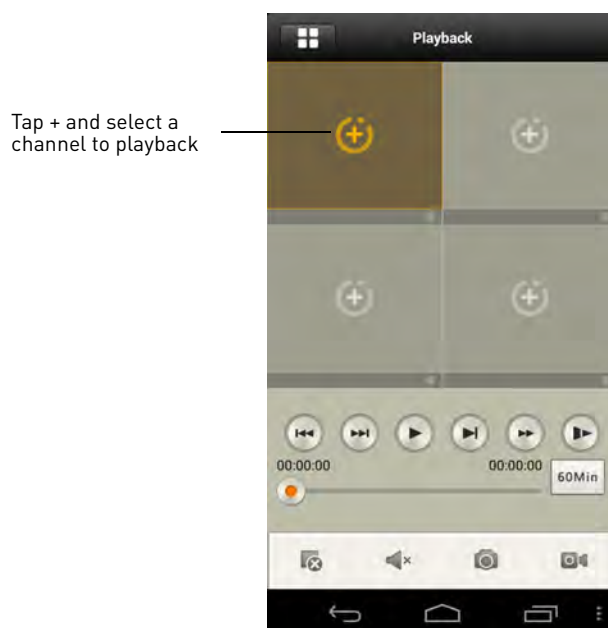


4. Select the date then the start and end times to playback.
5. Use the on-screen controls to control playback.

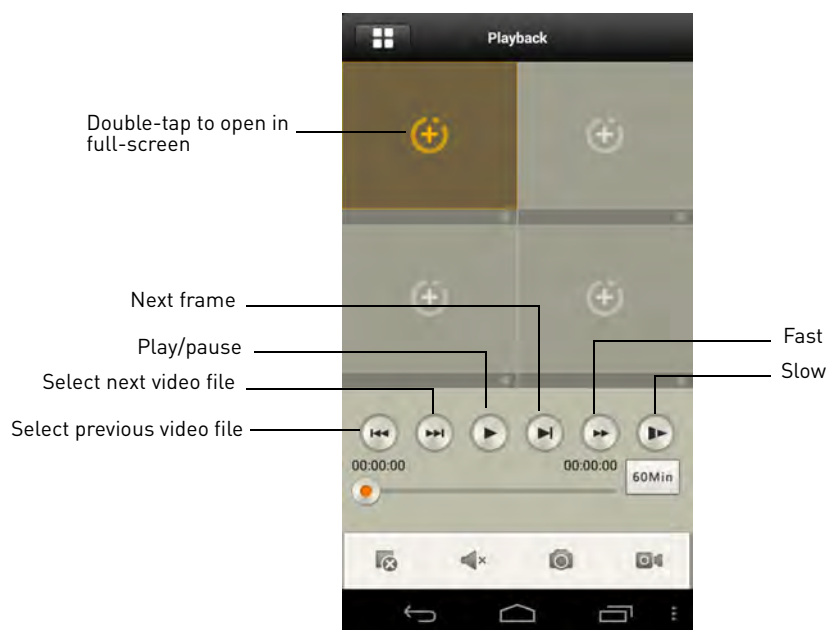

Enabling Push Notifications

You can have the app send push notifications to the notifications area on your device when one of your cameras detects motion. Once you have received a push notification, you can select it to open

live video from the camera that detected motion.

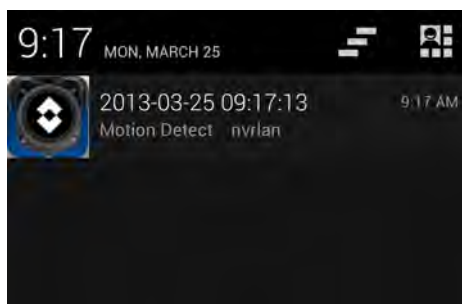

Push notification

NOTE: Appearance of notifications may differ depending on the model of your device


NOTE: Your cameras must have motion detection activated to receive push notifications. For details on enabling motion detection, see “Motion” on page 28.

To enable Push Notifications:

1. From the Main menu, tap **Push Config**.


NOTE: If Push Config is not shown, tap **Add**, check **Push Config**, and then return to the Main Menu.

2. Tap the NVR you would like to configure.

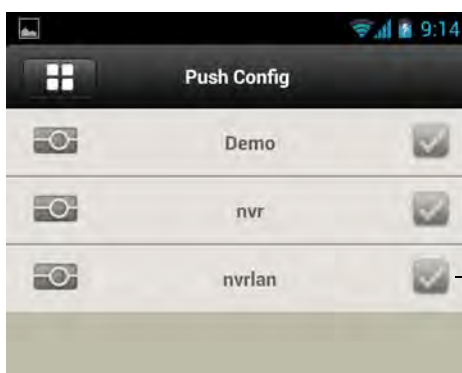

Select the NVR

3. Tap **Motion Detect** and then check each channel you would like to receive push notifications from.

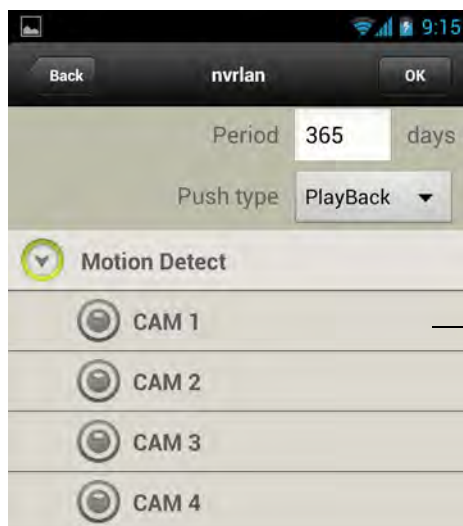


Check channels to enable push notifications

4. Tap **OK**. A test notification will be sent to your device. After this, whenever the selected cameras detect motion, you will receive a notification.

NOTE: You can see a list of notifications through the Event List menu. To show the Event List menu, tap **Add** and check **Event List**. Return to the Main Menu and select **Event List**. Tap on events to view live video from the camera.

Tap to view
live video

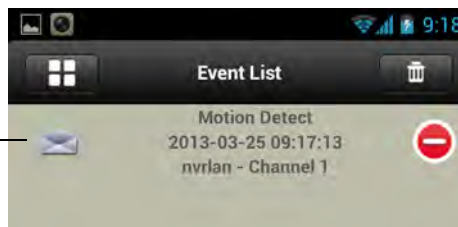

Device Manager

You can use Device List to manage your NVR's.

To access Device List:


- From the Main Menu, tap **Device Manager**.

To edit an NVR:

1. Tap the NVR in Device Manager.
2. Edit the connection details as needed.
3. Tap **Save**.

To delete an NVR:

1. Swipe the NVR you would like to delete to the right.
2. Tap **Delete**. Tap **OK** to confirm.

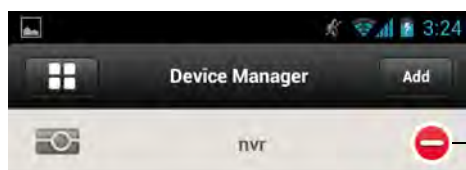

Tap Delete

Android Tablets

FLIR SyncroIP NVR HD is an app that allows you to remotely view your NVR on an Android tablet.

System Requirements

- Android 3.3 or later.

Prerequisites

- Port **80** and **35000** (or your HTTP and Client Ports, if you have changed them) must be port forwarded on your router to your NVR's IP address.
- You must create a DDNS account, and have the DDNS settings configured in your NVR.
- The NVR must have internet access.
- You must have a DDNS address to log in remotely.

Connecting to your NVR on an Android Tablet

1. Install **FLIR SyncrolP NVR HD** for free from the Google Play Store.

2. Tap on the **FLIR SyncrolP NVR HD** icon () to start the app.

3. Tap  then .

4. Tap **Device Manager**.



5. Tap **Add**.

6. Configure the following:




- **Name:** Enter a name for your NVR of your choice.
- **Address:** Enter your **DDNS address** (e.g. *tomsmith.myddns-flir.com*).
- **Port:** Enter the **Client Port** (default: **35000**).
- **Username:** Enter the NVR's **User Name** (default: **admin**).
- **Password:** Enter the NVR's **Password** (default: **000000**).
- **Channel amount:** Enter the number of channels your NVR has.

7. Tap **Save**.


8. Tap .

- In landscape mode, tap a channel and then select the camera you would like to view on the left. In portrait mode, tap **+** on one of the display areas and select the camera you would like to open.

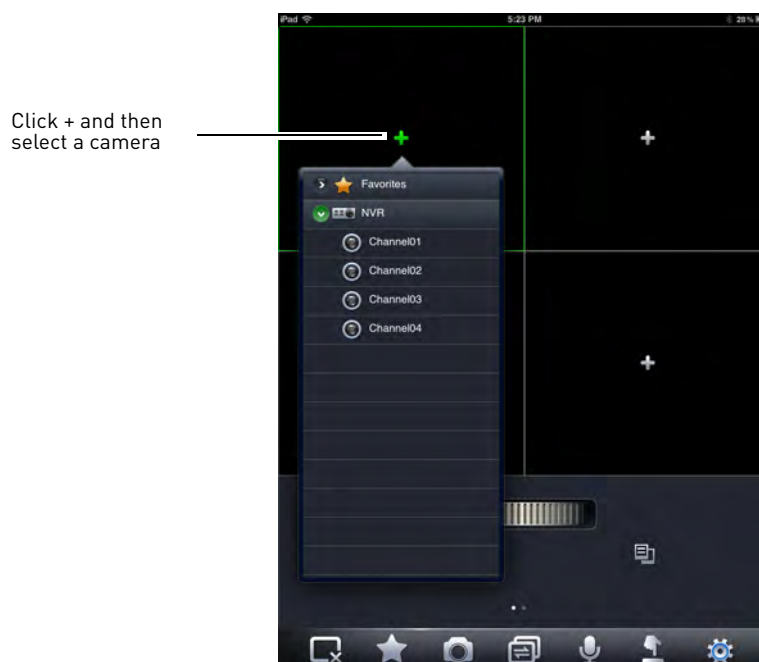

FLIR SyncroIP NVR HD Interface

You can use **FLIR SyncroIP NVR HD** in landscape or portrait mode.

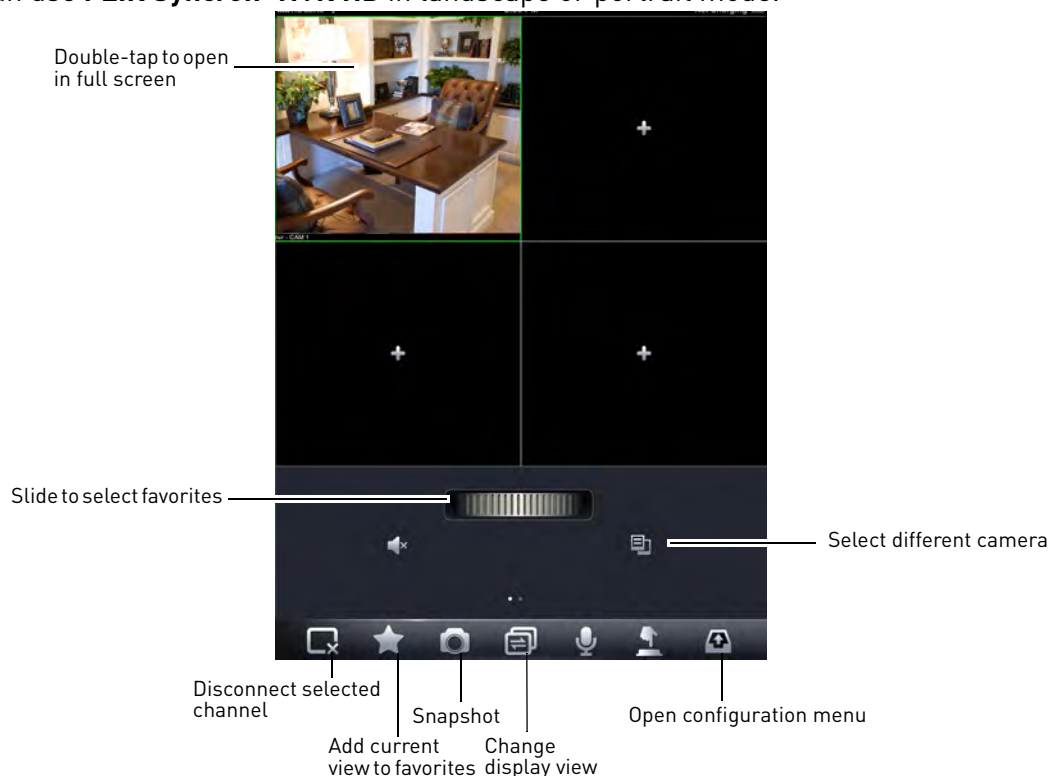



Using Playback Mode on Android Tablets

You can access recorded video on your NVR using your Android tablet.


NOTE: You must enable Extra Stream Recording to use playback mode on mobile devices. For details on enabling Extra Stream Recording, see "Recording" on page 24.

To use Playback Mode:


1. From Live View tap  then .
2. **In Portrait Mode:** Tap **+**, select the start time and end time for your search, and select the camera you would like to playback.

OR

In Landscape Mode: Select the start time and end time for your search, and select the camera you would like to playback.

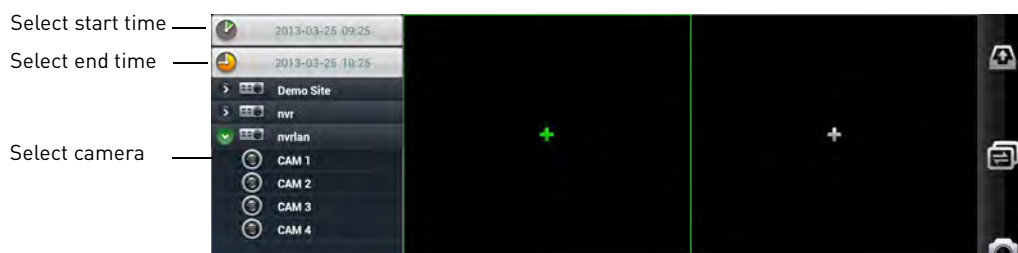

3. Use the playback controls.

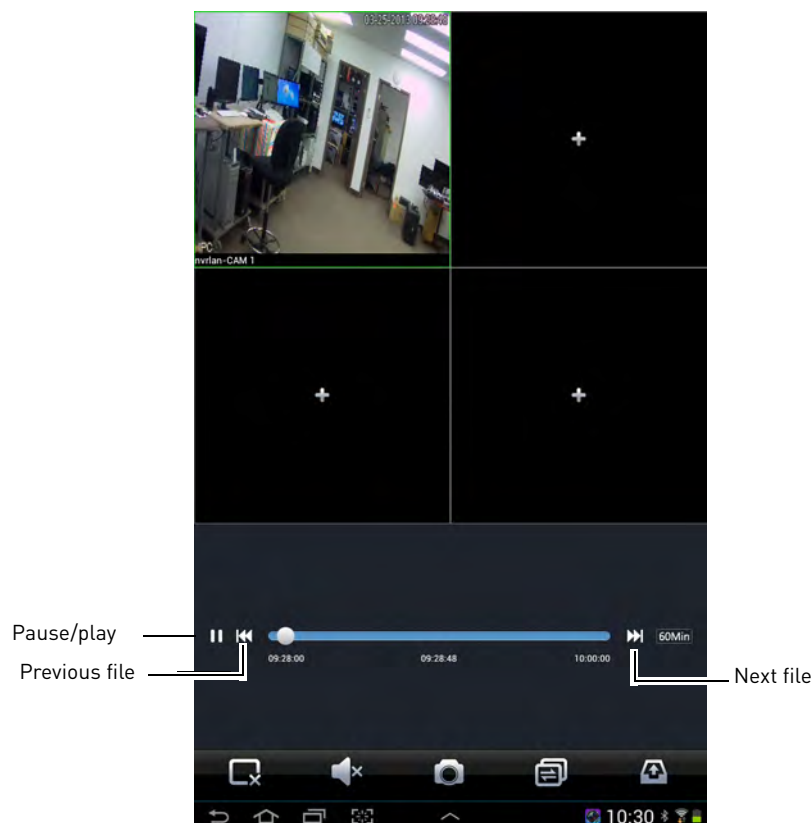

NOTE: Playback controls are only shown in portrait mode.

Enabling Push Notifications

You can have the app send push notifications to the notifications area on your device when one of your cameras detects motion. Once you have received a push notification, you can select it to open live video from the camera that detected motion.






Push notification

NOTE: Appearance of notifications may differ depending on the model of your device

NOTE: Your cameras must have motion detection activated to receive push notifications. For details on enabling motion detection, see “Motion” on page 28.

To enable Push Notifications:

1. From live view, tap  then .
2. Tap **Alarm Push**.
3. Select the NVR you would like to configure.

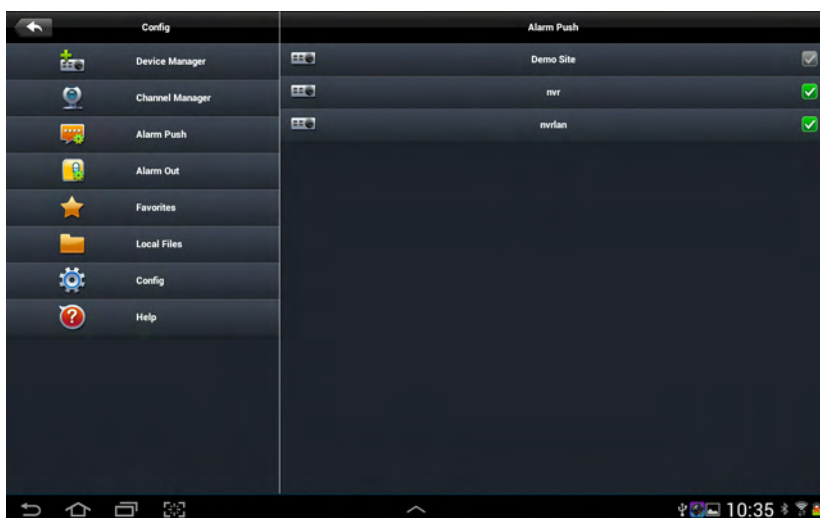

Select the NVR you would like to configure



4. Tap **MotionDetect** then check each channel you would like to receive push notifications from.



Check each channel you would like to receive push notifications from

5. Tap **OK**. A test notification will be sent to your device. After this, whenever the selected cameras detect motion, you will receive a notification.

NOTE: You can see a list of notifications through the Event List menu. To show the Event List

menu, from live view, tap  then .



Tap on an event to view live video from the camera



Device Manager

Device Manager allows you to manage your NVR's.

To access Device Manager:

1. From live view, tap  then .
2. Tap **Device Manager**.

To delete an NVR:

1. Tap the NVR to select it.

2. Tap . Tap **OK** to confirm.



To modify an NVR:

1. Tap an NVR to select.
2. Tap the NVR again to open the edit screen.
3. Update the connection details as needed and then tap **Save**.

APPENDIX A: SYSTEM SPECIFICATIONS

System

Main Processor	Dual-core embedded processor
Operating System	Embedded LINUX
Pentaplex Operation	Simultaneous View, Record, Playback, Backup, and Remote Monitoring

Inputs/Outputs

IP Camera Input	4 channel / 8 channel / 16 channel
Power over Ethernet (PoE)	4 integrated PoE ports
Audio	1 channel input (BNC), 1 channel output (BNC)
PTZ	RS-485, supports Pelco-D and Pelco-P
USB	2 ports
Alarm Input	4 Channel / 8 Channel / 16 Channel
Relay Out	3 Channel

Display

Interface	1 HDMI, 1 VGA, 1 BNC
Resolution	1920×1080, 1280×1024, 1280×720, 1024×768
Display Split	1/4, 1/4/8, 1/4/8/9/16
OSD	Camera Title, Time, Camera Lock, Motion Detection, Recording Status

Recording

Compression	H.264
Resolution	1080P (1920×1080) / 720P (1280×720) / D1 (704×576/704×480)
Record Rate	480fps@D1, 240fps@720P, 120fps@1080P
Bit Rate	32Mbps
Record Mode	High Quality Stream/Sub-Stream Recording: Manual, Schedule, Motion Detection, Alarm
Record Interval	1~120 min (default: 60 min), Pre-record: 1~30 sec, Post-record: 10~300 sec

Video Detection and Alarm

Trigger Events	Recording, PTZ, Tour, Alarm, Video Push, Email, FTP, Buzzer & Screen tips
Video Detection	Motion Detection

Playback and Backup

Sync Playback	1/4, 1/4/9, 1/4/9/16
Playback Function	4 Channel / 8 Channel / 16 Channel
Backup Mode	USB Device / Network
Configuration Backup	To USB Device

Network

Ethernet	RJ-45 port (10M/100M/1000M)
Network Function	HTTP, TCP/IP, IPv4/IPv6, UPNP, RTSP, UDP, SMTP, NTP, DHCP, DNS, IP Filter, PPPOE, DDNS, FTP, Alarm Server, IP Search
Max. User Access	20 simultaneous users
Smart Phone	iPhone, iPad, Android
IP Cameras Supported	FLIR, Digimerge, Panasonic, Sony, Dynacolor, Samsung, AXIS, Arecont

Storage

SATA Ports	2 internal SATA ports (2HDD)
Maximum Storage Capacity	6TB (2 x 3TB)

Dimensions

Weight	2.3kg / 5.1lbs
Package Dimensions	438mm x 153mm x 343mm / 17.2" x 6.0" x 13.5" (W x H x D)
Cube	Cube: 0.023 Cubic Metres / 0.81 Cubic Feet

Power

Power Supply	1x 12V DC 5A (for NVR); 1x 48V DC 1A (for PoE)
---------------------	--

As our products are subject to continuous improvement, Digimerge Technologies Inc., a FLIR company, and its subsidiaries reserve the right to modify product design, specifications, and prices without notice and without incurring any obligation. E&OE

APPENDIX B: SETTING UP REMOTE VIEWING

Setting up the Remote Viewing Feature requires several steps. Networking skills are required to correctly configure the remote viewing functions.

What Do I Need?

- NVR System.
- A PC with the installed CMS software.


NOTE: For Mac users, please visit www.digimerge.com for instructions.

- A router (not provided with the system) and High Speed Cable or DSL Internet Connectivity [for remote viewing outside your network].

Network Setup / Remote Access Overview

To setup remote viewing:

1. With the system powered off, connect the system to the router using an Ethernet cable.

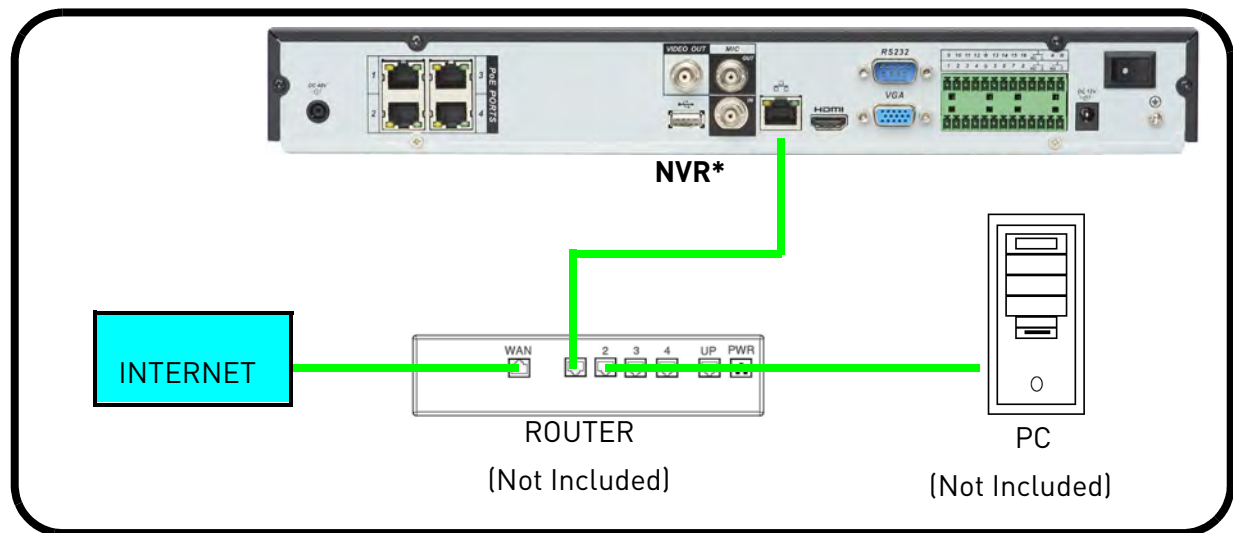


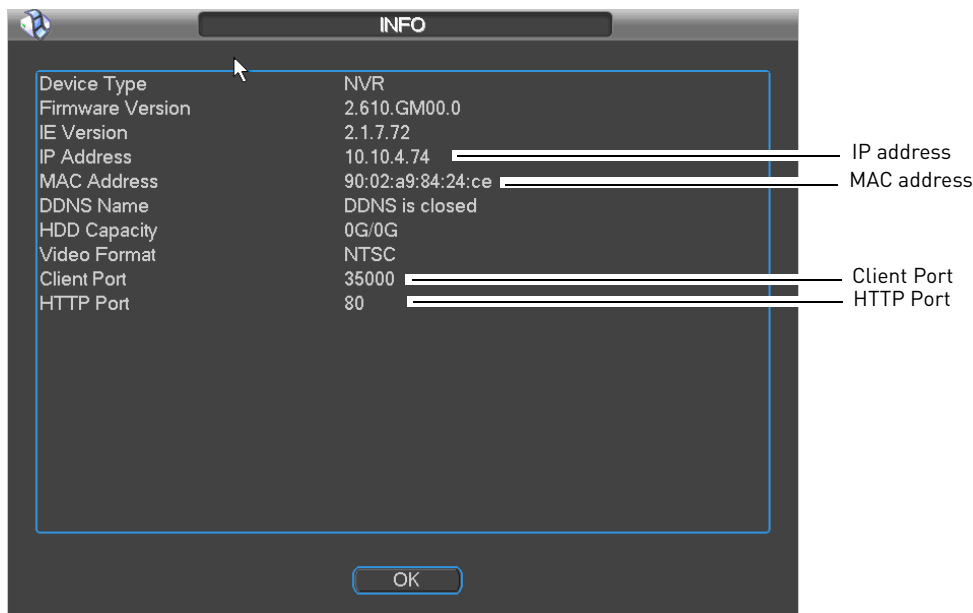
2. Power the system on.
3. Press the **Enter** button on the remote control or front panel to find your system's IP address.
4. Enable Port Forwarding on your router for the Client (default: **35000**) and HTTP Ports (default: **80**). To set up port forwarding, use the included Auto Port Forwarding Wizard software (see "Appendix C: Auto Port Forwarding Wizard" on page 90) or refer to your router manufacturer's instructions.
5. Setup an account at <http://ddns.myddns-flir.com>. For details, see "Appendix D: Setting Up DDNS Service" on page 97.

How Do I Find My IP and MAC addresses?

The IP and MAC address of your system are necessary for DDNS setup. DDNS allows you to view and control your system from a remote location.

To find your IP and MAC address:

- Press **Enter** on the remote control or front panel.
- Left-click to open the Navigation Bar. Login if prompted. Click  to open the System Info screen.



Finding Your External IP Address

If you wish to find your external IP address, you can use a third-party website such as <http://whatismyip.org>


Your external IP address can also be found within your Router settings. Refer to your router's user guide for further details.

How Do I Enable Port Forwarding?

You need to enable port forwarding on your router to allow for external communications with your system for the following ports:

- **80** (HTTP Port)
- **35000** (Client Port)

Computers, NVRs, and other devices inside your network can only communicate directly with each other within the internal network. Computers and systems outside your network cannot directly communicate with these devices. When a system on the internal network needs to send or receive information from a system outside the network (i.e. from the Internet), the information is sent to the router.

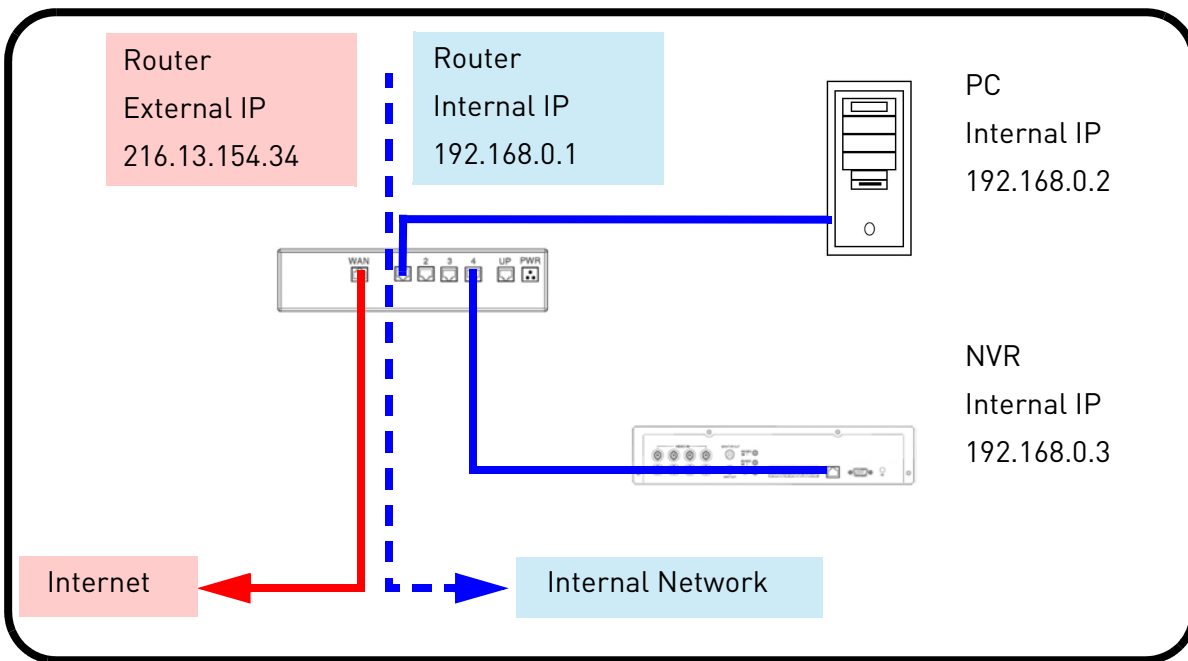NETWORK EXAMPLE

When a computer on the Internet needs to send data to your internal network, it sends this data to the external IP address of the Router. The Router then needs to decide where this data is to be sent to. This is where setting up Port Forwarding becomes important.

Port Forwarding tells the router which device on the internal network to send the data to. When you set up port forwarding on your Router, it takes the data from the external IP address:port number and sends that data to an internal IP address:port number (i.e. Router External IP 216.13.154.34 to NVR Internal IP 192.168.0.3:80).

Please see resources available at <http://www.digimerge.com/> for more assistance with port forwarding.


APPENDIX C: AUTO PORT FORWARDING WIZARD

The Auto Port Forwarding Wizard is an exclusive software that easily automates router port forwarding. Before setting up a DDNS account, it is recommended to run the Auto Port Forwarding Wizard to port forward the required ports.


Installation

To install the Auto Port Forwarding Wizard:


1. Download the Auto Port Forwarding Wizard from www.digimerge.com and run the installer file.
 - The installation window opens.
2. Click **Next** to continue.

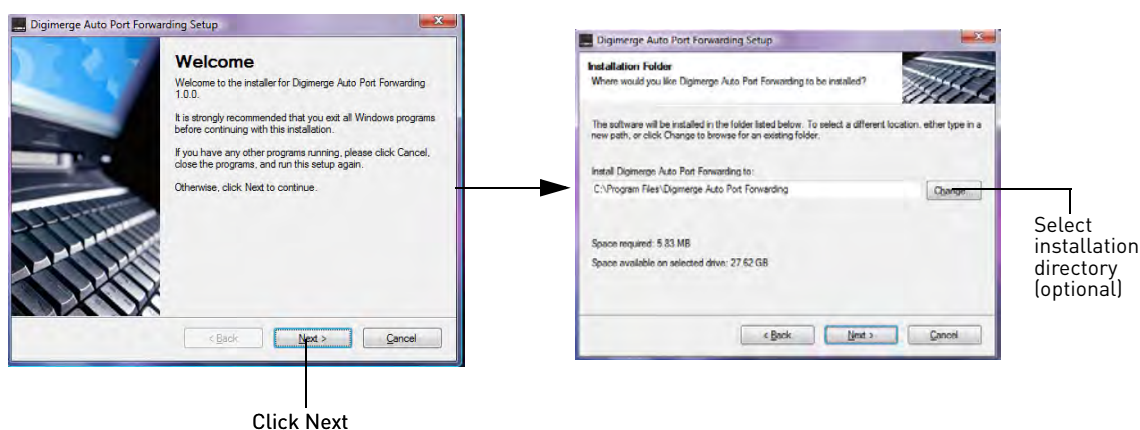


3. Click the **Change** button to change the default installation directory (optional). Click the **Next** button to continue.
4. Select the users who can see the Auto Port Forwarding shortcut (Optional). Click the **Next** button to continue.

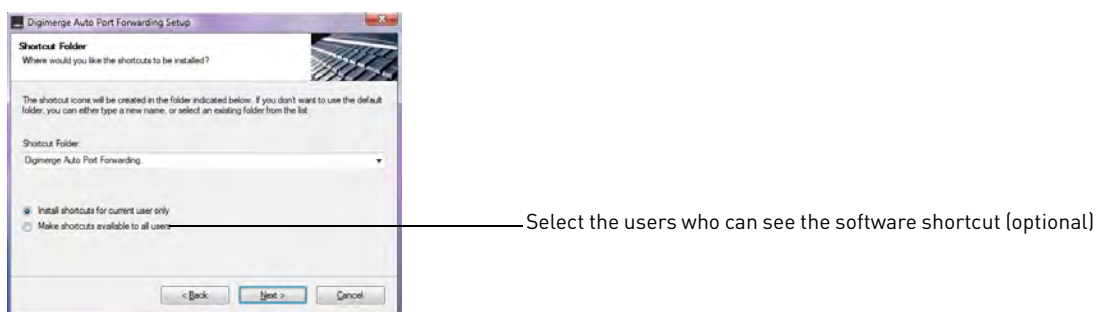

5. Click the **Next** button and then click **Finish** to complete the software installation.

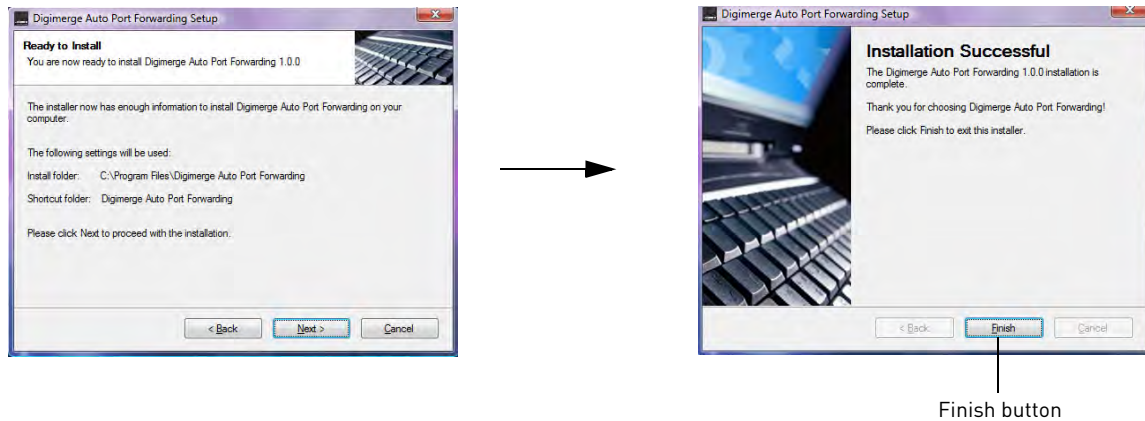


6. Double-click the Auto Port Forwarding shortcut () from your desktop to start the program.

Obtaining Your Router Model Number and Version

On most routers, the model and version number can be found underneath the router, printed on a sticker.

Example

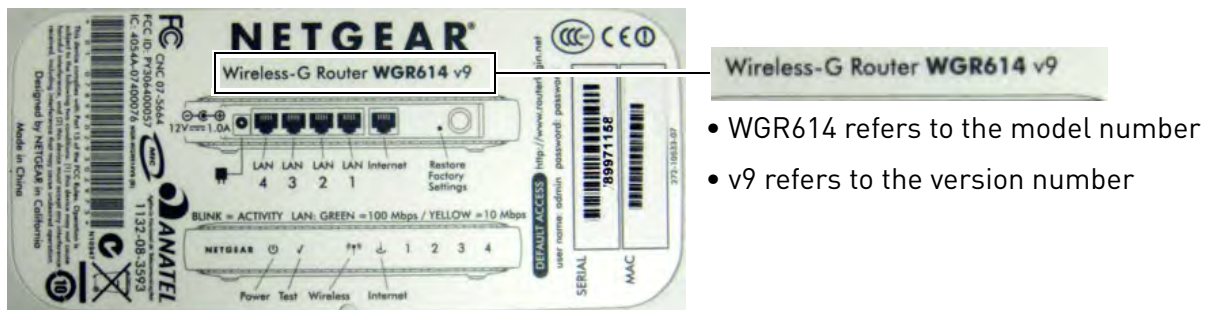

Configuration




You must have the following before you configure the software:

1. Your router's model number and version number
2. Your router's user name and password
3. Your device's IP address
4. Your device's port numbers that require port forwarding


Initial Startup: Select Language

1. Click the Language drop-down menu and select a language (English, French, Spanish). Click the **Start** button to continue.

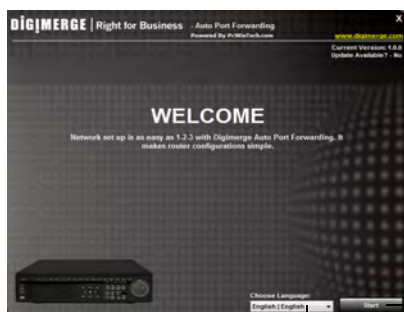

Language drop-down menu

Software update section

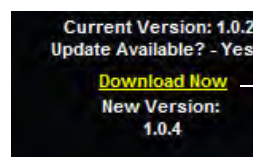

Download Now button


A software update includes an updated list of routers compatible with the Auto Port forwarding Wizard.

2. If software updates are available, click the **Download Now** button in the top-right corner.
 - Run the update file and install the latest version of the software.

Step 1: Populate the Router Database

The Auto Port Forwarding Wizard automatically populates a list of current routers, and detects the number of connected routers.

1. Click the **Next** button after the software detects your router configuration.

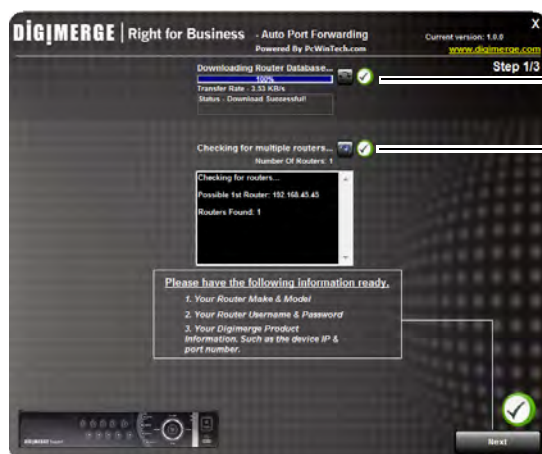

Click to update router database

Click to check for multiple routers





If more than one router is detected, you may need to contact your ISP (Internet Service Provider) to port forward.


For details on configuring multiple routers, see "Configuring Multiple Routers" on page 94

Step 2: Enter your Router Settings


1. Under the Router drop-down list, select the model of your router.
OR

- Click the **Search** button () to enter the name of your router model.

NOTE: Click the **Auto Detect** button () if you have a Linksys or Netgear router (works with most Linksys or Netgear models).

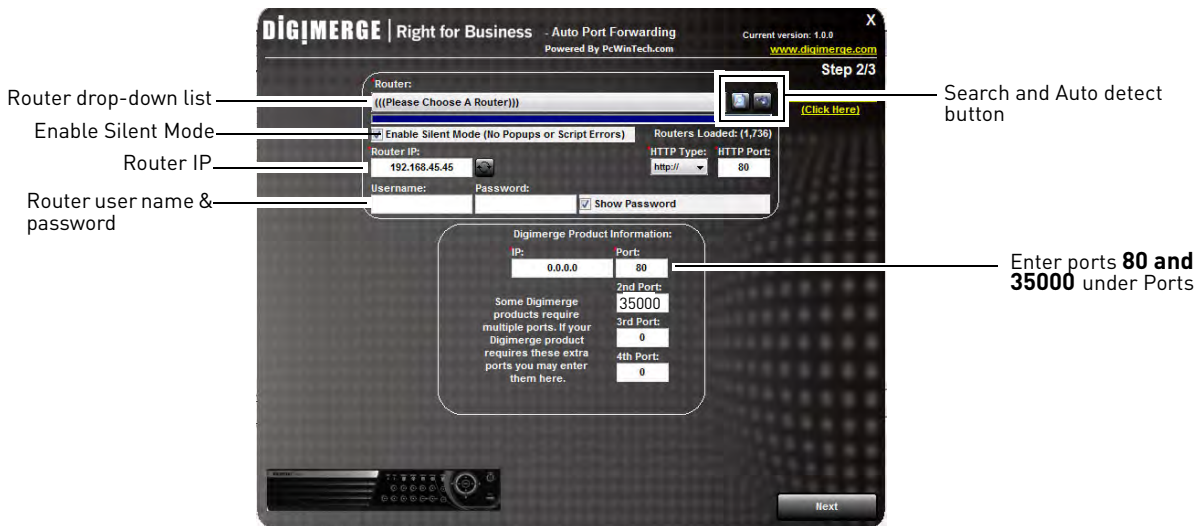

2. Under Router IP, click the **Detect Router IP** button ().
 - The router's IP populates in the blank field. Click **OK** to exit the prompt.
3. Under **Username** and **Password**, enter *the router's* username and password.
 - **Optional:** Under **HTTP Type** (default **http://**) and **HTTP Port** (default, **80**), you may have to change the values depending on your router model. Consult your router manual for details.

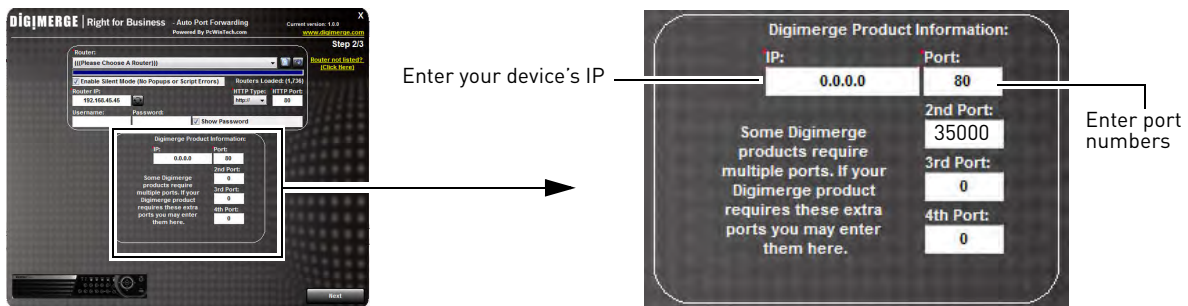


4. Under **IP**, enter the IP address of your device.

NOTE: The IP is usually found in the information window of your NVR.
5. Under **Port**, enter the **NVR's HTTP Port** (by default, port **80**).
6. Under **2nd Port**, enter the **NVR's Client Port** (by default, port **35000**).
7. Click **Next** to continue.

Step 3: Update the Router Settings

1. Click the **Update Router** button.

- You will see your router window open. The Auto Port Forwarding Wizard automatically populates your router with the relevant information. This will take a few moments.

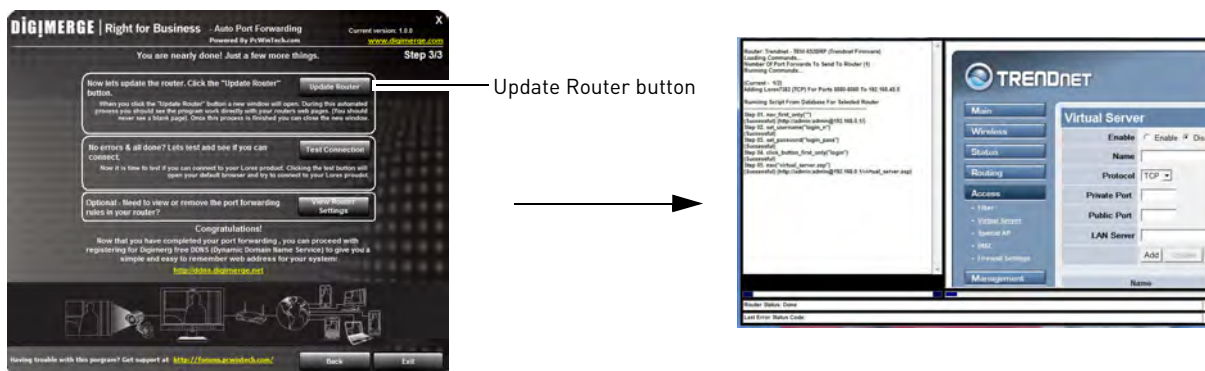

2. Close the update window when the update finishes.

Step 4: Test your Connection

1. Click the **Test Your Connection** button.

- Your system's default browser opens and connects to your **device**.

NOTE: Ensure that Internet Explorer is your system's default internet browser.

NOTE: A window opens that prompts you to enter in your **NVR's** user name and password (do not enter your DDNS log in information).

NOTE: ActiveX warnings may appear. Accept all ActiveX installation warnings to connect to your system.


Configuring Multiple Routers

Your network may have two or more connected routers. During the initial launch of the auto port forwarding wizard, the program scans the network to detect the number of connected routers.

To check for multiple routers:

1. Click the **Detect Multiple Routers** button ().

- A list of connected routers populates in the window.

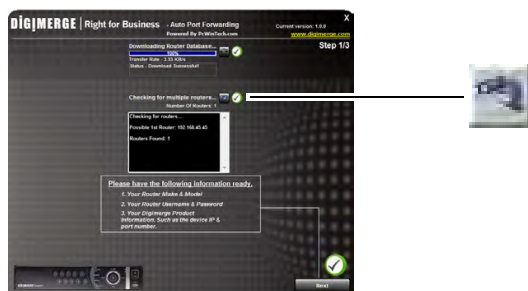

- The "Possible 1st Router" refers to the router directly connected to your system. This is the router that requires the port forward information.


- The "Possible 2nd Router" refers to the router immediate to the internet connection. This is the router that requires you to configure a DMZ host connection.

Scenario A: Router/Modem Combination + Router

- You may have a router/modem combination, with a second router in your network.

Scenario B: Multiple Routers


- You may have two routers in your network.

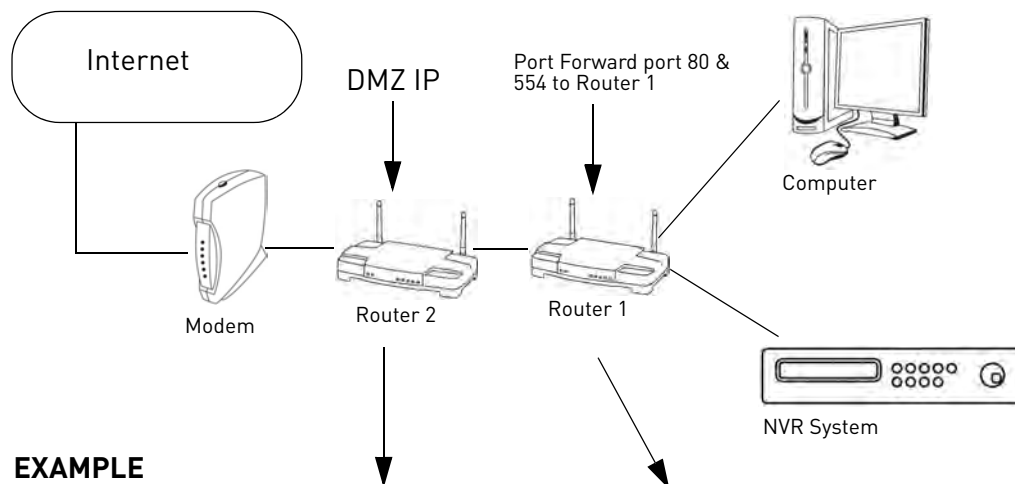

EXAMPLE



Enter 192.168.1.100 into the DMZ Host IP section into Router 2

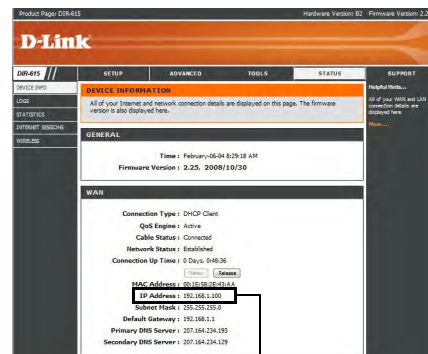

IP Address: 192.168.1.100
(Assigned by Router 2)

In both scenarios, the router that is immediate to the internet connection (Router 2 in illustration) must act as a "bridge" to another router (Router 1 in illustration). The Auto Port Forwarding Wizard must connect to Router 1.

A proper DMZ configuration in Router 2 allows all incoming traffic going through Router 2 to automatically pass to Router 1. Router 2 acts as a "dummy" router and passes all the incoming data onto Router 1. Router 1 is the router that needs the port forwarding information.

Configuring a DMZ host connection

- Connect to "Router 1" on your network (referred to as "Possible 1st Router" in the Auto Port Forwarding Wizard). Obtain the IP address of Router 1. Usually this can be found in the "Status" section of your router menu. The IP should begin with "192.168...." This IP address is your DMZ IP.
- Enter the IP address obtained from Router 1 into the DMZ section of Router 2.
- Once you have configured Router 2 with a DMZ connection, run the Auto Port Forwarding Wizard to begin auto port forwarding to Router 1.
- Consult your router's owner's manual for details on configuring DMZ settings.

Example

DMZ stands for Demilitarized Zone. Enabling a DMZ IP on your router enables one of the routers to pass information onto the second router.

DMZ IP address assigned by a secondary router

Locating your Router IP - The Status Page

The "Status Page" of a router normally includes the router's vital information such as the IP address.

EXAMPLE


The IP information is normally under a header called "WAN" or "Internet Port". Each router has different terminology.


Router IP assigned by the main router. Enter this IP into the DMZ section of the primary router.

APPENDIX D: SETTING UP DDNS SERVICE

FLIR offers a free DDNS service for use with your NVR. A DDNS account allows you to set up a web site address that points back to your local network. The following outlines how to set up your free DDNS account.

To setup your free FLIR DDNS account:

1. In your browser, go to <http://ddns.myddns-flir.com> and click **Create Account**.
2. Complete the Account Information fields with your personal information. Complete the Warranty Information with your purchase details (optional).
3. Complete the System Information fields:
 - **Product License:** Select your product model from the Product License drop down menu (i.e. DNR200).
 - **←Product Code→ - ←MAC Address→:** Enter the MAC address of your NVR. To find the MAC address, press the **Enter** button on the remote control or front panel **OR** left click on the screen, enter the admin password (default: **000000**), and then click .
 - **URL Request:** Choose a URL for your DDNS connection (i.e. your name, your company or business name, or anything of your choice).
4. Once the information has been entered, click **Create New Account**.
5. Your Account information will be sent to you at the email Address you used in Step 2.

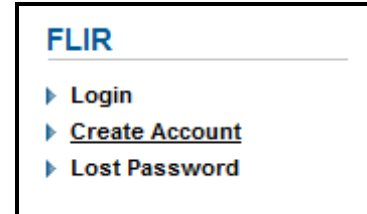

Create a DDNS account

Enter personal information

System information

You will need this information for remote access to your system. Record your information below:

User name: _____

Domain name*: _____


Password: _____

How Do I Enable DDNS On My System?


Once you have registered for free DDNS service, use the information in the confirmation email to configure DDNS settings on your system.

To enable DDNS on your system:


1. In live view, right-click and then click **Main Menu**. Login using the admin account if prompted (default user name is **admin** and default password is **000000**).
2. Click **Setting**→**Network**.
3. Click **Network Setting**.

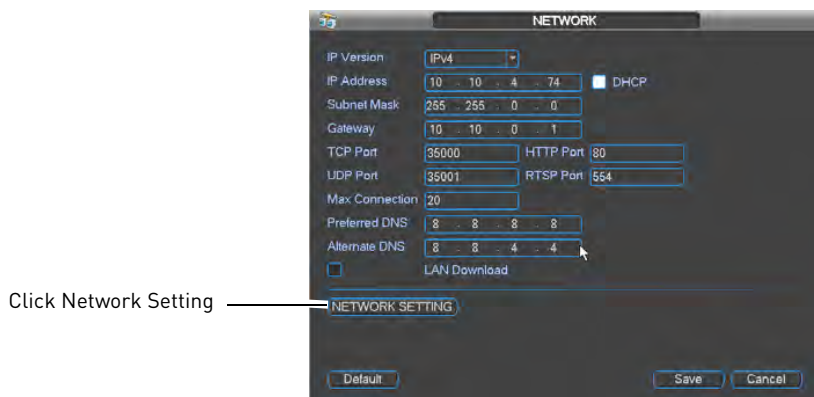

4. Check **DDNS**.
5. Double-click **DDNS**.

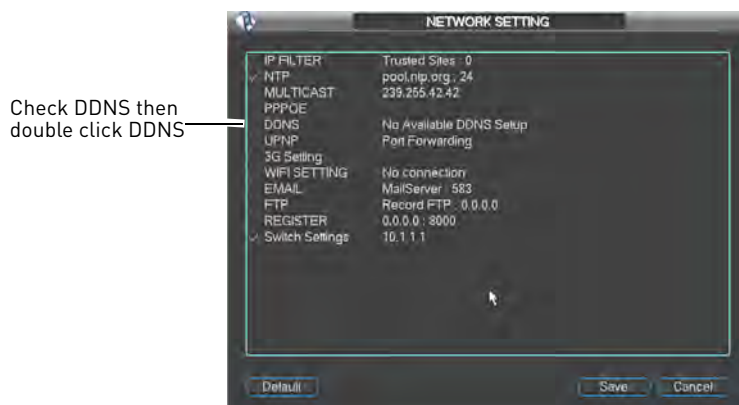

6. Configure the following:

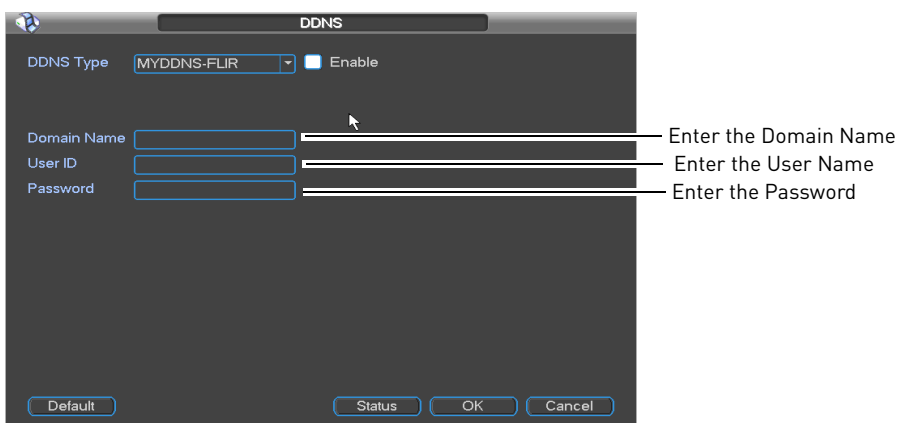

- Ensure **Enable** is checked. The checkbox will be white when DDNS is enabled.
 - Under **Domain Name**, enter the **Domain Name** from the confirmation email you received after registering for DDNS.
 - Under **User ID**, enter the **User Name** from the confirmation email.
 - Under **Password**, enter the **Password** from the confirmation email.
7. Click **OK**.
 8. Click **Save**.

NOTE: It may take between 10~15 minutes for the DDNS server to update with your new DDNS address.

Connecting to your system using DDNS

NOTE: You must port forward ports on your router to NVR's IP address (by default, ports **35000** and **80**) to connect to your system over the Internet.

Now that you have set up your system for DDNS, use the following address formats to connect:

CMS Software or Mobile Apps

tomsmith.myddns-flir.com

DDNS address

- For details on the CMS Software, see "FLIR SyncrolIP NVR Central Management Software" on page 39.
- For details on mobile apps, see "Mobile Connectivity" on page 61.

Internet Explorer

http://
http://tomsmith.myddns-flir.com:80

DDNS address

Colon
HTTP port number

- For details, see "Remote Viewing on Internet Explorer" on page 57.

APPENDIX E: REMOTE FIRMWARE UPGRADE

To perform a firmware upgrade over the LAN or Internet, a Config Tool is provided on the CD or www.digimerge.com. In an effort to continuously improve the functionality of our products, firmware upgrades are available as a free download on www.digimerge.com, as they are released.

NOTE: The Config Tool is supported on PC only. You may also upgrade the firmware using the NVR's local menus (see "Updating Firmware" on page 21).


Installing a Firmware Upgrade Over the LAN

Prerequisites:

- Connect your NVR to a router or switch on your network.
- Download a firmware upgrade from www.digimerge.com, if one is available. Extract the contents.


To perform a firmware upgrade over the LAN:

1. Download the Config Tool from www.digimerge.com.
2. Extract the contents into a folder.
3. Open the folder and right-click **ConfigTool.exe** and **Run as administrator**. If a Windows Firewall warning appears, click **Allow Access**. The Config Tool scans your LAN for NVR's.
4. Click **Upgrade**.

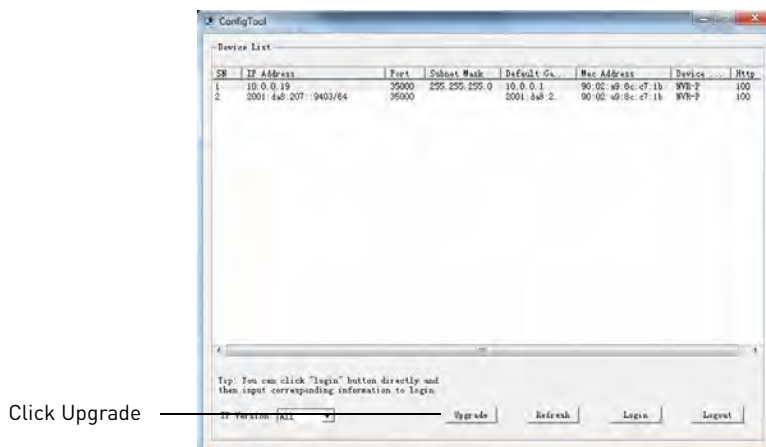

5. Check any NVR's you would like to upgrade.
6. Click **Open**. Select the upgrade firmware file (.bin).

7. Click **Upgrade**. Wait for the upgrade to complete. **Do not power off the system or disconnect the power cable during upgrade.** The system will restart when the upgrade is complete.

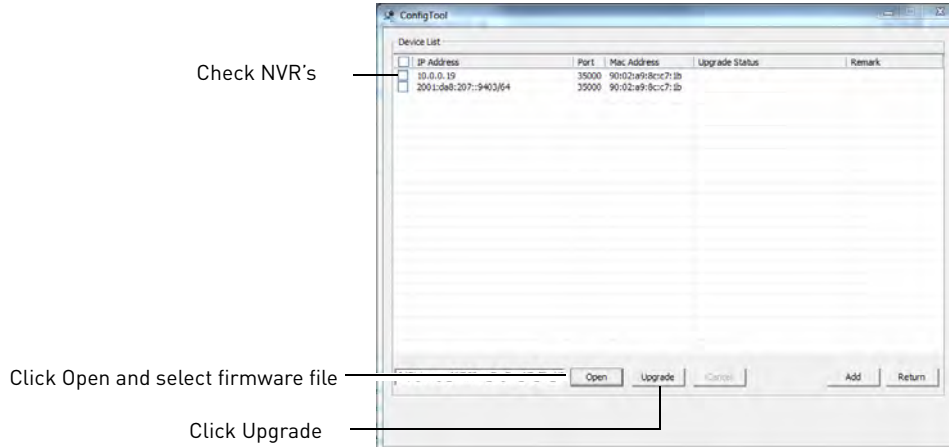


Installing a Firmware Upgrade Over the Internet

Prerequisites:

- Port forward the Client Port (default: **35000**) on the NVR's local router.
- Obtain the public IP address of the NVR.
- Download a firmware upgrade from www.digimerge.com, if one is available. Extract the contents.


To perform a firmware upgrade over the Internet:

1. Download the Config Tool from www.digimerge.com.
2. Extract the contents into a folder.
3. Open the folder and right-click **ConfigTool.exe** and **Run as administrator**.
4. Click **Login**.
5. Under **IP Address**, enter the public IP address of the NVR. Edit the **User Name**, **Password**, or **Port** if these have been changed from the default values.

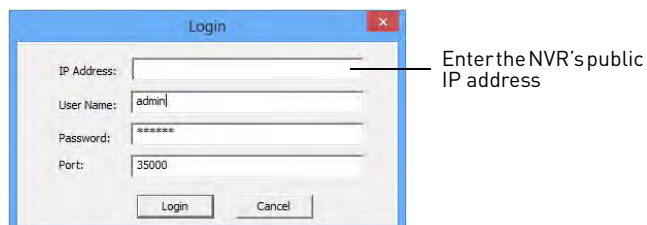

6. Click **Login**. The Config Tool logs in to the NVR.
7. Click **System Upgrade**.
8. Click **Open**. select the firmware file (.bin).

9. Click **Upgrade**. Wait for the upgrade to complete. **Do not power off the system or disconnect the power cable during upgrade.** The system will restart when the upgrade is complete.

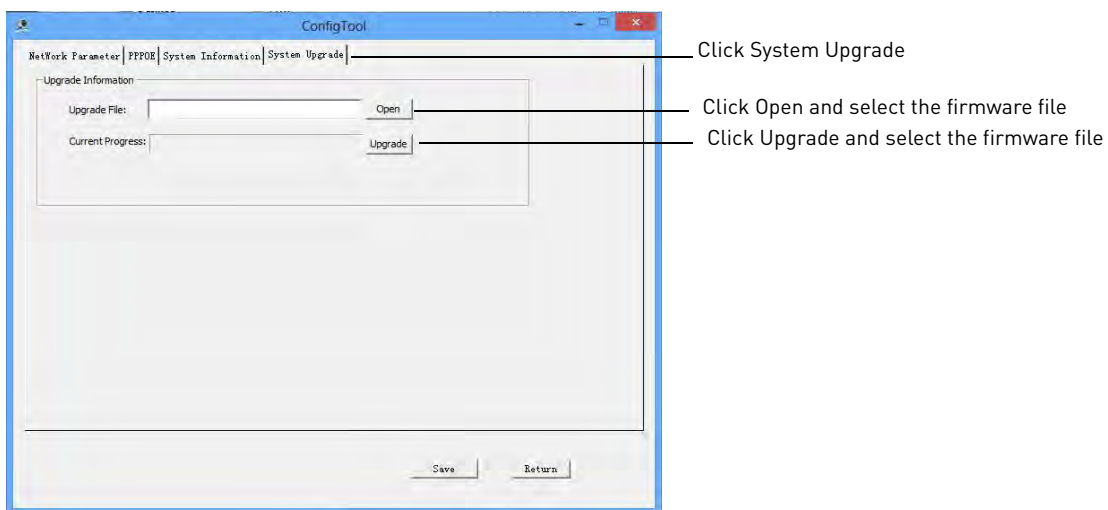

APPENDIX F: HARD DRIVE INSTALLATION

The system comes with one or more pre-installed 3.5" SATA hard drives. You can install up to two hard drives up to a maximum size of 3TB each (for a maximum total storage of 6TB).

Installing a Hard Drive



Make sure that the system is OFF and ALL power adapters have been disconnected before removing/installing the hard drive.

To remove the hard drive:

1. Power off the system, and unplug all wiring / cabling from the system.
2. Remove the screws (4x) from the back panel. Slide the cover back and up to remove.



3. Insert hard drive screws (4x) on the hard drive and tighten them half way.



4. Place the hard drive over one set of screw holes on the bottom panel with the SATA power and data connectors facing the middle of the unit. Slide the hard drive into place.




Hard drive screw holes




Place hard drive over screw holes and slide into place

5. Turn the unit over and tighten the hard drive screws.

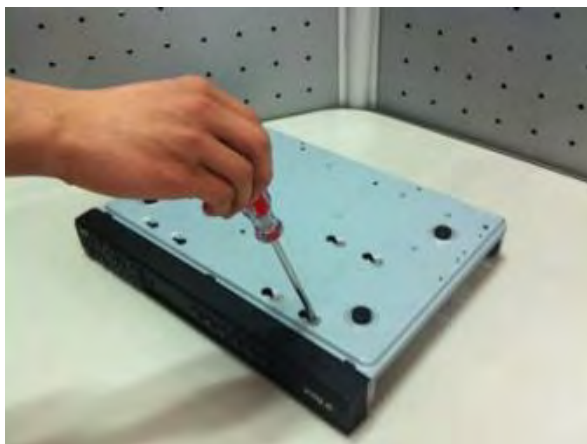

6. Turn the unit back over and connect the SATA power and data cables to the hard drive.

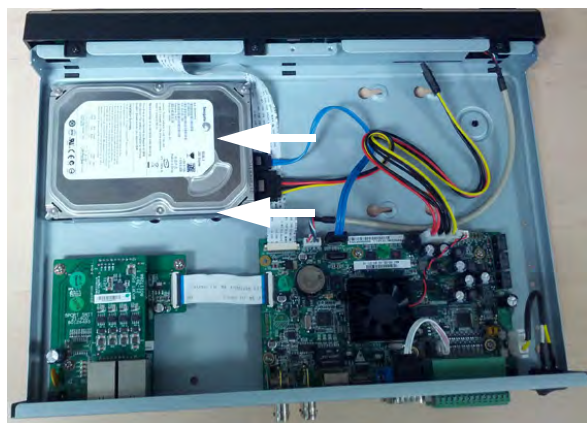

7. Replace the cover and cover screws. Make sure to slide the lip on the cover under the bottom of the front panel.

NOTE: After installation, you must format the hard drive in order to use it with the system. See "Formatting the Hard Drive" on page 106.

Removing the Hard Drive




Make sure that the system is OFF and ALL power adapters have been disconnected before removing/installing the hard drive.

To remove the hard drive:


1. Power off the system, and unplug all wiring / cabling from the system.
2. Remove the screws (4x) from the back panel. Slide the cover back and up to remove.



3. Remove the SATA power and data cables from the hard drive.

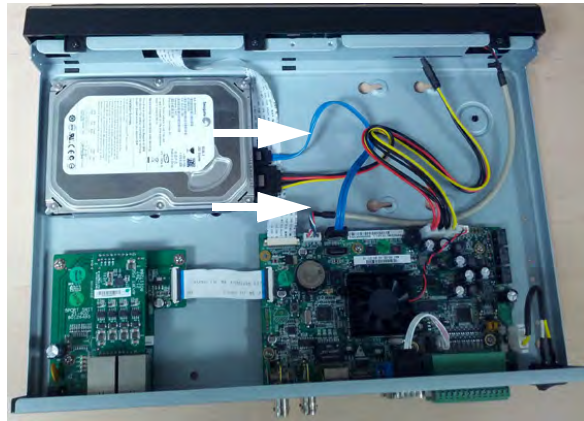

4. Turn the unit over and loosen the hard drive screws. **Do not remove the hard drive screws.**

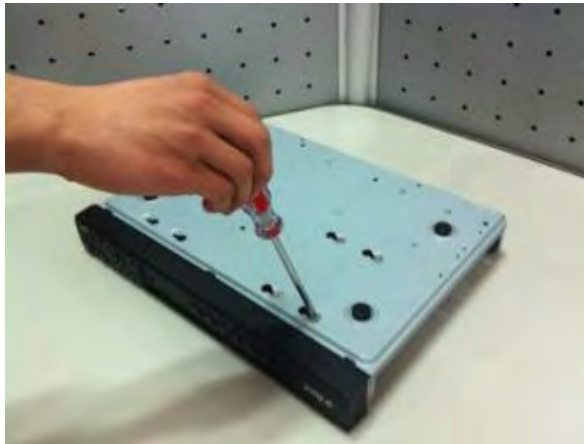

5. Turn the unit back over and remove the hard drive from the case.
6. Remove the hard drive screws from the hard drive.



Remove hard drive
screws (4x)

7. Replace the cover and cover screws. Make sure to slide the lip on the cover under the bottom of the front panel.


Formatting the Hard Drive

After installing a new hard drive, you must format it before the system can recognize it.

ATTENTION: Formatting the HDD erases *all data* on the hard disk. *This step cannot be undone.* System settings will not be erased.


To format a hard drive:

1. From Live View, right-click and select **Main Menu**→**Advanced**→**HDD Management**.
2. Under **HDD No.**, select the hard drive you would like to format. Information about the hard drive appears in the lower section of the menu.
3. Under **Set to**, select **Format**.
4. Click **Apply**. Click **OK** to confirm. Wait for the hard drive to format. Hard drives become Read/Write hard drives by default when formatted.

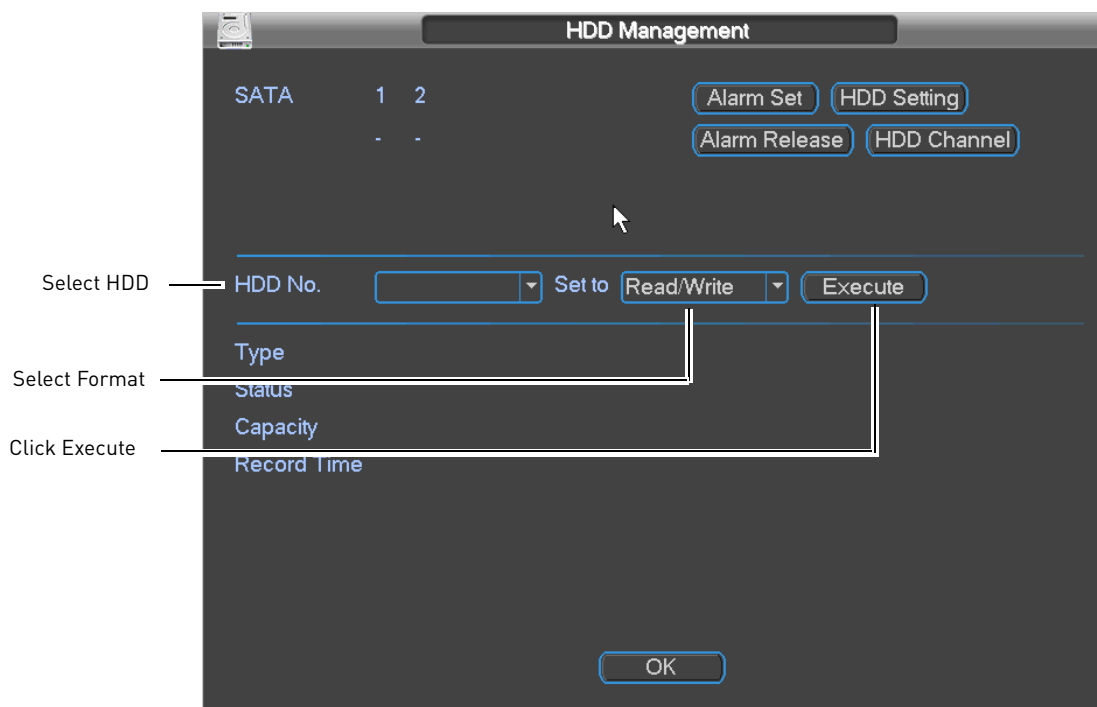

APPENDIX G: CONNECTING AN EXTERNAL MONITOR

A BNC output is available to connect the NVR to an external monitor or TV. The BNC output shows a duplication of the live display.

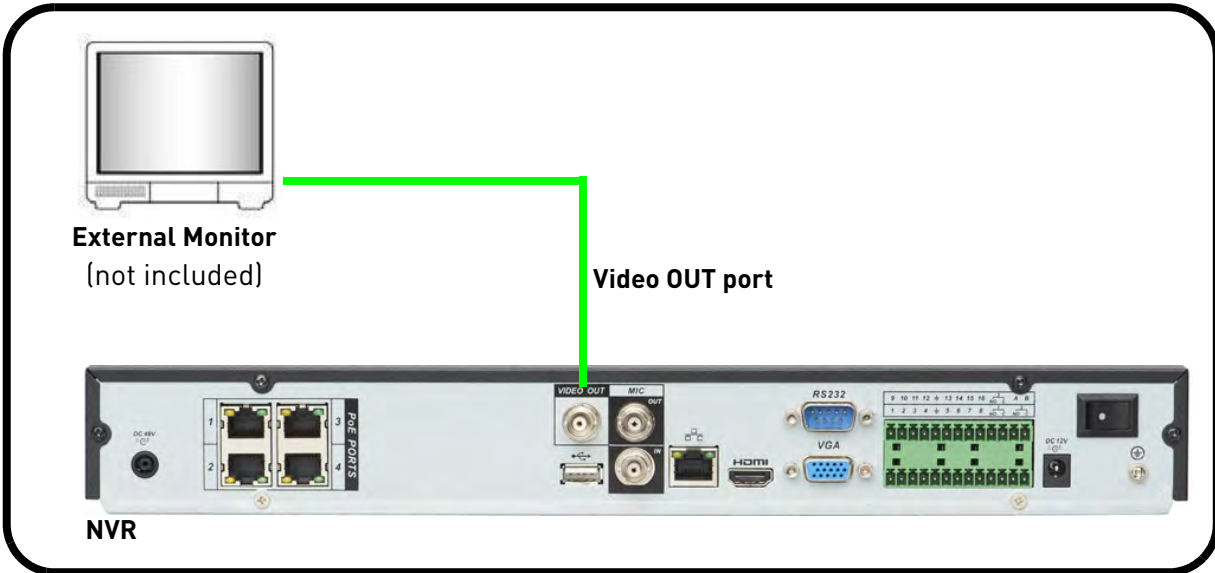

TROUBLESHOOTING

When a malfunction occurs, it may not be serious and can be corrected easily. The following describes the most common problems and solutions. Please refer to the following before calling Digimerge Technical Support:

Error	Possible Causes	Solutions
<ul style="list-style-type: none"> NVR is not receiving power, or is not powering up 	<ul style="list-style-type: none"> Cable from power adapter is loose or is unplugged 	<ul style="list-style-type: none"> Confirm that all cables are connected correctly Confirm that the power adapter is securely connected to the back of the unit
	<ul style="list-style-type: none"> Cables are connected, but NVR unit is not receiving sufficient power 	<ul style="list-style-type: none"> Confirm that the unit is powered on (LED indicators on the front should be ON) If the unit is connected through a power bar or surge protector, try bypassing the bar and connecting the power directly to the wall outlet Confirm that there is power at the outlet: <ul style="list-style-type: none"> Connecting the power cable to another outlet Test the outlet with another plugged device (such as an electric calculator or phone charger)
<ul style="list-style-type: none"> There is no picture on selected channels / camera picture is not being displayed 	<ul style="list-style-type: none"> PoE power adapter is not connected 	<ul style="list-style-type: none"> Make sure the 48V DC power adapter is connected to the NVR or the cameras will not receive power from the PoE Ports
	<ul style="list-style-type: none"> Camera cables are loose or have become disconnected 	<ul style="list-style-type: none"> Disconnect and reconnect the cable at the NVR and at the Camera Try moving the camera to another channel or use another cable If your cameras are not using PoE, make sure they are using the correct power source according to the specifications provided by the manufacturer
	<ul style="list-style-type: none"> Camera/NVR connection to LAN has become interrupted 	<ul style="list-style-type: none"> Make sure your cameras are connected to the same LAN as the NVR Make sure any routers or switches in between the NVR and IP cameras are powered on
<ul style="list-style-type: none"> Remote control is not detected by the system 	<ul style="list-style-type: none"> Batteries in the remote control are drained There are no batteries in the remote control 	<ul style="list-style-type: none"> Install 2 fresh AAA batteries in the remote control

<ul style="list-style-type: none"> • Hard drive is not detected by the system 	<ul style="list-style-type: none"> • Hard drive cables are loose or not properly connected 	<ul style="list-style-type: none"> • Remove the housing and check that hard drive cables are firmly connected
	<ul style="list-style-type: none"> • Hard drive has not been initialized (formatted) by the system 	<ul style="list-style-type: none"> • For details, see "Formatting the Hard Drive" on page 106
	<ul style="list-style-type: none"> • There is no hard drive in the system 	<ul style="list-style-type: none"> • Open the housing and install a 3.5" SATA hard drive
<ul style="list-style-type: none"> • Hard drive is full and the unit is no longer recording 	<ul style="list-style-type: none"> • Overwrite is not enabled 	<ul style="list-style-type: none"> • From the Main Menu, select General. Beside HDD Full, select Overwrite. Click OK to save settings. This enables the system to continuously record by overwriting data once the hard drive is full
<ul style="list-style-type: none"> • Mouse not detected by system 	<ul style="list-style-type: none"> • Mouse cable is not firmly connected to the system 	<ul style="list-style-type: none"> • Firmly connect the mouse cable to the system
	<ul style="list-style-type: none"> • Mouse is not connected to the system 	
	<ul style="list-style-type: none"> • System needs to be reset 	<ul style="list-style-type: none"> • Re-connect the power cord to restart the system.
<ul style="list-style-type: none"> • My system does not seem to be recording 	<ul style="list-style-type: none"> • Recording may be disabled 	<ul style="list-style-type: none"> • Right-click in live view, and click Record. Ensure that each channel is set to Schedule or Manual. If schedule is selected, make sure schedule settings are correct under Setting→Schedule. ATTENTION: For security, it is highly recommended to keep Continuous Recording ON at all times

Remote Connectivity Troubleshooting

Error	Possible Causes	Solutions
<ul style="list-style-type: none"> • Cannot connect to the NVR over the Internet 	<ul style="list-style-type: none"> • Ports not forwarded 	<ul style="list-style-type: none"> • Port forward the HTTP port (default: 80) and Client port (default: 35000)
	<ul style="list-style-type: none"> • DDNS Setup not completed 	<ul style="list-style-type: none"> • Register for a DDNS account. For details, see "Appendix D: Setting Up DDNS Service" on page 97
	<ul style="list-style-type: none"> • Ports are blocked by Internet Service Provider (ISP) 	<ul style="list-style-type: none"> • Some ISP's block port 80. Reassign the HTTP port to anything above 1026. Re-complete port forwarding using the newly assigned port
	<ul style="list-style-type: none"> • Multiple routers installed in local network 	<ul style="list-style-type: none"> • If you have multiple routers, additional setup may be required. For details, see "Configuring Multiple Routers" on page 94.
<ul style="list-style-type: none"> • Could connect to system previously, but no longer can 	<ul style="list-style-type: none"> • NVR internal IP address has changed 	<ul style="list-style-type: none"> • This can occur if your router resets due to power failure. Set up a fixed IP address for your NVR. For details, see "Configuring DHCP or Fixed IP Address" on page 25
<ul style="list-style-type: none"> • Cannot connect to the NVR using a smartphone or tablet 	<ul style="list-style-type: none"> • IP address used from outside local network 	<ul style="list-style-type: none"> • Use the DDNS address to connect to the NVR using a mobile application (e.g. tomsmith.myddns-flir.com)
	<ul style="list-style-type: none"> • Router is blocking DDNS connection from internal network 	<ul style="list-style-type: none"> • Turn off WiFi connection and attempt to connect using 3G or mobile network

Need Help?

Please make sure to visit our website **www.digimerge.com** to receive product updates and information.

3 Easy Ways To Contact Us



Online:

Product support is available 24/7 including product information, user manuals, quick start up guides and FAQ's at **www.digimerge.com**



By Email:

Technical support (for technical/installation issues)
tech@digimerge.com



By Phone:

North America: 1-866-816-5919

Technical support (for technical/installation issues)
Mon-Fri 8.00 am to 8.00pm EST

We welcome your feedback at
info@digimerge.com

For more information, visit
www.digimerge.com

