


OA-6500S(E)

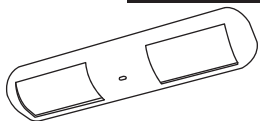

MANUFACTURER'S STATEMENT

Read this operation manual carefully before use to ensure proper operation of this product. Failure to read this operation manual may cause improper operation and may result in serious injury or death of a person. The meanings of the symbols are as follows.

	WARNING	Disregard of warning may cause the improper operation causing death or serious injury of a person.
	CAUTION	Disregard of caution may cause the improper operation causing injury of a person or damage to objects.
	NOTE	Special attention is required to the section of this symbol.

NOTE

- This product is a non-contact switch intended for header mount for use on industrial door. Do not use for any other applications.
- When setting the sensor's detection area, make sure that there is no traffic around the installation site.
- Before turning the power ON, check the wiring to prevent damage or malfunction of equipment connected to the product.
- Only use the product as specified in the operation manual provided.
- Be sure to install and adjust the sensor in accordance with the local laws and standards of the country in which the product is installed.
- Before leaving the installation site make sure that the product is operating properly and instruct the building owner/operator on proper operation of the door and the product.
- The product settings can only be changed by an installer or service engineer. When changed, the changed settings and the date shall be registered in the maintenance logbook accompanying the door.

	WARNING	Do not wash, disassemble, rebuild or repair the sensor, otherwise it may cause electric shock or breakdown of the equipment.
Danger of electric shock.		

- NOTE** The following conditions are not suitable for sensor installation.
- Fog or exhaust emission around the door.
 - Wet floor.
 - Vibrating header or mounting surface.
 - Moving objects or objects that emit light near the detection area.
 - Highly reflecting floor or highly reflecting objects around the door.




SPECIFICATIONS

Model	: OA-6500S(E)	Activation output	: When 3rd rows detect. N.C. / N.O. selectable
Color	: Black	Safety output	: When 1st or 2nd row detects. N.C. / N.O. selectable
Mounting Height	: 2.5m(8'2") to 6.5m(21'4")	Output hold time	: Approx. 0.5 sec.
Detection area	: See DETECTION AREA	Response time	: <0.3 sec.
Detection method	: Active infrared reflection method (All presence detection)	Operation temperature	: -20°C to +55°C(-4°F to 131°F)
Depth adjustment	: 1st and 2nd rows: -15° to +5° 3rd row: +30° to +50°	Operating humidity	: <80%
Power supply	: 12 to 24V AC ±10% (50/60Hz) 12 to 30V DC ±10%	IP rate	: IP44
Power consumption	: <2.5W (< 3.5VA at AC)	Weight	: 600g(21.2 oz)
Operation indicator	: Green / Stand-by Red / 1st row detection Orange / 2nd and 3rd rows detection	Accessories	: 1 Cable 4m(13'2") 2 Mounting screws 1 Mounting template 1 Operation manual 1 High mount window 1 Protection sticker

NOTE The specifications herein are subject to change without prior notice due to improvements.

DETECTION AREA

[Standard window]

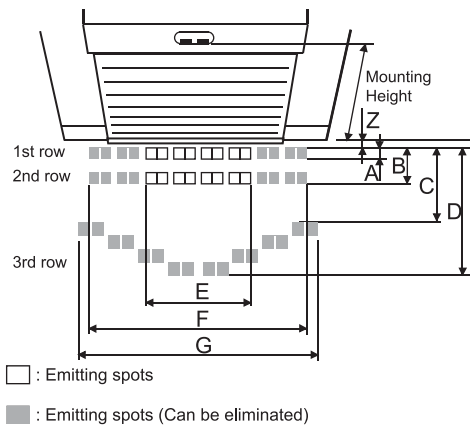


[mm(feet,inch)]

Window	Standard window			High mount window	
Mounting Height	2,500 (8'2")	3,500 (11'6")	4,500 (14'9")	5,500 (18'1")	6,500 (21'4")
A	150 (6")	210 (8")	280 (11")	340 (1'1")	400 (1'4")
B	560 (1'10")	790 (2'7")	1010 (3'4")	1240 (4'1")	1470 (4'10")
C	680 (2'3")	960 (3'2")	1240 (4'1")	1510 (4'11")	1790 (5'11")
D	1340 (4'5")	1870 (6'2")	2410 (7'11")	2940 (9'8")	3480 (11'5")
E	1530 (5'1")	2150 (7'1")	2760 (9'1")	2790 (9'2")	3300 (10'10")
F	3640 (11'11")	5100 (16'9")	6560 (21'7")	7230 (23'9")	8550 (28'1")
G	3840 (12'7")	5380 (17'8")	6910 (22'8")	7620 (25")	9010 (29'7")
Z	150 (6")	220 (9")	280 (11")	340 (1'1")	410 (1'4")



Values of the chart are based on the 1st and 2nd rows : +5° following depth angle adjustment settings; 3rd row : +30°

[High mount window]

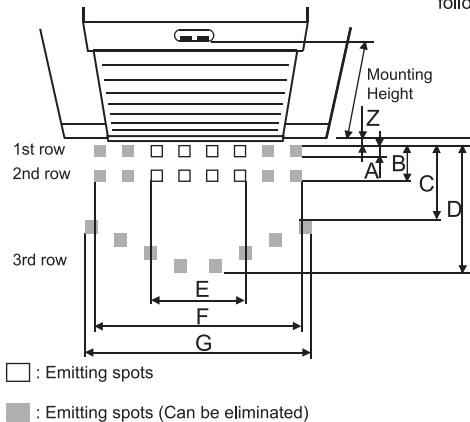

NOTE The actual detection area may become smaller depending on the ambient light, the color / material of the object or the floor as well as the entry speed of the object. The sensor may not be activated when the entering speed of the object or a person is slower than 50mm / sec. or faster than 1500mm / sec.


OUTER DIMENSIONS AND PART NAMES

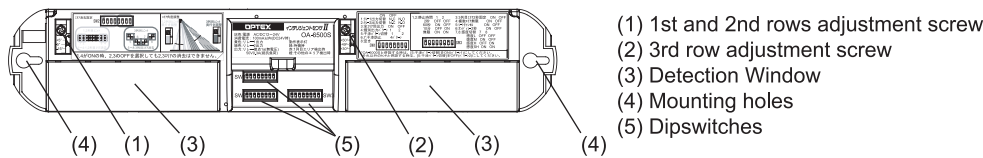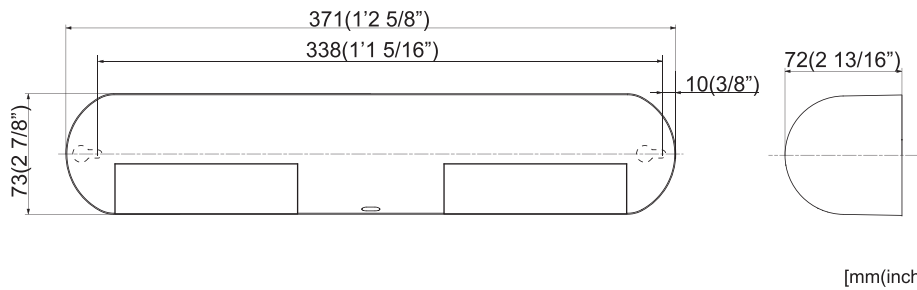

INSTALLATION


1

Drill two mounting holes ø3.4mm (ø1/8") on the header. To pass the cable through the header, drill a wiring hole of ø8mm (ø5/16").

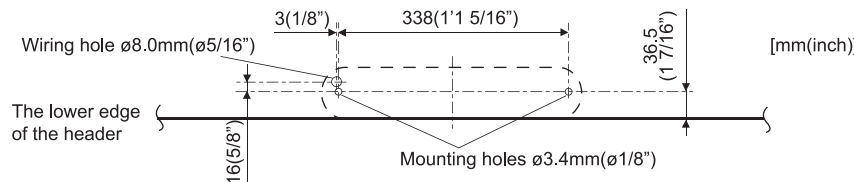

2

Wire the cable to the door controller as shown below.

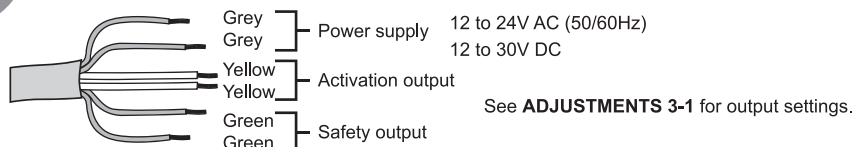

	WARNING	Before starting the procedure, make sure that the power is turned OFF. When passing the cable through the hole, do not tear the shield. otherwise it may cause electric shock or breakdown of the sensor.
Danger of electric shock.		

3


- Plug the connector of the sensor.
- Supply power to the sensor. Adjust the detection area and set the dipswitches. (See **ADJUSTMENTS**)

NOTE


Make sure to connect the cable correctly to the door controller before turning the power on. When turning the power on or after adjusting the settings, do not enter the detection area for more than 10 seconds in order to enable the presence detection. When changing the settings of dipswitch, see **ADJUSTMENTS 3 Dipswitch settings**.

4

- Put the protection sticker as shown below.

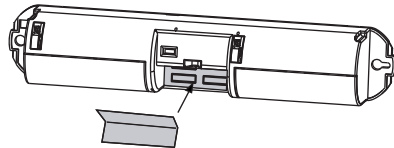

- Place the housing cover. If wiring is to be exposed, break the knockout.

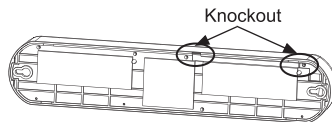

	WARNING	Do not use the sensor without the cover. When using the cable knockout, install the sensor indoors or use the rain-cover (Separately available) otherwise electric shock or breakdown of the sensor may occur.
Danger of electric shock.		

ADJUSTMENTS


1

Detection window selection


According to the mouting height, select proper detection window.
2.5m(8'2") to 5.0m(16'5"):Standard window(default)
5.0m(16'5") to 6.5m(21'4"):High mount window

When changing window follow procedure below.


- Remove the screws

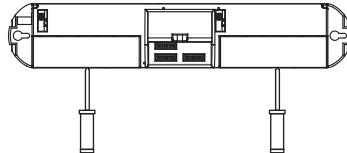


- Take the windows off.



- Attach the windows.

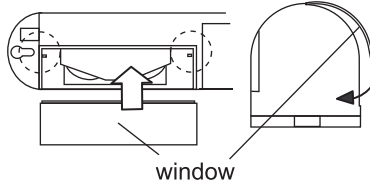

- Fix the windows with the screws.

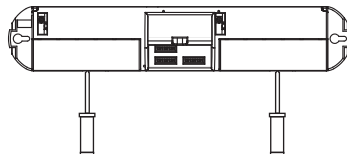


NOTE Please carry out operation check after changing window.

ADJUSTMENTS

2 Area adjustment

[Depth adjustment]

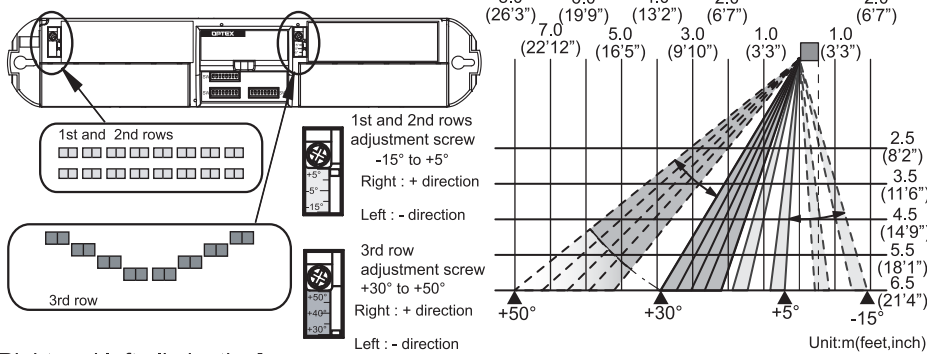

[Right and left elimination]



ON : Active area
OFF : Eliminated area


1st and 2nd rows

Detection areas 1 to 4 shown in right figure can be eliminated with dipswitches 1 to 4.
*Detection area 2 (3) can not be eliminated when dipswitch 1 (4) is not eliminated.

3rd row


Detection areas 5 to 8 can be eliminated with dipswitches 5 to 8

Detection areas 1 to 8 correspond to dipswitches 1 to 8

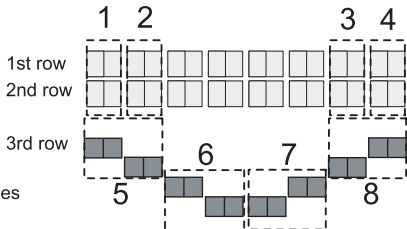

3 Dipswitch settings


[1.Dipswitches <SW1>]




- 1 : Activation output
- 2 : Safety output
- 3 : Simultaneous output
- 4 : 2nd row output setting
- 5,6,7: Frequency
- 8 : N/A

3-1.Setting the outputs(SW1 Dipswitch 1,2,3 and 4)


The outputs from Activation output (2nd and 3rd rows) and Safety output (1st row) can be selected separately from N.C. and N.O. by dipswitch 1 and 2.

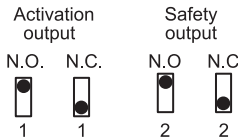

The output timing from "Activation output" and "Safety output" can be changed by dipswitch 3. With dipswitch 3 set to "ON" the output timing will be the same. With dipswitch 3 set to "OFF" the output timing will be different. See **CHECKING**.




The 2nd row output selectable by dipswitch 4. With dipswitch 4 set to "ON" the output from 2nd row will be sent from Activation output. With dipswitch 4 set to "OFF" the output will be sent from Safety output. See **CHECKING**.

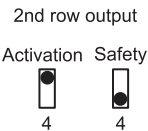


3-2.Setting the frequency (SW1 Dipswitch 6 and 7)

When using more than 2 sensors close to each other, set the different frequency for each sensor by combining dipswitch 6 and 7.



NOTE Make sure that Dipswitch 5 is set to "OFF" for any setting.


[2.Dipswitches <SW3>]



- 1,2 : Presence detection timer
- 3 : 2 sec. detection timer
- 4 : Automatic infinite presence detection
- 5 : Door cancel function
- 6 : ON delay
- 7,8 : Sensitivity

3-3.Setting the presence detection timer (SW3 Dipswitch 1 and 2)

Presence detection timer can be selected by combining dipswitch 1 and 2.



NOTE To enable the presence detection, do not enter the detection area for 10 seconds after setting the timer.

3-4.Setting the presence area (SW3 Dipswitch 3)

With dipswitch 3 "1st & 2nd", presence detection timer for 1st & 2nd rows belong to dipswitch 1 and 2. Presence detection timer for 3th row automatically becomes 2 sec.. With dipswitch 3 "1st to 3rd", presence detection timer will be same as all detection area, set by combining dipswitch 1 and 2.



NOTE When dipswitch 4 is set to "ON" the automatic infinite presence detection has priority over this function.


3-5.Setting the automatic infinite presence detection (SW3 Dipswitch 4)

When people or objects enter more than 2 spot areas, this function automatically sets the presence detection timer to infinity to increase safety and avoid unwanted door opening due to sudden change in floor condition.



3-6.Setting the door cancel function (SW3 Dipswitch 5)

When dipswitch 5 is "ON" the sensor is less influenced by the door movement, i.e. caused by wind. If the sensor does not detect for 10 sec., the 1st row will be disabled when door cancel function is "ON". (The 1st row will be enabled again when there is detection at other rows.)




WARNING

Risk of getting caught.

With this fuction, 1st row is disabled if there are no dition for 10sec. If a person or vehicle enter the first row without any detection in other rows (e.g. enter from the other side), it might cause an accident.

3-7.Setting the ON delay 2 sec. (SW3 Dipswitch 6)

To avoid unnecessary openings due to passing objects/persons set dipswitch 6 "ON". The sensor only activates when a person or object stays in the detection area for more then 2 seconds.



WARNING


Risk of getting caught.

Please do not set ON delay 2sec. to "ON" when door cancel function is "ON". If both are "ON", the sensor does not output signal unless it detects a person or object more than 2sec and 1st row is inactive. If the person or object enter the fist row, the sensor does not detect and door never opens.

3-8.Setting the sensitivity (SW3 Dipswitch 7 and 8)

Recommended sensitivity setting in accordance with the following mounting height.

- L (Low) : 2.5m(8'2") to 3.5m(11'6")
- M (Middle) : 3.0m(9'10") to 4.5m(14'9")
- H (High) : 4.0m(13'2") to 5.5m(18'1")
- S-High(Super high) : 5.0m(16'5") to 6.5m(21'4")



NOTE Adjust the sensitivity to suit each installation site.

CHECKING

Check the operation according to the chart below.

Entry	Power OFF	Outside of detection area	Entry into 3rd row	Entry into 2nd row	Entry into 1st row	Outside of detection area
Status	-	Stand-by	Motion / Presence detection active			Stand-by
Image						
Operation indicator	None	Green	Orange	Red	Green	
Dipswitches<SW1>	Simultaneous output OFF	2nd row output	Activation output	N.C. 1		
		2nd row output	Safety output	N.O. 1		
		2nd row output	Safety output	N.C. 2		
		2nd row output	Safety output	N.O. 2		
	Simultaneous output ON	Activation output	N.C. 1			
		Activation output	N.O. 1			
		Safety output	N.C. 2			
		Safety output	N.O. 2			

INFORM BUILDING OWNER / OPERATOR OF THE FOLLOWING ITEMS

WARNING

1. Always keep the detection window clean. If dirty, wipe the window with a damp cloth.(Do not use any cleaner / solvent.)
2. Do not wash the sensor with water.
3. Do not disassemble, rebuild or repair the sensor yourself, otherwise electric shock may occur.
4. When the operation indicator is twice geen blinking, contact your installer or service engineer.
5. Always contact your installer or service engineer when changing the settings.
6. Do not paint the detection window.

NOTE

1. When turning the power on, always walk-test the detection area to ensure the proper operation.
2. Do not place any objects that move or emit light in the detection area. (e.g. Plant, illumination, etc.)

Alarm display

Refer to the **TROUBLESHOOTING** below when the following appears.

Status	Life cycle notification	Signal Saturation
Operation indicator	Twice green blinking 	Slow green blinking

TROUBLESHOOTING

Door Operation	Operation indicator	Possible cause	Possible countermeasures
Door does not open when a person enters the detection area.	None	Wrong power supply voltage.	Set to the stated voltage.
	Unstable	Wrong wiring or connection failure.	Check the wires and connector.
		Wrong detection area positioning.	Check DETECTION AREA & ADJUSTMENTS
		Sensitivity is too low.	Set the sensitivity higher.
		Short presence detection timer.	Set the presence detection timer longer.
		Dirty detection window.	Wipe the detection window with a damp cloth. (Do not use any cleaner or solvent.)
Door opens when no one is in the detection area. (Ghosting)	Green	Wrong (Safety/Activation) output setting.	Check ADJUSTMENTS 3-1 .
	Orange	Both ON delay and door cancel function are "ON".	Set either function to "OFF"
		Wrong wiring	Check the wires and connector.
	Unstable	The detection area overlaps with that of another sensor.	Check ADJUSTMENTS 3-2 .
		Water drops on the detection window.	Use the rain-cover (Separately available). Or install the sensor in a place keeping the water -drops off.
		The detection area overlaps with the door / header.	Adjust the detection area to "Deep" (Outside).
Door remains open	Proper	Sensitivity is too high.	Set the sensitivity lower.
		Wrong (Safety/Activation) output setting.	Check ADJUSTMENTS 3-1 .
		Presence timer is "∞" and sudden change in the detection area happened.	Check ADJUSTMENTS 3-3 & 3-5 . If the problem still persists, hard-reset the sensor.(Turn the power OFF and ON again.)
		Wrong wiring or connection failure.	Check the wires and connector.
	Green	The automatic infinite presence detection is "ON" and the objects or people enter more than two spot areas.	Remove the objects. Or check ADJUSTMENTS 3-5 .
		Wrong (Safety/Activation) output setting.	Check ADJUSTMENTS 3-1 .
Proper	Twice Green blinking	Output relay(s) is reaching the end of its life cycle.	Replace the sensor.
	Slow Green blinking	Signal saturation	Remove highly reflecting objects from the detection area.Change the area angle.
		The detection area overlaps with the door / header.	Adjust the detection area to "Deep" (Outside).

Manufacturer

OPTEX Co.,LTD.

5-8-12 Ogoto Otsu 520-0101, Japan
TEL.: +81(0)77-579-8700 FAX.: +81(0)77-579-7030
WEBSITE: www.optex.co.jp/as/eng/index.html

European Subsidiary

OPTEX Technologies B.V.

Tiber 2, 2491 DH The Hague, The Netherlands
TEL.: +31(0)70-419-4100 FAX.: +31(0)70-317-7321
E-MAIL: info@optex.nl WEBSITE: www.optex.nl

North and South America Subsidiary

OPTEX Technologies Inc.

Corporate Headquarters
3882 Del Amo Blvd., Suite 604 Torrance, CA 90503 U.S.A.
TOLL-FREE: +1-800-877-6656 FAX.: +1(310)214-8655
WEBSITE: www.optextechnologies.com

East coast office
8510 McAlpines Park Drive, Suite 108 Charlotte, NC 28211 U.S.A.
TOLL-FREE.: +1-800-877-6656 FAX.: +1(704)365-0818
WEBSITE: www.optextechnologies.com