



MIC Series 550 Camera

MIC Series 550



BOSCH

en Installation and User Manual

Table of Contents

1	Preface	5
1.1	About this Manual	5
1.2	Conventions (Safety Precautions) in this Manual	5
1.3	Legal Information	5
2	Safety	6
2.1	Important Safety Instructions	6
2.2	Important Notices	7
2.3	FCC and ICES Compliance	9
2.4	Bosch Notices	10
2.5	Customer Support and Service	11
3	Unpacking	12
3.1	Parts List	12
3.2	Additional Tools Required	12
4	Installation Overview	13
4.1	Typical Mounting Arrangements	14
4.2	Mounting Positions	15
5	Installation	16
5.1	Overview of Installation Steps	16
5.2	Canting the Camera	16
5.3	Adjusting the Rain Shield for Inverted Operation	17
5.4	Mounting the Camera	18
5.5	Lightning Protection	19
5.6	Electrical Connections	20
5.6.1	Composite Cable Color-coding	20
5.6.2	Alarm Inputs	21
5.6.3	Video	21
6	Getting Started	22
6.1	Establishing Control of the Camera	22
6.1.1	Establishing Control of the Camera via Biphase Protocol	22
6.1.2	Establishing Control of the Camera via RS-485 Protocol	22
6.2	Powering On	23
6.3	Controlling the Camera	23
6.3.1	Navigating the On-Screen Display (OSD) Menus	23
6.3.2	Basic Keyboard Operation	24
6.3.3	Keyboard Commands, Bosch Protocol	24
6.3.4	Keyboard Commands, Pelco Protocol	25
6.3.5	Special Preset Commands, Pelco Protocol	25
6.4	Setting the Camera Address via FastAddress	26
6.4.1	FastAddress, Bosch Protocol	26
6.4.2	FastAddress, Pelco Protocols	27

6.5	Setting Passwords	27
6.5.1	Special Passwords	27
6.5.2	Setting Passwords, Bosch Protocol	27
6.6	Configuring the Camera for Inverted Operation	28
7	On-Screen Display (OSD) Menus (Bosch Protocol)	29
7.1	Camera Setup Menu	30
7.2	Lens Setup Menu	32
7.3	PTZ Setup Menu	33
7.4	Display Setup Menu	34
7.5	Communication Setup Menu	36
7.6	Alarm Setup	37
7.7	Language Menu	41
7.8	Diagnostics Menu	41
8	On-Screen Display (OSD) Menus (Pelco Protocol)	44
8.1	Command Lock (locked)	44
8.2	Bosch Menu (locked)	45
8.3	Camera Setup	45
8.4	PTZ Setup (unlocked)	46
8.5	Other Menus	47
9	Common User Commands (unlocked)	48
9.1	Setting AutoPan Mode	48
9.2	Setting Preset Shots	48
9.3	Specifying a Shot or a Sector Title	48
9.4	Configuring Preposition Tours	49
9.5	Programming the Inactivity Operation	49
9.6	Recording Tours	50
9.7	Using the Wiper/Washer	50
9.8	Configuring Settings for IR Illumination	51
10	Advanced Features	52
10.1	Alarm Rules	52
10.1.1	Controlling Alarm Rules	52
10.1.2	Alarm Rule Examples	52
10.2	Privacy Masking	53
10.3	Image Stabilization	54
10.4	Pre-position Tour	54
10.5	Azimuth, Elevation, and Compass Directions	54
10.5.1	Setting the Azimuth Zero Point	54
10.5.2	Displaying Azimuth, Elevation, and Compass Headings	55
A	Keyboard Commands by Number	56

1 Preface

1.1 About this Manual

This user manual has been compiled with great care and the information it contains has been verified thoroughly. The text was complete and correct at the time of printing. The ongoing development of products means that the content can change without notice. Bosch Security Systems accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between the user guide and the product described.

1.2 Conventions (Safety Precautions) in this Manual

In this manual, the following symbols and notations are used to draw attention to special situations:

**DANGER!**

This symbol indicates an imminently hazardous situation such as “Dangerous Voltage” inside the product. If not avoided, this will result in an electrical shock, serious bodily injury, or death.

**WARNING!**

Indicates a potentially hazardous situation. If not avoided, this could result in serious bodily injury or death.

**CAUTION!**

Medium Risk

Indicates a potentially hazardous situation. If not avoided, this may result in minor or moderate injury. Alerts the user to important instructions accompanying the unit.

**CAUTION!**

Indicates a potentially hazardous situation. If not avoided, this may result in property damage or risk of damage to the unit.

**NOTICE!**

This symbol indicates information or a company policy that relates directly or indirectly to the safety of personnel or protection of property.

1.3 Legal Information

Copyright

This user manual is the intellectual property of Bosch Security Systems, Inc. and is protected by copyright. All rights reserved.

Trademarks

All hardware and software product names used in this document are likely to be registered trademarks and must be treated accordingly.

2 Safety

Before installing and operating the camera, please read this manual carefully.

2.1 Important Safety Instructions

Read, follow, and retain for future reference all of the following safety instructions. Heed all warnings on the unit and in the operating instructions before operating the unit.

1. Install in accordance with the manufacturer's instructions and in accordance with applicable local codes.
2. Do not install the unit near any heat sources such as radiators, heaters, stoves, or other equipment (including amplifiers) that produce heat.
3. Do not install the camera power supply near water for example near a bathtub, washbowl, or swimming pool. The power supplies have an IP65 rating and are suitable for outside installation; however, for security reasons, Bosch recommends that they are installed in a suitable equipment cabinet. The camera unit is sealed to IP68 and can be used safely in damp environments or outdoors, as long as the base cable connector is suitably sealed.
4. Operate the unit only from the type of power source indicated on the label. Before proceeding, be sure to disconnect the power from the cable to be installed into the unit.
 - For external power supplied units, use only the recommended or approved power supplies.
 - For limited power source units, this power source must comply with EN60950. Substitutions may damage the unit or cause fire or shock.
 - For 24 VAC units, voltage applied to the unit's power input should not exceed $\pm 10\%$, or 28 VAC. User-supplied wiring must comply with local electrical codes (Class 2 power levels). Do not ground the supply at the terminals or at the unit's power supply terminals.
 - If unsure of the type of power supply to use, contact your dealer or local power company.
5. **Overloading** - Do not overload outlets and extension cords. This can cause fire or electrical shock.
6. **Power disconnect** - Units have power supplied whenever the power cord is inserted into the power source. The power cord is the main power disconnect for all units.
7. **Ventilation** - The MIC Series 550 camera is a completely sealed unit and requires no special consideration as regards to ventilation.
8. **Power cord and plug protection** - Protect the plug and power cord from foot traffic, being pinched by items placed upon or against them at electrical outlets, and its exit from the unit. For units intended to operate with 230 VAC, 50 Hz, the input and output power cord must comply with the latest versions of IEC Publication 227 or IEC Publication 245.
9. **Lightning** - For added protection during a lightning storm, or when leaving this unit unattended and unused for long periods, unplug the unit from the wall outlet and disconnect the cable system. This will prevent damage to the unit from lightning and power line surges.
10. **Object and liquid entry** - With the exception of the base connector, the MIC Series 550 camera can be exposed to non corrosive liquids without damage. Never push objects into the base connector as this may damage the connection pins and prevent the camera operating correctly.
11. **Controls adjustment** - Adjust only those controls specified in the operating instructions. Improper adjustment of other controls may cause damage to the unit.

12. **Safety check** - Safety checks should be performed upon completion of service or repairs to the unit to ensure proper operating condition.
13. **Attachments, changes or modifications** - Only use attachments/accessories specified by the manufacturer. Any change or modification of the equipment, not expressly approved by Bosch, could void the warranty or, in the case of an authorization agreement, authority to operate the equipment.
14. **Cleaning** - Unplug the unit from the outlet before cleaning. Follow any instructions provided with the unit. Generally, using a dry cloth for cleaning is sufficient, but a moist fluff-free cloth or leather shammy may also be used. Do not use liquid cleaners or aerosol cleaners.
15. **Servicing** - Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
16. **Damage requiring service** - Unplug the unit from the main AC power source and refer servicing to qualified service personnel when any damage to the equipment has occurred, such as:
 - the power supply cord or plug is damaged;
 - liquid has been spilled in the equipment;
 - an object has fallen into the unit;
 - the unit has been dropped or the unit cabinet is damaged;
 - the unit exhibits a distinct change in performance;
 - the unit does not operate normally when the user correctly follows the operating instructions.
17. **Replacement parts** - Make sure that the service technician uses replacement parts specified by the manufacturer, or that have the same characteristics as the original parts. Unauthorized substitutions may cause fire, electrical shock, or other hazards.

2.2 Important Notices



Accessories - Do not place this unit on an unstable stand, tripod, bracket, or mount. The unit may fall, causing serious injury and/or serious damage to the unit. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer. When a cart is used, use caution and care when moving the cart/apparatus combination to avoid injury from tip-over. Quick stops, excessive force, or uneven surfaces may cause the cart/unit combination to overturn. Mount the unit per the manufacturer's instructions.

All-pole power switch - Incorporate an all-pole power switch, with a contact separation of at least 3 mm in each pole, into the electrical installation of the building. If it is needed to open the housing for servicing and/or other activities, use this all-pole switch as the main disconnect device for switching off the voltage to the unit.

Camera grounding - For mounting the camera in potentially damp environments, ensure to ground the system using the ground connection of the power supply connector (see section: Connecting external power supply).

Camera lens - An assembled camera lens in the outdoor housing must comply and be tested in accordance with *UL/IEC60950*. Any output or signal lines from the camera must be SELV or Limited Power Source. For safety reasons, the environmental specification of the camera lens assembly must be within the environmental specification of -10 °C (14 °F) to 50 °C (122 °F).

Camera signal - Protect the cable with a primary protector if the camera signal is beyond 140 feet, in accordance with *NEC800 (CEC Section 60)*.

Coax grounding:

- Ground the cable system if connecting an outside cable system to the unit.

- Connect outdoor equipment to the unit's inputs only after this unit has had its grounding plug connected to a grounded outlet or its ground terminal is properly connected to a ground source.
- Disconnect the unit's input connectors from outdoor equipment before disconnecting the grounding plug or grounding terminal.
- Follow proper safety precautions such as grounding for any outdoor device connected to this unit.

U.S.A. models only - *Section 810 of the National Electrical Code, ANSI/NFPA No.70*, provides information regarding proper grounding of the mount and supporting structure, grounding of the coax to a discharge unit, size of grounding conductors, location of discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.



NOTICE!

This device is intended for use in public areas only.
U.S. federal law strictly prohibits surreptitious recording of oral communications.



Cold Start-ups - If camera is powered up in extremely cold temperature (for example, -40°C), please allow 30 minutes warm-up after powering camera prior to operation. In some cases, camera may require soft reset (Aux ON 911) or a power cycle before usable video is available.

Disposal - Your Bosch product was developed and manufactured with high-quality material and components that can be recycled and reused. This symbol means that electronic and electrical appliances, which have reached the end of their working life, must be collected and disposed of separately from household waste material. Separate collecting systems are usually in place for disused electronic and electrical products. Please dispose of these units at an environmentally compatible recycling facility, per European Directive 2002/96/EC.

Environmental statement - Bosch has a strong commitment towards the environment. This unit has been designed to respect the environment as much as possible.

Electrostatic-sensitive device - Use proper CMOS/MOS-FET handling precautions to avoid electrostatic discharge.

NOTE: Wear required grounded wrist straps and observe proper ESD safety precautions when handling the electrostatic-sensitive printed circuit boards.

Fuse rating - For security protection of the device, the branch circuit protection must be secured with a maximum fuse rating of 16A. This must be in accordance with *NEC800 (CEC Section 60)*.

Grounding and polarization - This unit may be equipped with a polarized alternating current line plug (a plug with one blade wider than the other blade). This safety feature allows the plug to fit into the power outlet in only one way. If unable to insert the plug fully into the outlet, contact a locally certified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternately, this unit may be equipped with a 3-pole grounding plug (a plug with a third pin for earth grounding). This safety feature allows the plug to fit into a grounded power outlet only. If unable to insert the plug into the outlet, contact a locally certified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding plug.

Moving - Disconnect the power before moving the unit. Move the unit with care. Excessive force or shock may damage the unit.

Outdoor signals - The installation for outdoor signals, especially regarding clearance from power and lightning conductors and transient protection, must be in accordance with *NEC725* and *NEC800 (CEC Rule 16-224 and CEC Section 60)*.

Permanently connected equipment - Incorporate a readily-accessible disconnect device in the building installation wiring.

Power lines - Do not locate the camera near overhead power lines, power circuits, or electrical lights, nor where it may contact such power lines, circuits, or lights.

Video loss - Video loss is inherent to digital video recording; therefore, Bosch Security Systems cannot be held liable for any damage that results from missing video information. To minimize the risk of lost digital information, Bosch Security Systems recommends multiple, redundant recording systems, and a procedure to back up all analog and digital information.



NOTICE!

This is a **Class A** product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

2.3

FCC and ICES Compliance

FCC & ICES Information

(U.S.A. and Canadian Models Only)

This device complies with *part 15* of the *FCC Rules*. Operation is subject to the following conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a **Class A** digital device, pursuant to *Part 15* of the *FCC Rules* and *ICES-003* of *Industry Canada*. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a **commercial environment**. This equipment generates, uses, and radiates radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his expense.

Intentional or unintentional modifications, not expressly approved by the party responsible for compliance, shall not be made. Any such modifications could void the user's authority to operate the equipment. If necessary, the user should consult the dealer or an experienced radio/television technician for corrective action.

The user may find the following booklet, prepared by the Federal Communications Commission, helpful: *How to Identify and Resolve Radio-TV Interference Problems*. This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

Informations FCC et ICES

(modèles utilisés aux États-Unis et au Canada uniquement)

Ce produit est conforme aux normes *FCC partie 15*. La mise en service est soumise aux deux conditions suivantes :

- cet appareil ne peut pas provoquer d'interférence nuisible et
- cet appareil doit pouvoir tolérer toutes les interférences auxquelles il est soumis, y compris les interférences qui pourraient influencer sur son bon fonctionnement.

AVERTISSEMENT: Suite à différents tests, cet appareil s'est révélé conforme aux exigences imposées aux appareils numériques de **Classe A** en vertu de la *section 15 du règlement* de la *Commission fédérale des communications des États-Unis (FCC)*. Ces contraintes sont destinées à fournir une protection raisonnable contre les interférences nuisibles quand l'appareil est utilisé dans une **installation commerciale**. Cette appareil génère, utilise et émet de l'énergie de fréquence radio, et peut, en cas d'installation ou d'utilisation non conforme aux instructions, générer des interférences nuisibles aux communications radio. L'utilisation de ce

produit dans une zone résidentielle peut provoquer des interférences nuisibles. Le cas échéant, l'utilisateur devra remédier à ces interférences à ses propres frais.

Au besoin, l'utilisateur consultera son revendeur ou un technicien qualifié en radio/télévision, qui procédera à une opération corrective. La brochure suivante, publiée par la Commission fédérale des communications (FCC), peut s'avérer utile : *How to Identify and Resolve Radio-TV Interference Problems* (Comment identifier et résoudre les problèmes d'interférences de radio et de télévision). Cette brochure est disponible auprès du U.S. Government Printing Office, Washington, DC 20402, États-Unis, sous la référence n° 004-000-00345-4.

2.4

Bosch Notices

Disclaimer

Underwriter Laboratories Inc. ("UL") has not tested the performance or reliability of the security or signaling aspects of this product. UL has only tested fire, shock and/or casualty hazards as outlined in UL's *Standard(s) for Safety for Closed Circuit Television Equipment, UL 2044*. UL Certification does not cover the performance or reliability of the security or signaling aspects of this product.

UL MAKES NO REPRESENTATIONS, WARRANTIES, OR CERTIFICATIONS WHATSOEVER REGARDING THE PERFORMANCE OR RELIABILITY OF ANY SECURITY OR SIGNALING RELATED FUNCTIONS OF THIS PRODUCT.

Disclaimer

Underwriter Laboratories Inc. ("UL") has not tested the performance or reliability of the security or signaling aspects of this product. UL has only tested fire, shock and/or casualty hazards as outlined in UL's *Standard(s) for Safety for Information Technology Equipment, UL 60950-1*. UL Certification does not cover the performance or reliability of the security or signaling aspects of this product.

UL MAKES NO REPRESENTATIONS, WARRANTIES, OR CERTIFICATIONS WHATSOEVER REGARDING THE PERFORMANCE OR RELIABILITY OF ANY SECURITY OR SIGNALING-RELATED FUNCTIONS OF THIS PRODUCT.

2.5 Customer Support and Service

If this unit needs service, contact the nearest Bosch Security Systems Service Center for authorization to return and shipping instructions.

Service Centers

USA

Telephone: 800-366-2283 or 585-340-4162

Fax: 800-366-1329

Email: cctv.repair@us.bosch.com

Customer Service

Telephone: 888-289-0096

Fax: 585-223-9180

Email: security.sales@us.bosch.com

Technical Support

Telephone: 800-326-1450

Fax: 585-223-3508 or 717-735-6560

Email: technical.support@us.bosch.com

Repair Center

Telephone: 585-421-4220

Fax: 585-223-9180 or 717-735-6561

Email: security.repair@us.bosch.com

Canada

Telephone: 514-738-2434

Fax: 514-738-8480

Europe, Middle East & Africa Region

Please contact your local distributor or Bosch sales office. Use this link:

<http://www.boschsecurity.com/startpage/html/europe.htm>

Asia Pacific Region

Please contact your local distributor or Bosch sales office. Use this link:

http://www.boschsecurity.com/startpage/html/asia_pacific.htm

More Information

For more information please contact the nearest Bosch Security Systems location or visit www.boschsecurity.com

3 Unpacking

This equipment should be unpacked and handled with care. If an item appears to have been damaged in shipment, notify the shipper immediately.

Verify that all the parts listed in the Parts List below are included. If any items are missing, notify your Bosch Security Systems Sales or Customer Service Representative.

The original packing carton is the safest container in which to transport the unit and must be used if returning the unit for service. Save it for possible future use.



NOTICE!

Do not stand the canted (45°) MIC Series 550 camera upright as it is unstable unless properly mounted.

3.1 Parts List

The package containing the MIC Series 550 camera should include the following items:

Quantity	Part
1	MIC Series 550 Camera
1	Nebar gasket

3.2 Additional Tools Required

The following table lists additional tools required (not supplied by Bosch):

Quantity	Part
1	13 mm wrench for the PCD foot, fixing bolts
1	3 mm screwdriver for the terminal blocks in power supply
1	8 mm screwdriver for fixing screws for MIC Series PSU enclosure
1	No. 2 Phillips screwdriver for adjusting the rain shield, if required
1	Silicone sealant for ensuring a water tight seal [if not using the Nebar gasket]

4 Installation Overview

**CAUTION!**

Installation should be made by qualified service personnel and conform to the National Electrical Code and applicable local codes.

The MIC Series cameras are designed for easy installation on a variety of common fittings. The most common type of mount used is a dedicated CCTV camera pole where the camera is bolted directly to the top using industry-standard 4 in. (101.6 mm) fitting. This type of camera pole provides a robust mounting platform that minimizes camera motion and typically has a large base cabinet for mounting ancillary equipment such as power supplies.

The camera can also be mounted on lamp post columns using the Pole Mount Bracket (MIC-PMB); however, users should be aware that lamp posts can often be subject to movement and are not suitable platforms in all conditions or for all applications.

For mounting directly onto buildings, Bosch Security Systems manufactures a range of brackets suitable for all typical building installations for upright (90°), Inverted, or canted (45°) positions.

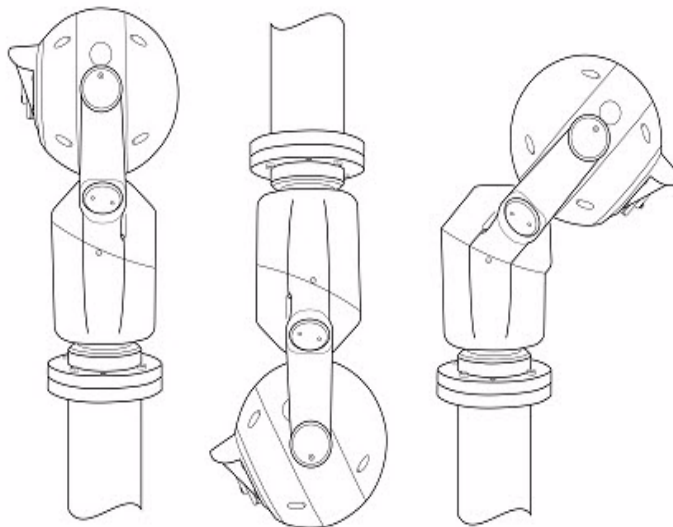


Figure 4.1 MIC camera mounting positions: Inverted, Upright, and Canted

The camera's adaptability enables easy integration in a wide variety of mobile and re-deployable installations. These have included lifeboats and other surface/subsurface vessels, emergency service vehicles, highway agency vehicles, council/contractor parking enforcement vehicles, and crowd-control vehicles.

4.1 Typical Mounting Arrangements

Below are examples of typical mounting arrangements for MIC Series cameras.

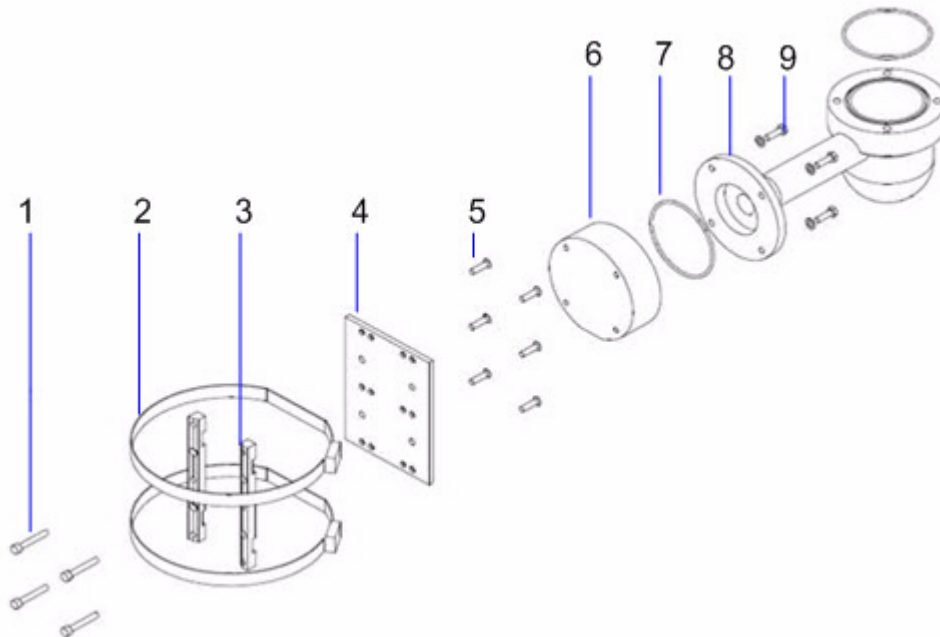


Figure 4.2 Typical pole mount (from left to right: Pole Mount Bracket (MIC-PMB), Shallow Conduit Adapter (MIC-SCA), and Wall Mount Bracket (MIC-WMB))

Number	Description
1	Securing bolts for Shallow Conduit Adapter
2	90 mm stainless steel pole banding
3	Blocks for Pole Mount Bracket
4	Plate for Pole Mount Bracket
5	Securing bolts for plate for Pole Mount Bracket
6	Shallow Conduit Adapter
7	"O" ring
8	Wall Mount Bracket
9	Securing bolts for Wall Mount Bracket

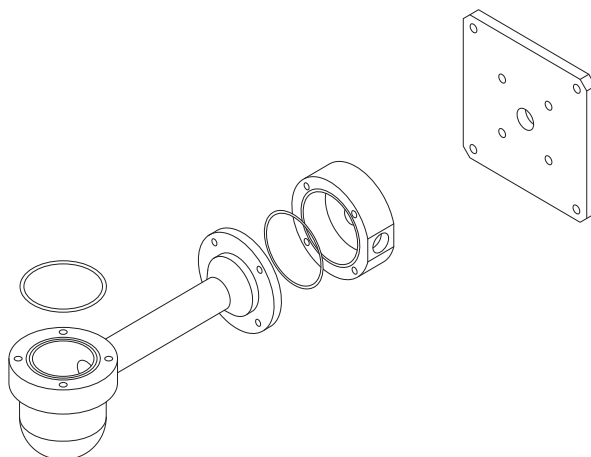


Figure 4.3 Typical wall mount (from left to right: Wall Mount Bracket (MIC-WMB), Shallow Conduit Adapter (MIC-SCA), and Spreader Plate (MIC-SPR))

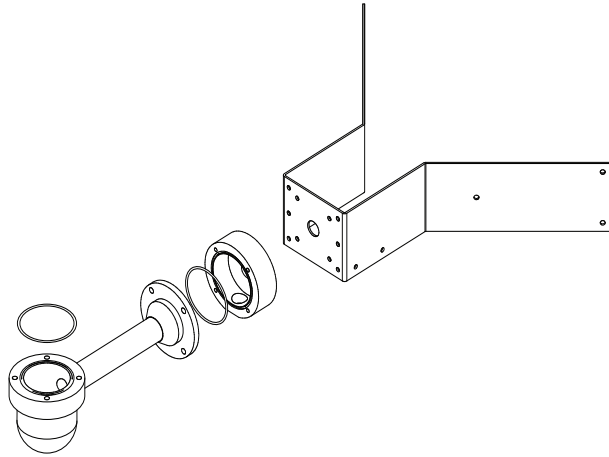


Figure 4.4 Typical corner mount (from left to right: Wall Mount Bracket (MIC-WMB), Shallow Conduit Adapter (MIC-SCA), and Corner Mount Bracket (MIC-CMB))

4.2 Mounting Positions



CAUTION!

The upright unit can be mounted either with the camera ball up or down. To get the picture the correct way for installation with the camera ball down, rotate the camera tilt axis 180°. For more information, see *Section 6.6 Configuring the Camera for Inverted Operation, Page 28*. If the camera is mounted ball down, it is essential that the connector and base area of the camera are completely sealed from water ingress. Any water getting into the connector is liable to cause corrosion to the connector pins, leading to unreliable operation of the camera unit. To prevent water penetrating the composite cable connector threads, seal the 25 mm thread at final installation using PTFE tape. Alternately, a suitable sealant may be liberally applied to the thread prior to final tightening.

The MIC Series 400 cameras (AL, IR, ST), if canted, are designed to be mounted upright (straight up, 90°), inverted (straight down, 90°), or canted upright (ball up, 45°). The tilt limits for the canted unit prevent it from working properly if mounted ball down. See the figure below for the correct ways to mount the camera.

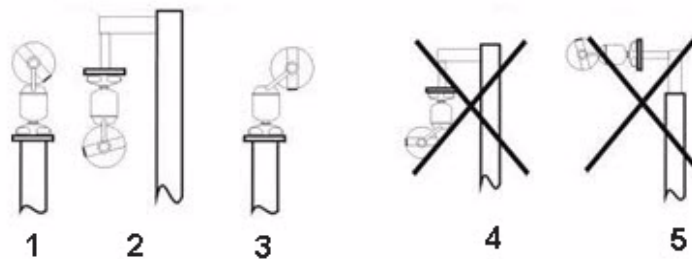


Figure 4.5 Mounting diagram: Correct and Incorrect ways (1 = Upright; 2 = Inverted; 3 = Canted; 4 = inverted canted; 5 = inverted on top of pole)

Number	Description
1	Correct way, Upright
2	Correct way, Inverted
3	Correct way, Canted
4	Incorrect way, inverted and canted
5	Incorrect way, inverted on top of pole

5 Installation

5.1 Overview of Installation Steps

Follow these steps in sequence to install the MIC-550 camera.

Note: Depending on your desired mounting position and location, as well as your chosen accessories, you may not need to complete every step.

1. **Cant the camera.** See *Section 5.2 Canting the Camera, page 16.*
2. **Reverse the rain shield** (for cameras mounted in inverted position). See *Section 5.3 Adjusting the Rain Shield for Inverted Operation, page 17.*
3. **Mount the camera.** See *Section 5.4 Mounting the Camera, page 18.*
4. **Mount the power supply unit (PSU).** See the MIC Series Power Supplies Installation Manual that came with the PSU (sold separately from the camera).
5. **Make the necessary connections** for power, telemetry, and video. See *Section 5.6 Electrical Connections, page 20.*
6. **Connect the camera to the computer.** See *Section 6 Getting Started.*
7. **Configure the camera for inverted operation** (for cameras mounted in inverted position). See *Section 6.6 Configuring the Camera for Inverted Operation, page 28.*

5.2 Canting the Camera

The MIC-550 features twist-lock on-site canting functionality. This allows the camera to be installed upright (90°), inverted, or canted (45°) to achieve the perfect field of view. Installers can adjust the camera from an upright position to a canted position if desired.

The following graphic shows the camera in both upright and canted positions.



Figure 5.1 MIC-550 cameras (from left: Front view, canted (1); Front view, upright (2); Side view, upright (3); Side view, canted (4))

To cant the camera, follow these steps:

1. Firmly secure the camera base by the 4-inch PCD foot bolts.
2. Locate and remove the two (2) pan body fixing screws (identified by arrows in *Figure 5.2* below). Once the screws have been loosened, lift them up and continue turning to lock the screws open. Ensure not to damage the paint work on the camera.

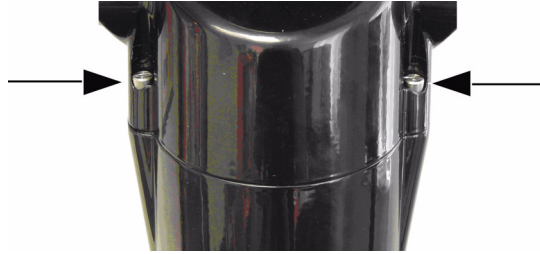


Figure 5.2 Pan body fixing screws



NOTICE!

The small security screws (identified in *Figure 5.4* below) are not designed to be removed. Any attempt to remove these screws will void the warranty and potentially cause serious damage to the camera.

3. Grasp the lower camera body beneath the pan body joint and then carefully twist the upper camera body clockwise, as shown in *Figure 5.3* below, until the camera body has rotated 180° around. The top part of the camera will now be at a 45° angle (canted).

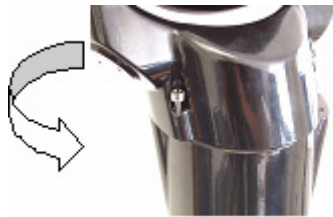


Figure 5.3 Canting in progress

4. Align the two (2) pan body fixing screws, then carefully replace and tighten them. The camera is now ready to be installed and configured.

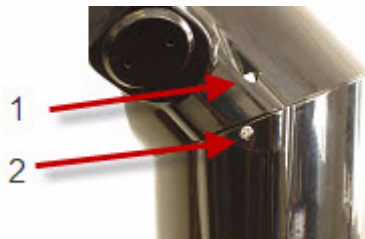


Figure 5.4 Camera in canted position; arrows point to pan body fixing screws (1) and security screws (2)

5.3

Adjusting the Rain Shield for Inverted Operation

The upright unit can be mounted with the camera ball up or down. When the camera will be in inverted position, you should reverse the rain shield to provide weather protection for the window glass.



Figure 5.5 Rain shield

To reverse the rain shield, follow these steps:

1. Remove the four (4) M3 x 6 screws that hold the rain shield to the face of the camera. Two screws are on the left of the rain shield; two screws are on the right of the rain shield.



Figure 5.6 Screw removal

2. Reverse the rain shield.
3. Reattach the rain shield to the camera face.



Figure 5.7 Inverted rain shield installed on camera

5.4 Mounting the Camera



NOTICE!

Installation should be made by qualified service personnel and conform to the National Electrical Code and applicable local codes. Ensure a strong safety chain is used to secure the camera to prevent any danger of dropping the product during installation.

To mount a MIC Series camera, follow these steps:

1. Identify a secure location for the mount (supplied separately) and for the camera. Locate the mounting position so that the camera cannot be interfered with either intentionally or accidentally.
2. Ensure that the mounting surface is capable of supporting the combined weight of the camera and mounting hardware under all expected conditions of load, vibration, and temperature.
3. Fit the mounting brackets securely, observing all appropriate safety precautions and local building regulations.
4. Carefully lift the camera to the mounting point.

5. Attach the security attachment point to a safety chain (not supplied).
6. Attach the safety chain to a secure part of your mounting structure.
7. Connect the female cable 12-pin connector to the male plug in the base of the camera. Screw the cable connector sleeve onto the plug until it is firmly secured (approximately four (4) turns from the start of thread engagement).
8. Earth the camera using one of the securing supplied bolts. Only earth the camera at a single point to prevent earth loops and video distortion (hum bars), caused by electrical interference, from appearing on the camera picture in the control room. Please note the following:
 - The camera module and housing are electrically isolated so the housing should be safety earthed regardless. The safety earth should be a bonding connection (for example, one of the securing bolts) to the camera's outside case, and should be attached to the Earth terminal post on the PCD base of the camera.
 - If dual earthing is unavoidable, then a video isolation transformer should be fitted between the two earths.
 - If the system is copper throughout and the camera pictures are fed back to the control room coaxial copper cable, then the camera should be earthed only at the video termination point in the control room. In this case, the "Earth Link" on the PCB should be broken.
 - If the video is transmitted back to the control room via some non-electrical connecting medium (for example, fiber optic, radio, or microwave link), then the camera should be earthed at the transmitter point in the power supply unit. The PSU "Earth Link" may be used for this purpose.
9. Use M8 x 20 mm stainless steel nuts, bolts, and washers to secure the PCD base of the camera to the mounting bracket. An additional Nebar gasket or suitable silicone sealant can be used to ensure a water tight seal between the base and mounting surface. Tighten all bolts securely.
10. Secure all cabling and conduit.

**WARNING!**

If the camera is mounted ball down, it is essential that the connector and base area of the camera are completely sealed from water ingress. Any water getting into the connector is liable to cause corrosion to the connector pins, leading to unreliable operation of the camera unit.

**WARNING!**

To prevent water from penetrating the composite cable connector threads, the 25 mm thread should be sealed at final installation using PTFE tape (not supplied). Alternatively, a suitable sealant may be liberally applied to the thread prior to final tightening.

5.5

Lightning Protection

If the camera is positioned in a highly exposed area where lightning strikes may occur, it is recommended to install a lightning conductor within 0.5 m of the camera and at least 1.5 m higher than the camera.

The construction of the housing itself is capable of coping with secondary strikes. If the correct lightning protection is applied, no damage to the internal electronics or camera should result. Additionally, an earth bonding connection to the case provides protection against damage from secondary strikes.

5.6 Electrical Connections

All connections (power, telemetry, video) to the camera are provided through the screw terminal connections in the MIC power supply. Purpose-built composite cables, available in various lengths, are 2-conductor cables that are pre-made with a female terminated 12-way connector fitted to them for attachment to the male connector installed into the base of the camera. The table below identifies the available lengths of these cables, which are required but sold separately from the camera. (The gauge ranges from 14 - 18.)

Model Number	Length
MIC-2MS	2 m
MIC-10MS	10 m
MIC-20MS	20 m
MIC-25MS	25 m

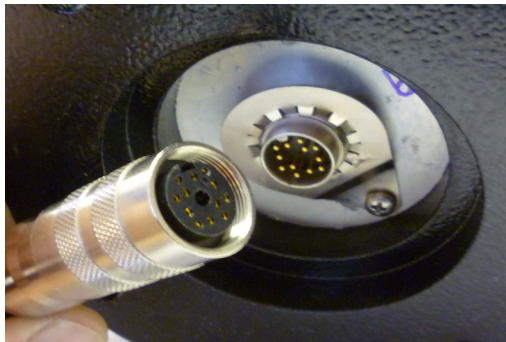


Figure 5.8 Composite cable before connection



Figure 5.9 View of the Composite Cable connected to a MIC Series 550 camera

Refer to the *MIC Series Power Supply Installation Manual* included on the Installation CD for full details on installing a MIC Series Power Supply Unit and connecting to a MIC-550 Camera.



WARNING!

Ensure that all power is disconnected before opening or working on the MIC power supply. Installation should be made by qualified service personnel and conform to the National Electrical Code and applicable local codes. Ensure a strong safety chain is used to secure the MIC-550 Camera to prevent any danger of dropping the product during installation.

5.6.1 Composite Cable Color-coding

The composite cable has no termination (free wires) at the other end for wiring into the power supply. The standard color coding used in these cables is as follows:

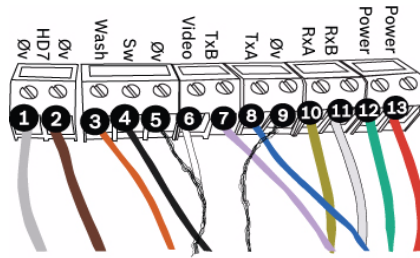


Figure 5.10 Exploded View of Composite Cable Connections

Camera Cable Connector Pin	Signal Name	Description	Cable Wire Color
1	Washer Drive Rtn	Auxiliary Connection	Grey
2	Tamper Sw Rtn	Auxiliary Connection	Brown
3	Washer Drive	Wash Signal	Orange
4	Tamper Sw	Alarm Communications	Black
5	Video Return	Video Signal Ground	Coax Screen
6	Video Output	Video Output to Control Room	Coax Core
7	Full Duplex Tx B	Telemetry I/O to RS-422/485	Violet
8	Full Duplex Tx A	Telemetry I/O to RS-422/485	Blue
9	0v	Ground	Shield
10	Full Duplex Rx A Half Duplex Tx/Rx A	Telemetry I/O to RS-422/485	Yellow
11	Full Duplex Rx B Half Duplex Tx/Rx B	Telemetry I/O to RS-422/485	White
12	Power Input 2	Low Voltage Power Input	Green
13	Power Input 1	Low Voltage Power Input	Red



NOTICE!

Bosch Security Systems does not recommend using the shielded composite cable for distances in excess of 25 m between the camera and the MIC power supply.

5.6.2

Alarm Inputs

The table below identifies the number of alarm inputs and outputs available depending on the type of MIC power supply unit installed and whether or not an 8-input alarm card is installed.

Type of MIC Power Supply Unit	Number of Alarm Inputs	Number of Alarm Outputs
IR	4	0
Non-IR with 8-input alarm card	8	2
Non-IR <i>without</i> alarm card	1	0

Table 5.1 Number of alarm inputs and outputs by power supply unit (PSU)

5.6.3

Video

The video coax cable should use a shield coverage copper braid 95% and standard copper center conductor. Recommended cables are RG-59, RG-6/U, or RG-11U.

Cable Type	Maximum Distance
RG-59/U	300 m (1000 ft)
RG-6/U	450 m (1500 ft)
RG-11/U	600 m (2000 ft)
Size	O.D. between 4.6 mm (0.181 in.) and 7.9 mm (0.312 in.)
Shield	Copper braid: 95%
Central Conductor	Standard copper center
Terminal Connector	BNC

6 Getting Started

Install and wire the camera according to the instructions in this manual and in the manuals that accompany the power supply and mounting devices. A typical system includes a keyboard, matrix switcher, monitor, and appropriate wiring connections. Refer to the individual product manuals for complete installation and setup instructions for each of the system components.

6.1 Establishing Control of the Camera

The MIC-550 supports two communication protocols (Biphase and RS-485), and both Bosch and Pelco D and P (keyboard) controller protocols that allow you to send commands to the camera and to receive information from the camera.

6.1.1 Establishing Control of the Camera via Biphase Protocol



NOTICE!

Biphase protocol works only with Bosch controller protocol. It does not work with Pelco controller protocol.

Shielded 2-wire, half-duplex, multi-drop, 5000 ft. cable limit

Biphase is the standard Bosch protocol used to send Pan/Tilt/Zoom control over 2-wire shielded twisted pair (STP) terminated with a 100 Ω terminal resistor. Biphase connections require a MIC-BP3 or a MIC-BP4 Biphase converter (sold separately).



CAUTION!

The Biphase shield must be connected to the head end only.

Cable Type	STP - Shielded Twisted Pair
Distance	1524 m (5000 ft) Belden 8760 recommended
Transmission Rate	31.25 KHz
Gage	1.02 mm (18 AWG)
Termination	100 Ω
Terminal Connector	Screw terminals
Voltage	4 Vp-p

6.1.2 Establishing Control of the Camera via RS-485 Protocol



NOTICE!

In **Pelco** controller protocol, RS-485 is the only communication protocol that the MIC-550 supports. It does not transmit responses back to the controller.

2-wire (shielded), half-duplex, differential, multi-drop (32 nodes), 4000 ft cable limit

RS-485 is capable of controlling a true multi-drop network and is specified for up to 32 drivers and 32 receivers on a single 2-wire bus. The MIC-550 camera uses the 2-wire mode, although RS-485 can be connected in a 2- or 4-wire mode.



NOTICE!

The wire shield must be tied to signal at both ends, if 2-wire twisted pair is used. After connecting the wires for RS-485 operation, ensure that the slide switch on the main board to the camera head is positioned toward the LEDs (default).

**CAUTION!**

Bosch recommends that multiple RS-485 connections be arranged as a connected series of point-to-point (multi-dropped) nodes, as a line or as a bus. It is **not** recommended to arrange RS-485 connections as a star, ring, or as a multiple-connected network. Star and ring topologies may cause signal reflections or excessively low or high termination impedance.

Wire Type	2-wire shielded twisted pair
Distance	1219 m (4000 ft)
Maximum Baud Rate	57.6 kb
Gage	0.511 mm (24 AWG)
Wire Impedance	120 W

In Pelco Protocol Mode, the camera is configured from the factory for RS-485 operation.

1. Connect the controller's Tx terminals to the Tx terminals in the power supply box. See the *MIC Series Power Supplies Installation Manual* for complete wiring instructions.
2. Pan or tilt the keyboard joystick to confirm that control has been established to the camera (approximately five (5) seconds).

6.2**Powering On**

When you turn on power to the camera, there is a ten (10) second pause before the camera starts its homing phase. During the homing phase, the camera pans left and right and tilts up and down. It also adjusts the lens focus. The entire homing phase lasts approximately 40 seconds and ends with the appearance of a splash screen or text that displays the type of device (MIC-550), the camera model, the video type (PAL or NTSC), the firmware version, and (if applicable) the MAC address.

6.3**Controlling the Camera**

After the camera is on and homing is complete, you must set the camera address. You may also want to assign a password and to customize some of the default settings of the camera. To do this, you must control the camera. The most common ways to interface with the MIC-550 are:

- Using a keyboard and on-screen display (OSD) menus. This method is the most common. See the next section and *Section 6.3.2 Basic Keyboard Operation, page 24*.
- Using the Configuration Tool for Imaging Devices (CTFID) software running on a PC with Bilinx or the RS-232/RS-485 communication protocol. Go to www.boschsecurity.com to download the latest version of the software and the *CTFID User Manual*.
- Using a PC-based graphical user interface (GUI) such as the Bosch DiBos 8 software. Refer to the *DiBos 8 User Guide* for instructions.

6.3.1**Navigating the On-Screen Display (OSD) Menus**

The OSD menus provide access to the programmable settings of the camera. The OSD displays only the submenus that are applicable to a particular MIC configuration. Some menu items (indicated as (L)) are locked and require a system password to use. Menu items marked with an asterisk (*) are default factory settings, unless otherwise noted.

**NOTICE!**

After 4.5 minutes of inactivity, the OSD menu times out and exits without warning. Some unsaved settings in the current menu can be lost.

To navigate the OSD menus:

1. Use the joystick to highlight a menu item.
2. Press either the **Focus** or the **Iris** key to open a menu item.
3. Follow the on-screen instructions.

Note: To select the **Exit Menu** item from anywhere in the current menu, use the Zoom command.

6.3.2**Basic Keyboard Operation**

The following tables summarize the basic operations for a standard keyboard and the functions available to control a MIC-550 camera.

Typical Keyboard Features	Usage
Function Keys	Selects a specific control setting.
Number Keys	Inputs a number from 0 to 9.
Camera Key	Selects a camera number.
Enter Key	Inputs a selection.
Focus Key	Sets the lens focus or makes a menu selection in OSD mode.
Iris Key	Sets the lens iris setting or makes a menu selection in OSD mode.
Key LEDs	Indicates an active key.
LCD	Displays the current status.
Joystick	Controls the pan/tilt/zoom (PTZ) functions of the camera.

Table 6.1 Typical Keyboard Functions

Camera Operation	How to control
To Pan Side to Side	Move the joystick left or right.
To Tilt Up and Down	Move the joystick forward and back.
To Zoom In	Twist the joystick clockwise.
To Zoom Out	Twist the joystick counterclockwise.

Table 6.2 Typical Keyboard Controls for a MIC-550 Camera

6.3.3**Keyboard Commands, Bosch Protocol**

Keyboard control commands are composed of a sequence of three (3) inputs with the following convention: 1) a **Function** key + 2) a **Command** number key(s) + 3) the **Enter** key.

- Depending on the type of keyboard, the control function keys are labeled:
ON or **AUX ON**
OFF or **AUX OFF**
SET or **SET SHOT**
SHOT or **SHOW SHOT**

**NOTICE!**

The convention used for control key commands in this manual is ON, OFF, SET, and SHOT. Refer to your keyboard manual for the key naming conventions.

- Command numbers range from 1 to 999. See *Section A Keyboard Commands by Number*, page 56 for a complete list of keyboard commands.
- The **Enter** key can also be labeled with the ∞ symbol.

For example, the keyboard command to make the MIC-550 pan 360° continuously is:

ON-1-ENTER (Press the **ON** key, then press the number **1** key, and then press **ENTER**.)

6.3.4 Keyboard Commands, Pelco Protocol

Pelco control commands are composed of a sequence of two (2) keyboard inputs with the following convention: 1) a **Command Number** and 2) a **Function** key input.

The MIC-550 uses the **PRESET** command key to save and recall presets (pre-positions) 1 through 99.



NOTICE!

To save a preset, enter the desired number and hold the **PRESET** key for approximately two (2) seconds. To recall a preset, enter the desired preset number (or command) and momentarily press and release the **PRESET** key.

Keyboard Command	User Action	Description
0-Pattern	Press	Initiates recording continuous playback based upon current Recording setting (A or B) in the Setup Menu.
	Press and hold	Initiates recording based upon current Recording setting (A or B) in the Setup Menu. Press ACK to end recording.
1-Pattern	Press	Initiate Recording A continuous playback.
	Press and hold	Initiate Recording A. Press ACK to end recording.
2-Pattern	Press	Initiate Recording B continuous playback.
	Press and hold	Initiate Recording B. Press ACK to end recording.
3-Pattern	Press	Initiate the MIC-550 standard preset tour (Tour 1).
4-Pattern	Press	Initiate the MIC-550 custom preset tour (Tour 2).
1 – Aux On / Aux Off	Press	Activates / deactivates alarm output 1.
2 – Aux On / Aux Off	Press	Activates / deactivates alarm output 2.
3 – Aux On / Aux Off	Press	Activates / deactivates alarm output 3.
4 – Aux On / Aux Off	Press	Activates / deactivates alarm relay.
91 – Aux On	Press	Activate Zone Scan (display zone titles).
92 – Aux On	Press	Deactivate Zone Scan (re-move zone titles)

6.3.5 Special Preset Commands, Pelco Protocol

Some **Pelco** mode preset commands have a special meaning and override the normal Pelco preset function as follows:

Preset Command	Description
33-PRESET	Pans the MIC-550 180° (Flip).
34-PRESET	Goes to Zero Pan (original home position).
80-PRESET	Toggles the Synchronization Mode between Line Lock and Internal (Pelco Frame Scan). This command is available if commands are unlocked using the Main menu.
81-PRESET	Initiates Preset Tour 1 .
82-PRESET	Initiates Preset Tour 2 .
92-PRESET	Sets the Left pan limit for an AutoScan with Limit Stops enabled.
93-PRESET	Sets the Right pan limit for an AutoScan with Limit Stops enabled.
94-PRESET	Initiates a Preset Tour .
95-PRESET	Enables or disables Limit Stops in the Setup Menu for AutoScan. Invokes the Pelco main Setup Menu when pressed for 2 seconds.
96-PRESET	Stops a scan.
97-PRESET	Initiates FastAddress (Pelco Random Scan).
98-PRESET	Toggles the Synch. Mode between Line Lock and Internal (Pelco Frame Scan). This command is available only for two (2) minutes after the power is applied and then reverts to normal preset functionality.
99-PRESET	Starts an AutoScan.

**NOTICE!**

Some Pelco controllers do not support all of the preset command numbers. Consult the documentation of the specific Pelco controller for supported preset commands.

6.4

Setting the Camera Address via FastAddress

The MIC-550 offers remote addressing via the feature "FastAddress," which allows you to set or to change a camera address using the keyboard and on-screen menus. The FastAddress feature allows you to install all cameras first, then to set the addresses via the control system. Since it is not necessary to go to the physical location of the camera, this feature makes it easier to re-address cameras at a later time.

**NOTICE!**

You do not need to set a camera address if using Bilinx communication.

FastAddress is stored in nonvolatile memory and does not change if the power is turned off or if the default settings are restored.

6.4.1

FastAddress, Bosch Protocol

In Bosch protocol, there are three (3) **FastAddress** commands:

- **ON-999-ENTER:** Displays and programs all cameras without an address in the system.

**NOTICE!**

If a keyboard is set to a camera number that already has an address, that camera also responds to this command.

- **ON-998-ENTER:** Displays and programs all cameras with or without an address in the system.
- **ON-997-ENTER:** Displays the current address status of all cameras in the system simultaneously.

To set an address for a camera without an address:

1. Select the camera number you want to **FastAddress**. The system displays the camera number on the keyboard and the image on the corresponding monitor.
2. Press **#-ENTER** (where # is the camera number without an address).
3. Press **ON-999-ENTER** to invoke an on-screen display of cameras on the system without an address.
4. Follow the on-screen instructions. You receive an on-screen confirmation when the **FastAddress** is complete.

To change or clear an address for a camera with an address:

1. Select the camera number you want to **FastAddress**. The system displays the camera number on the keyboard and the image on the corresponding monitor.
2. Press **#-ENTER** (where # is the camera number with an address).
3. Press **ON-998-ENTER** to invoke an on-screen display of all cameras on the system, with or without an address.
4. Follow the on screen instructions. You receive an on-screen confirmation when the **FastAddress** is complete.

6.4.2 FastAddress, Pelco Protocols

This section provides instructions to set a FastAddress with a Pelco keyboard or controller.

- A MIC-550 with an address set to 0 responds to commands set to any address.
- **Pelco-P** protocol must use addresses 1 to 32.
- **Pelco-D** protocol must use addresses 1 to 254.



NOTICE!

A previously-configured MIC-550 with an address above 32 (Pelco-P upper limit) or 254 (Pelco-D upper limit) can be used without readdressing the unit. However, no two (2) addresses can be the same. For example:

Pelco-P addresses above 32 are repeated in multiples of 32 (1, 33, 65, 97 are the same).

Pelco-D addresses above 254 are repeated in multiples of 254 (1, 255, 509, 763 are the same).

To set FastAddress with a Pelco Keyboard:

1. Press and hold **95-PRESET** for two seconds to open the Pelco Setup menu.
2. Move the joystick to select the **Command Lock** menu.
3. Press the **FOCUS** or the **IRIS** button to turn Command Lock to **OFF**.
4. Move to the **FastAddress** menu and press the **FOCUS** or the **IRIS** button to open the menu.
5. Use the joystick to enter the unique identifier for the MIC-550.
 - Move the joystick up or down to select the number.
 - Move the joystick right to move to the next number position.
6. Move the joystick right to select Continue. Then, press the **FOCUS** or the **IRIS** button.
7. Use the keyboard to enter the **FastAddress** number. Then, press the **Camera** button.
Note: You must first clear an assigned FastAddress number to use the number for a different MIC-550.
8. Move the joystick down then back up to set the **FastAddress** number.
9. Press the **FOCUS** or the **IRIS** button to store the **FastAddress** number.
The on-screen display menu confirms that the MIC-550 stored the FastAddress number.

6.5 Setting Passwords

Passwords are used to control access to locked command menus. Unlocked commands are available to all users. Passwords are four (4) digits in length.

6.5.1 Special Passwords

The table below identifies special passwords and their function and security level.

Password	Function / Security Level
0000 (default)	Enables security and requires a user to enter the unlock command OFF-90-ENTER before invoking a locked command.
9999	Disables all security and allows all users to access locked commands.

6.5.2 Setting Passwords, Bosch Protocol

To set or change a password (locked command):

1. Press **OFF-90-ENTER** to turn off the command lock.
2. Press **SET-802-ENTER** to access the password menu.
3. Tilt the joystick up or down to choose a number. Tilt the joystick right to move to the next number position.
4. Follow the on-screen instructions and save the password. You receive an on-screen confirmation.

6.6 Configuring the Camera for Inverted Operation

The video display from a camera installed in inverted position will appear upside down until you set the video orientation to “Inverted position.” Follow these steps:

1. Access the main Setup Menu of the on-screen display (OSD). The screen **Setup Menu** appears.
2. Select the submenu “PTZ Setup.” The screen **PTZ Setup** appears.
3. Select the option “Orientation.”
4. Select the value “Inverted,” which rotates the video display 180°. The display should now appear upright.

7

On-Screen Display (OSD) Menus (Bosch Protocol)

This chapter identifies and describes each OSD menu option, as well as the default setting for each option, for Bosch protocol. For step-by-step instructions, see *Section 9 Common User Commands (unlocked)*, page 48 and *Section 10 Advanced Features*, page 52.

To open the main Setup Menu in Bosch protocol: (locked commands)

1. Press **OFF-90-ENTER** to turn off the command lock.
2. Press **ON-46-ENTER** to access the **Setup Menu**. The screen **Setup Menu** appears.

Setup Menu
Exit... Camera Setup Lens Setup PTZ Setup Display Setup Communication Setup Alarm Setup Language Diagnostics
Focus / Iris: Select

Setup Menu Choices:

Menu	Description
Exit	Exits the menu.
Camera Setup	Accesses adjustable camera settings such as: white balance, gain, sharpness, sync, line lock, backlight, shutter, and night mode.
Lens Setup	Accesses adjustable lens settings such as: focus, iris, zoom speed, and digital zoom.
PTZ Setup	Accesses adjustable pan/tilt/zoom (PTZ) settings such as: Autopan, tours, PTZ speed, inactivity period, AutoPivot, and tilt limits.
Display Setup	Accesses adjustable display settings such as: OSD, sector blanking, and privacy masking.
Communication Setup	Accesses communication settings such as: AutoBaud and Bilinx.
Alarm Setup	Accesses the alarm settings such as: inputs, outputs, and rules.
Language	Displays the language.
Diagnostics	Displays the status of diagnostic events.

7.1 Camera Setup Menu

The **Camera Setup Menu** contains camera settings that can be changed/customized.

Camera Setup	
Exit...	
* White Bal:	EXT ATW
* Gain Control:	AUTO
* Max Gain Level:	6 (4**)
* Sharpness:	12
* Backlight Comp:	OFF
WDR:	OFF
* Shutter Mode:	Auto SensUP
* Shutter:	1/60
* Auto SensUP Max:	15x
* Night Mode:	AUTO
* Night Mode Color:	OFF
* Night Mode Threshold:	55
IR Illuminator:	AUTO
* IR Focus Correction:	AUTO
* Pre-Comp:	1
Stabilization:	ON
Restore Defaults...	
* = Factory Setting Focus / Iris: Select	

Camera Setup Menu Choices (table 1):

Menu	Description	Submenu / Description	Default Setting
Exit	Exits the menu.		
White Bal	Maintains proper color reproduction (white balance) as the color temperature of a scene changes. For example, from daylight to fluorescent lighting.	Extended ATW: Adjusts camera color using extended range. ATW: Adjusts camera color constantly. Indoor W.B.: Optimizes camera color for typical indoor conditions. Outdoor W.B.: Optimizes camera color for typical outdoor conditions. AWB Hold: Sets the camera's color settings for the current scene. Manual: Allows a user to adjust the Red and Blue gain. Sliding scale: – (1 to 100) +	Extended ATW
Gain Control	Electronically brightens darker scenes which may cause graininess in low light scenes.	Auto or OFF	AUTO
Max Gain Level	Adjusts the maximum gain level that the gain control adjusts to when set to AUTO .	Sliding scale: – (1 to 6) + (1=8db, 2=12db, 3=16db, 4=20db, 5=24db, 6=28db)	6 (4 for 36X camera)

Camera Setup Menu Choices (table 2):

Menu	Description	Submenu / Description	Default Setting
Sharpness	Adjusts the sharpness level of the picture.	Sliding scale: – (1 to 16) +	12
Backlight Comp	Improves image quality when the background illumination level is high.	ON or OFF	OFF
WDR		ON, OFF, or AUTO	OFF
Shutter Mode	Turns Auto SensUP on or off.	Auto SensUP or OFF	Auto SensUP
Shutter	Adjusts the electronic shutter speed (AES).	Sliding scale: – (60 at extreme left to 1/10000) +	1/60 sec. (NTSC) or 1/50 sec. (PAL)
Auto SensUP Max.	Sets the limit for sensitivity when the shutter speed is set to Auto SensUP.	15x, 7.5x, 4x, or 2x	15x
Night Mode	Selects night mode (B/W) to enhance lighting in low light scenes. *	ON, OFF, or AUTO	AUTO
Night Mode Color	Determines if color processing remains in effect while in night mode.	ON or OFF	OFF
Night Mode Threshold	Adjusts the level of light at which the camera automatically switches out of night mode (B/W) operation.	Sliding scale: –(10 to 55)+ (in increments of 5) 10 is earlier, 55 is later	55
IR Illuminator	Controls IR illuminators. When ON, the camera gives a much better image at low light levels. [Valid only for MIC-550IR units.]	ON, OFF, or AUTO	AUTO
IR Focus Correction	Optimizes the focus for IR lighting.	ON, OFF, or AUTO	AUTO
Pre-Comp	Amplifies the video gain to compensate for long distance cable runs.	Sliding scale: –(1 to 10)+	1
Stabilization	Eliminates shaking of the camera in both the vertical and horizontal axes, resulting in exceptional image clarity without reducing camera sensitivity or picture quality.	ON or OFF	OFF
Restore Defaults	Restores the default settings for this menu only.		

* Note: See Section 9.8 Configuring Settings for IR Illumination, page 51 for details about setting Night Mode, IR Illuminator, and IR Focus Correction.

7.2 Lens Setup Menu

The **Lens Setup Menu** contains lens settings that can be changed/customized.

Lens Setup	
Exit...	
* Auto Focus:	SPOT
* Auto Iris:	CONSTANT
* Auto Iris Level:	8
* Focus Speed:	2
* Iris Speed:	5
* Max Zoom Speed:	FAST
* Digital Zoom:	ON
Restore Defaults	
* = Factory Setting	
Focus / Iris: Select	

Lens Setup Menu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
Auto Focus	Automatically focuses on the subject in the center of the screen.	CONSTANT: Auto Focus is always active, even while the camera is moving. MANUAL: Auto Focus is inactive; manual focus must be used. SPOT: The camera activates Auto Focus after the camera stops movement. Once focused, Auto Focus is inactive until the camera moves again.	SPOT
Auto Iris	Automatically adjusts to varying light conditions.	MANUAL: Iris must be adjusted manually. CONSTANT: Auto Iris is constantly active.	CONSTANT
Auto Iris Level	Reduces the camera's iris level for proper exposure.	Sliding scale: – (1 to 15) +	8
Focus Speed	Adjusts the manual focus speed.	Sliding scale: – (1 to 8) +	2
Iris Speed	Adjusts the manual iris speed.	Sliding scale: – (1 to 10) +	5
Max. Zoom Speed	Adjusts the manual zoom speed.	SLOW, MEDIUM, or FAST	FAST
Digital Zoom	Enables or disables digital zoom.	OFF or ON	ON
Restore Defaults	Restores the default settings for this menu only.		

7.3 PTZ Setup Menu

The **PTZ Setup Menu** contains pan/tilt/zoom settings that can be changed/customized.

PTZ Setup	
Exit...	
* Autopan:	30 deg/sec
* Tour 1 Period:	5 sec
* Tour 2 Period:	5 sec
* PTZ Fixed Speed:	4
* Inactivity:	OFF
* Inact. Period:	2 min
* Autopivot:	ON
* Orientation	NORMAL
* Freeze Frame on Preposition	ON
Tilt Up Limit...	
Azimuth Zero...	
Restore Defaults...	
* = Factory Setting	
Focus/Iris: Select	

PTZ Setup Menu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Exits the menu.		
AutoPan	Adjusts speed of camera during AutoPan and AutoScan.	Sliding scale: – (1°/sec. to 60°/sec.) +	30°/sec.
Tour 1 Period	Changes dwell time between presets during the tour.	Sliding scale: – (3 sec. to 10 min.) +	5 sec.
Tour 2 Period	Changes dwell time between presets during the tour.	Sliding scale: – (3 sec. to 10 min.) +	5 sec.
PTZ Fixed Speed	Sets pan and tilt speed when controlled by a fixed speed controller.	Sliding scale: – (1 to 15) +	4
Inactivity	Selects the mode that a MIC-550 reverts to after the period of inactivity set in the inactivity period.	Scene 1: Returns to Preset 1. Prev Aux: Returns to previous activity, such as Aux commands 1, 2, 7, 8, 50, or 52. OFF: Remains on the current scene indefinitely.	OFF
Inact. Period	Sets the time period of inactivity before the above action occurs.	Sliding scale: – (3 sec. to 10 min.) +	2 min.
Autopivot	Automatically rotates the camera 180° when following a subject traveling directly beneath the camera.	OFF or ON	ON

Menu	Description	Submenu / Description	Default Setting
Orientation	Selects mounting options.	NORMAL - The camera is straight, upright; the software does not rotate the view. INVERTED - The software rotates the video 180° automatically. CANTED - The software compensates for a 45° angle of orientation to provide full view from the camera.	NORMAL
Freeze Frame On Preposition	Holds a preposition video frame while moving to another preposition.	OFF or ON	ON
Tilt Up Limit...	Sets the upper tilt limit of the camera.	Use the joystick to move to a scene.	
Azimuth Zero...	Sets the zero degree pan position.	Use the joystick to move to a scene that you want to set as the zero degree pan position and as the North compass heading. Refer to <i>Section 10.5 Azimuth, Elevation, and Compass Directions, page 54.</i>	
Restore Defaults	Restores the default settings for this menu only.		

7.4 Display Setup Menu

The **Display Setup Menu** contains display settings that can be changed/customized.

Display Setup	
Exit...	
* Title OSD:	MOMENTARY
* Camera OSD:	ON
Display Adjust	
* Azimuth:	OFF
* Compass:	OFF
Sector Blanking...	
Privacy Masking...	
Edit Sector Title...	
Edit Scene Title...	
Restore Defaults...	
* = Factory Setting	
Focus / Iris: Select	

Display Setup Menu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
Title OSD	Controls how the OSD displays sector or shot titles.	OFF: Titles are hidden. ON: Titles are displayed continuously. MOMENTARY: Titles are displayed for a few seconds, then disappear from the screen.	MOMENTARY
Camera OSD	Controls how the OSD displays camera response information, such as Digital Zoom, Iris open/close, and Focus near/far.	OFF or ON	ON
Display Adjust	Adjusts the text brightness and vertical position of the on-screen title.	Exit: Exits the menu. Up: Moves screen title up. Down: Moves screen title down. Brighter: Brightens the intensity of the on-screen text. Darker: Darkens the intensity of the on-screen text.	
Azimuth	Displays azimuth/elevation values.	On: Displays azimuth/elevation readings. Off: Hides azimuth/elevation readings. Refer to <i>Section 10.5 Azimuth, Elevation, and Compass Directions, page 54.</i>	OFF
Compass	Displays compass heading.	On: Displays compass heading. Off: Hides compass heading. Refer to <i>Section 10.5 Azimuth, Elevation, and Compass Directions, page 54.</i>	OFF
Sector Blanking	Allows video blanking of selected sectors. Available sectors are 1 through 16. Follow the on-screen instructions.	Exit: Exits the menu. Sector (1-16): Press Focus/Iris to blank or clear a sector.	
Privacy Masking	Allows masking of sensitive areas. Up to 24 privacy masks are available, with a maximum limit of eight (8) to a scene.	Exit: Saves and exits menu. Mask: 1 to 24 masking areas. Follow the on-screen instructions to set a mask. See <i>Section 10.2 Privacy Masking, page 53.</i> Restore Defaults: Restores the default settings for this menu only.	

Menu	Description	Submenu / Description	Default Setting
Edit Sector Title	Allows editing existing Sector (Zone) Titles	Select a sector title to access the character palette. See <i>Section 9.3 Specifying a Shot or a Sector Title, page 48</i> , for instructions.	
Edit Scene Title	Allows editing existing Scene (Shot) Titles	Select a scene title, then choose a menu option: <ul style="list-style-type: none"> – Edit Scene Title to access the character palette. See <i>Section 9.3 Specifying a Shot or a Sector Title, page 48</i>, for instructions. – Clear Scene to delete the selected scene title. 	
Restore Defaults	Restores the default settings for this menu only.		

7.5

Communication Setup Menu

The **Communication Setup Menu** contains baud rate and Bilinx control settings.

Communication Setup	
Exit...	
* AutoBaud:	ON
* Baud Rate:	9600
Restore Defaults	
* = Factory Setting	
Focus / Iris: Select	

Communication Setup Menu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
AutoBaud	Turns on AutoBaud detection, which detects and adjusts the camera protocol and baud rate to match that of the controller.	Toggles ON or OFF . ON automatically accepts baud rates from 2400 to 57600. (Note: If stepping from 2400 to 57600 baud, you must first set the Baud Rate to 19200 for AutoBaud to detect the higher baud rate.)	ON
Baud Rate	Manually sets the baud rate when AutoBaud is set to OFF.	Choices are 2400, 4800, 9600, 19200, 38400, and 57600.	9600
Bilinx	Turns on Bilinx control communication. (Only available when not connected to a Bilinx data interface unit.)	Toggles ON or OFF .	ON
Restore Defaults	Restores the default settings for this menu only.		

7.6**Alarm Setup**

The **Alarm Setup Menu** contains alarm inputs, outputs and rules.

**NOTICE!**

The maximum number of Alarm Inputs is eight (8), available only on the Alarm and Washer Pump Drive Card (MIC-ALM) (sold separately). This card is available for non-IR power supply units (PSUs) only. See *Section Table 5.1 Number of alarm inputs and outputs by power supply unit (PSU)*, page 21 for the specific number of alarm Inputs and Outputs per PSU.

Alarm Setup	Inputs Setup
Exit...	Exit...
Inputs Setup...	1. Alarm Input 1 N.O.
Outputs Setup...	2. Alarm Input 2 N.O.
Rule Setup...	3. Alarm Input 3 N.O.
Restore Defaults...	4. Alarm Input 4 N.O.
	5. Alarm Input 5 N.O.
	6. Alarm Input 6 N.O.
	7. Alarm Input 7 N.O.
	8. Alarm Input 8 N.O.
	9. NONE
	10. NONE
	11. NONE
	12. NONE
Focus / Iris: Select	Focus / Iris: Select Type Right / Left: Select Mode

Inputs Setup Submenu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
Inputs Setup	Defines physical inputs or events and commands that can be used in a rule. There are twelve (12) alarm inputs available.		
Inputs 1-8	Defines the type of physical input.	N.O.: Normally open dry contact. N.C.: Normally closed dry contact.	N.O.
Inputs 9-12	Defines input commands that can be used in a rule. Command inputs can also be customized by using non-assigned keyboard command numbers.	NONE: No command defined. Aux On: Responds to a standard or custom keyboard ON (1-99) command. Aux Off: Responds to a standard or custom keyboard OFF (1-99) command. Shot: Responds to a Preset shot or scene from 1-99.	NONE

Outputs Setup Submenu

Outputs Setup...	
Exit...	
1. NONE	
2. NONE	
3. NONE	
4. NONE	
5. NONE	
6. NONE	
7. NONE	
8. NONE	
9. NONE	
10. NONE	
11. NONE	
12. NONE	
Focus / Iris: Select Type	
Right / Left: Select Mode	

Outputs Setup Submenu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
Outputs Setup	Defines physical outputs and keyboard commands for use in a rule.		
Outputs 1-4	Defines a physical output.	N.O.: Normally open circuit N.C.: Normally closed circuit	N.O.
Outputs 5-12	Defines a command output for use in a rule.	Aux On: A keyboard ON command. Aux Off: A keyboard OFF command. Shot: Recalls a preset shot. OSD: An on screen display. Transmit: Transmits a message back to the head end (available with RS-232 serial and Bilinx connections). NONE: No command defined.	NONE Outputs 5 and 6 set to OSD and Shot 1

Rule Setup Submenu**NOTICE!**

You can program a total of twelve rules. You must define the inputs and outputs before you program a rule. See *Section 7.6 Alarm Setup, page 37*, to configure alarm inputs and outputs.

Rule Setup...			Rule 1	
Exit...			Exit...	
1. Rule 1	Enabled		Enabled	YES
2. Rule 2	Disabled		Input:	
3. Rule 3	Invalid		NONE	
4. Rule 4	Empty		NONE	
5. Rule 5	Empty		NONE	
6. Rule 6	Empty		Output:	
7. Rule 7	Empty		OSD	
8. Rule 8	Empty		Shot 2	
9. Rule 9	Empty		Alarm Relay	2 sec
10. Rule 10	Empty		NONE	
11. Rule 11	Empty			
12. Rule 12	Empty			
			Right / Left: Select Period Time	
	Focus / Iris: Select		Focus / Iris: Select Type	

Rule Setup Submenu Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
Rule Setup	Displays the status of rules and lets you add new rules or modify an existing rule.		
Rule 1-12	Displays the status of a rule on the right side of the menu. There are four (4) possible rule statuses.	Enabled: The rule inputs and outputs are properly defined and the rule is turned on. Disabled: The rule inputs and outputs are defined but the rule is turned off. Invalid: The rule has a missing or invalid input or output. Empty: The rule has no inputs or outputs defined.	Empty

Selecting a **Rule** number provides access to its configuration menu. The **Rule # Menu** allows you to configure a rule from previously-defined alarm inputs and outputs. Once an alarm is configured with valid inputs and outputs, it can be turned on or off (enabled or disabled) through its configuration menu.

Rule # Choices:

Menu	Description	Submenu / Description	Default Setting
Exit	Saves and exits the menu.		
Enabled	Turns the rule on or off after its inputs and outputs have been defined.	YES to enable or NO to disable	NO
Input	Toggles through a list of valid inputs set in the Alarm I/O Setup > Inputs Setup Menu that define the rule's inputs. A rule can have up to four (4) inputs.	Inputs which were set in the Inputs Setup Menu , including Aux On/Off (1-99), Shot, and NONE .	NONE
Output	Toggles through a list of valid outputs set in the Alarm I/O Setup > Outputs Setup Menu that defines a rule's outputs.	Outputs set in the Outputs Setup Menu including: Alarm Relay, Aux On/Off (1-99), Shot, OSD, Transmit, and NONE . Some outputs, such as Alarm Outputs 1-3, Alarm Relay, and Aux On/Off can be set to be active for a specific duration of time as follows: Seconds: 1-5, 10, 15, or 30 Minutes: 1-5 or 10 Latched: The alarm stays active until acknowledged. Follows: The alarm follows the alarm rule.	NONE

**NOTICE!**

You can include up to four (4) **Input** and **Output** events in a single rule. Each input and output, however, must be true for the alarm's rule to be valid and enabled.

7.7 Language Menu

The **Language Menu** contains a list of languages to display the on-screen menus.

Language
Exit...
English
Spanish
French
German
Portuguese
Polish
Italian
Dutch
Focus / Iris: Save and Exit

Language Menu Choices:

Menu	Description	Default Setting
Exit	Saves and exits the menu.	
Choose a language	Select a language in which to display on-screen menus.	

7.8 Diagnostics Menu

The **Diagnostics** menu contains a list of diagnostic tools and events. Most of these menu items are display items only; you cannot select different values to change.

Diagnostics
Exit...
Alarm Status...
BIST...
Internal Temp: Deg F / Deg C
High Temp Events: Deg F / Deg C
Highest Temp Deg F / Deg C
Low Temp Events: Deg F / Deg C
Lowest Temp: Deg F / Deg C
Internal Humidity %
Humidity Events 0
Security Access: 0
CTFID Access: 0
Restart Events:
Low-Volt Events: 0
Power Up Events: 0
Video Loss Events: 0
Total Time On 0hr 0min
Focus / Iris: Save and Exit

Diagnostic Events

Menu	Description	Submenu / Description
Exit	Saves and exits the menu.	
Alarm Status	Enters the Alarm Status menu and displays the real time status of alarm inputs and outputs.	Alarm Inputs 1 to 8, Alarm Outputs 1 to 2 (Closed or Open)
BIST	Enters the Perform Built-in Self Tests menu. If confirmed, the BIST tests start and the results are displayed.	YES to start test. NO to exit the menu. Typical results are: BIST Exit... Data Flash: PASS FPGA: PASS Bilinx: PASS
Internal Temp.	Displays the current temperature of the camera, in degrees Fahrenheit and in degrees Celsius.	
High Temp Events	Displays the number of times that the threshold of high temperature was exceeded.	
Highest Temp	Displays the highest temperature reached, in degrees Fahrenheit and in degrees Celsius.	
Low Temp Events	Displays the number of times that the threshold of low temperature was exceeded.	
Lowest Temp	Displays the lowest temperature reached, in degrees Fahrenheit and in degrees Celsius.	
Internal Humidity	Displays the percentage of humidity inside the camera housing.	
Humidity Events	Displays the number of times that the threshold of the humidity inside the camera housing was exceeded.	
Security Access	Displays the number of times that the locked-command menu is unlocked.	
CTFID Access	Displays the number of times that the Configuration Tool is accessed.	
Restart Events	Displays the number of restart events.	
Low Volt Events	Displays the number of times that the camera dropped below the acceptable voltage limit.	
Power Up Events	Displays the number of power up events.	
Video Loss Events	Displays the number of time that video was lost.	
Total Time On	Displays the total time that the video has been on.	

Alarm Status Submenu

This menu displays the status of the alarm inputs and outputs.

Alarm Status	
Exit...	
Alarm Input 1	Open
Alarm Input 2	Open
Alarm Input 3	Open
Alarm Input 4	Open
Alarm Input 5	Open
Alarm Input 6	Open
Alarm Input 7	Open
Alarm Input 8	Open
Alarm Output 1	Open
Focus / Iris: Save and Exit	

Alarm Status Events

Menu	Description	Options
Exit	Saves and exits the menu.	
Alarm Input 1...8	Displays the status of alarm inputs 1 through 7.	High Low Open (Normally Open) Closed (Normally Closed)
Alarm Output	Displays the status of the alarm output.	

8 On-Screen Display (OSD) Menus (Pelco Protocol)

This chapter identifies and describes each OSD menu option, as well as the default setting for each option, for Pelco protocol. For step-by-step instructions, see *Section 9 Common User Commands (unlocked)*, page 48 and *Section 10 Advanced Features*, page 52.

To open the main Setup Menu in Pelco protocol (locked commands): Press **95-PRESET** for approximately 2 seconds. The screen **Setup Menu** appears.

Setup Menu	
Exit...	
Command Lock:	OFF
Bosch Menu	
Camera Setup	
PTZ Setup	
Edit Password	
*FastAddress:	Not Set
Advanced	
Software Version	
Ack and Reset Alarms	
Restore All Settings	
Reset All Memory	
* = Factory Setting	
Focus / Iris: Select	

Setup Menu Choices:

Menu	Description
Exit	Exits the menu.
Command Lock (L)	Allows or prohibits accessing locked commands. (If password is set, you are prompted to enter the password.)
Bosch Menu (L)	Accesses the full MIC-550 configuration menu and all MIC-550 settings.
Camera Setup	Accesses adjustable camera settings such as White Balance and Night Mode.
PTZ Setup	Accesses adjustable pan/tilt/zoom (PTZ) settings such as tours, scan speed, edit presets, limit stops, recording, and AutoPivot settings.
Edit Password (L)	Changes the password.
FastAddress (L)	Sets or changes a camera address.
Advanced	
Software Version	Displays the current software versions.
Ack and Reset Alarms	Acknowledges and resets active alarms.
Restore All Settings (L)	Restores all settings to their original default setting.
Reset All Memory (L)	Clears all settings, including scene shots, tours, and recordings stored in the MIC-550 memory.

8.1 Command Lock (locked)

The Pelco **Command Lock Menu** allows or prohibits the use of locked commands. The default setting is **ON**.



NOTICE!

If the Command Lock is set to **ON** and you press **Focus** or **Iris** on a locked command, the MIC-550 displays the on-screen message: “Command is Locked.”

8.2 Bosch Menu (locked)

The **Bosch Menu** allows full access to the MIC-550 main **Setup Menu** and all MIC-550 configuration settings.

Pelco menu		Bosch menu	
Setup Menu		Setup Menu	
Exit...		Exit...	
Command Lock:	OFF	Camera Setup	
Bosch Menu		Lens Setup	
Camera Setup		PTZ Setup	
PTZ Setup		Display Setup	
Edit Password		Communication Setup	
*FastAddress:	Not Set	Alarm Setup	
Advanced		Language	
Software Version		Advanced	
Ack and Reset Alarms		Diagnostics	
Restore All Settings			
Reset All Memory			
* = Factory Setting			
Focus / Iris: Select		Focus / Iris: Select	

Refer to *Section 7 On-Screen Display (OSD) Menus (Bosch Protocol)*, page 29 for a complete description of Bosch menus and configuration settings.

8.3 Camera Setup

The Pelco **Camera Setup Menu** provides access to camera settings.

Camera Setup	
Exit...	
* White Bal:	OUTDOOR
* Night Mode:	AUTO
* Wiper	CONTINUOUS
* = Factory Setting	
Focus / Iris: Select	

Camera Setup Menu Choices:

Menu	Description	Sub-menu / Description	Default Setting
Exit	Exits the menu.?		
White Balance	Sets a default value in case the Pelco controller disables the white balance.	OUTDOOR: Sets a default setting if the controller disables white balance. INDOOR: Sets a default setting if the controller disables white balance.	OUTDOOR
Night Mode	Switches from color to monochrome.	ON: Sets Night Mode on. OFF: Sets Night Mode off. AUTO: Sets Night Mode to Auto set.	ON (Day/Night models only)
Wiper		CONTINUOUS: Wiper wipes continuously until deactivated manually or by the five-minute time-out built in to the system. INTERMITTENT: Wipes twice, then turns off after 15 seconds. ONE SHOT: Wipes five times, then turns off. WASH WIPE: Wiper washes and wipes.	

8.4**PTZ Setup (unlocked)**

The Pelco **PTZ Setup Menu** provides access to the PTZ settings such as tours, scan speed, presets, limit stops, recording, and AutoPivot.

PTZ Setup	
Exit...	
* Edit Tour 1...	
* Edit Tour 2...	
* Tour 1 Period:	5 sec
* Tour 2 Period:	5 sec
* Scan Speed	30 deg/sec
Edit Presets...	
* Limit Stops:	OFF
* Recording:	"A"
* Autopivot:	ON
* = Factory Setting	
Focus / Iris: Select	

PTZ Setup Menu Choices:

Menu	Description	Sub-menu / Description	Default Setting
Exit	Exits the menu.?		
Edit Tour 1	Accesses the Add / Remove Scenes On Standard Tour 1 Menu .	Exit: Exits the menu. Scene (1 - 5): Adds or removes scenes from the Standard Tour .	
Edit Tour 2	Accesses the Edit Custom Tour Menu .	Exit: Exits the menu. Scene (1 - 5): Adds or removes scenes from the Custom Tour .	
Tour 1 Period	Changes the length of waiting time between presets.	Sliding scale: – (3 sec. to 10 min.) +	5 sec.
Tour 2 Period	Changes the length of waiting time between presets.	Sliding scale: – (3 sec. to 10 min.) +	5 sec.
Scan Speed	Changes the Autopan and AutoScan speeds.	Sliding scale: – (1°/sec to 60°/sec) +	30°/sec.
Edit Presets	Modifies preset scenes.	1-99 scenes	
Limit Stops	Toggles the Limit Stops for AutoScan.	ON or OFF	OFF
Recordings	Selects record Pattern 1 or 2, if normal pattern command does not respond.	“A” or “B”	“A”
AutoPivot	Follows a subject while beneath the camera, without inverting the picture.	ON or OFF	ON

8.5**Other Menus**

Menu	Description	Default Setting
Edit Password	Sets or displays the password. See <i>Section 6.5 Setting Passwords, page 27</i> .	
FastAddress (locked)	Sets or changes the address.	Not Set
Software Version (unlocked)	Displays the camera software version.	
Ack and Reset Alarms	Acknowledges and resets alarms. If there is no active alarm input, the OSD displays the following message: “No Active Alarms.”	
Restore All Settings (locked)	Restores all settings to their original factory default settings.	
Reset All Memory (locked)	Restores all settings to their original factory default settings and clears all user programmed settings such as preset scenes and recordings.	

9 Common User Commands (unlocked)

This chapter details common user commands. See *Section A Keyboard Commands by Number*, page 56, for a complete list of commands.

9.1 Setting AutoPan Mode

AutoPan mode pans the MIC-550 camera 360° or pans between user-defined limits (when programmed). The MIC-550 camera continues to pan until stopped by moving the joystick.

To pan 360°:

1. Press **ON-1-ENTER**.
2. Move the joystick to stop the pan.

To set left and right pan limits:

1. Move the camera to the starting position and press **SET-101-ENTER** to set the left limit.
2. Move the camera to the end position and press **SET-102-ENTER** to set the right limit.

To start AutoPan between limits:

1. Press **ON-2-ENTER**.
2. Move the joystick to stop the pan.

9.2 Setting Preset Shots

Preset shots are saved camera positions. Shots are saved as scenes, therefore, the terms **SHOT** and **SCENE** are used interchangeably.

To set a Shot:

1. Move the camera to the position you want to save.
2. Press **SET-#-ENTER**, where # can be a number from 1 to 99 that identifies the camera position of the scene.
3. To specify a title for the shot, see the procedure below.

To view a Shot:

- Press **SHOT-#-ENTER**, where # is the number of the scene position that you want to view.

To store or clear a Shot:

1. Press **SET-100-ENTER** to access the **Store/Clear Scene Menu**.
2. Follow the on-screen instructions.

To disable overwrite confirmations:

If you overwrite a preset shot, the MIC-550 issues a confirmation message prompting you to approve the overwrite. To disable this confirmation message, press **OFF-89-ENTER**.

9.3 Specifying a Shot or a Sector Title

The MIC-550 provides an alphanumeric character palette used to specify a title for a shot (scene) or for a sector (zone).

To specify a title:

1. Navigate to the shot or scene:
 - for a shot: set a new shot or view a stored shot, then press **ON-62-ENTER**.
 - for a scene: move the MIC-550 to the scene (zone), then press **ON-63-ENTER**.
2. Use the joystick to move the cursor to highlight a character.
3. Press Focus/Iris to select the character.
4. Continue to select characters (up to 20) until you have created the title.

To clear a character from a title:

1. Use the joystick to highlight the **Clear OR Position Character** prompt.
2. Move the joystick left or right until the cursor is below the title character that you need to clear.
3. Press Focus/Iris to clear the character.
4. Move the joystick up to bring the cursor back into the character palette.

To save a title:

1. Use the joystick to highlight the Exit prompt.
2. Press Focus/Iris to save the title.

9.4 Configuring Preposition Tours

A **Preposition Tour** automatically moves the camera through a series of preset or saved shots. The MIC-550 has one (1) standard preset tour and one (1) customized preset tour. Tour 1 is a standard tour that moves the camera through a series of shots in the sequence that they were set. **Tour 2** is a custom tour that allows you to change the sequence of shots in the tour by inserting and deleting scenes.

To start Preposition Tour 1:

1. Set a series of preset shots in the order that you want the MIC-550 to cycle through.
2. Press **ON-8-ENTER** to start the tour. The tour then cycles through the series of shots until it is stopped.

To stop a Preposition Tour:

- Press **OFF-8-ENTER** or move the joystick to stop either type of tour.

To add or remove scenes to Preposition Tour 1:

1. Press **SHOT-900-ENTER** to access the **Add/Remove Scenes Menu**.
2. Use the **Focus/Iris** buttons to add or remove the selected scene from the tour.

To start custom Preposition Tour 2:

- Press **ON-7-ENTER** to start a tour. The tour cycles through the series of shots (in the order that they were defined) until it is stopped.

To edit a custom Preposition Tour 2:

1. Press **SET-900-ENTER** to access the **Add/Remove Menu**.
2. Press the **Focus/Iris** buttons to add or remove the selected scene.

To change the dwell period of a tour:

1. Press **ON-15-ENTER** to access the **Tour Period Menu**.
2. Select the tour (**Tour 1** or **Tour 2**) and follow the on-screen instructions.

9.5 Programming the Inactivity Operation

You can program the MIC-550 to change its operating mode automatically after a period of inactivity.

To access the Inactivity mode (locked command):

1. Press **OFF-90-ENTER** to turn off the command lock.
2. Press **ON-9-ENTER** to access the **Inactivity Mode Menu**.
3. Select one of the following choices:
 - **Return to Scene 1:** Returns the camera position to the first scene saved in memory.
 - **Recall Previous Aux:** Returns the camera to the previous operating mode, such as a **Preposition Tour**.

9.6 Recording Tours

The MIC-550 can make up to two (2) recorded tours. A **Recorded Tour** saves all manual camera movements made during the recording, including its rate of pan, tilt and zoom speeds and other lens setting changes.

To Record Tour A:

1. Press **ON-100-ENTER** to start recording a tour.
2. Press **OFF-100-ENTER** to stop recording.

To playback Recorded Tour A:

1. Press **ON-50-ENTER** to begin continuous playback.
2. Press **OFF-50-ENTER** or move the joystick to stop playback.

To Record Tour B:

1. Press **ON-101-ENTER** to start recording the tour.
2. Press **OFF-101-ENTER** to stop the tour.

To playback Recorded Tour B:

1. Press **ON-52-ENTER** to begin continuous playback.
2. Press **OFF-52-ENTER** or move the joystick to stop playback.

9.7 Using the Wiper/Washer

To activate the washer/wiper function, press ON-105-ENTER and confirm this sequence:

1. The wiper moves to a predefined position.
2. The washer turns on for five seconds. Simultaneously, the wiper turns on and wipes five times.
3. The washer turns off. The wiper turns off.
4. The camera returns to its previous PTZ position (and to inactive mode if applicable).

To activate the wiper manually (or if the corresponding alarm was activated or deactivated):

- ▶ Press **ON-102-ENTER**.

Note: The wiper will turn off automatically after 5 minutes of use.

To activate intermittent wipe:

- ▶ Press **ON-103-ENTER**. The wiper wipes twice, then turns off 15 seconds later, after it returns to parked position.

To activate the wiper to wipe five (5) times:

- ▶ Press **ON-104-ENTER**. The wiper wipes five times, then turns off after it returns to parked position.



NOTICE!

If the power fails while the wiper is activated, the wiper will return to "parked" position, after power is restored, before turning off. The wiper will not stop in front of the camera window.

9.8 Configuring Settings for IR Illumination

The following table provides the valid combinations of settings for activating IR illumination. To activate IR illumination, set the menus Night Mode, IR Illuminator, and IR Focus Correction to the values identified in the table below, depending on your desired results.

				RESULTS	Notes
Menu	Night Mode	IR Illuminator	IR Focus Correction		
Model: MIC550IR					
Setting	Auto	Auto	Auto	Within 10 seconds of switching to Night Mode, the IR lamps turn on.	This is the recommended configuration.
	Auto	Off	Auto	IR lamps turn on with Aux 54 or alarms.	Use this for manual control of the IR lamps.
	Off	Auto	Auto	Camera enters Night Mode with Aux 57 or alarms.	Use this for manual control of Night Mode.
Model: MIC550 (standard/non-IR)					
Setting	Auto	--	On	When using external IR lamps, user must control the IR Focus Correction using Aux 67 or alarms.	For control of IR Focus Correction with a MIC-550 camera (non-IR).

There are no other valid combinations. Any other combination can cause the camera to have problems focusing ("focus issues"). An example of an invalid combination is:

- Night Mode = Auto
- IR Illuminator = Auto
- IR Focus Correction = Off

This combination of settings causes a blurred view at *wide* angle. (When zoomed in (at TELE angle), the view is focused.)

10 Advanced Features

This chapter details advanced user commands, which are more complicated than those in *Section 9 Common User Commands (unlocked)*, page 48.

10.1 Alarm Rules

The MIC-550 features a powerful alarm rule engine. In its simplest form, an alarm rule defines those inputs that activate specific outputs. In its more complex form, a rule can be programmed to take any combination of inputs and keyboard commands to perform a camera function. There are numerous combinations of alarm inputs and outputs that can be programmed into twelve (12) alarm rules.

10.1.1 Controlling Alarm Rules

The AUX 69 command allows a user to enable or disable all alarm rules. By default, alarm rules are enabled until the OFF-69-ENTER command is issued from a keyboard (there is no corresponding menu item for this command). Disabling alarms rules does not erase the rule, the MIC-550 preserves the user-defined settings and the rule data is restored when the ON-69-ENTER command is issued.

The OFF-69-ENTER command performs the following actions:

- Disables all alarm rules
- Displays the message “Ack and Reset Alarms” if an alarm-rule triggered alarm is active when the MIC-550 receives the disable command. You must acknowledge the alarm before the rule is disabled.
- Prevents the modification of an alarm rule while disabled.

10.1.2 Alarm Rule Examples

Following are two examples for setting up alarm rules.

Example 1: Basic Alarm Rule

Scenario: We want a door alarm contact to:

1. Flash an OSD message (**ALARM 1**) on the display when the alarm is triggered.
2. Move the MIC-550 camera to a saved position. (For this example, Shot 7.)
3. Transmit a Bilinx signal over the coax cable to the headend system, such as an Allegiant, to trigger an alarm response.

The sequence to program the above alarm rule example is as follows:

1. Wire the door contact to Input 1 in the MIC-550. This circuit is normally open.
2. Define the Alarm Input(s): From the **Inputs Setup** menu, ensure that Alarm Input 1 is set to **N.O.** (the default setting for Input 1).
3. Define the Alarm Outputs:
 - a. From the **Outputs Setup** menu, ensure that Output 5 is set to **OSD** (the default setting for Output 5).
 - b. Set Output 6 to **Shot 7**.
 - c. Set Output 7 to **Transmit** (a Bilinx signal to the head end).
4. Set up the Alarm Rule by selecting the Inputs and Outputs from the **Rule Setup** menu:
 - a. Select **Rule 1**.
 - b. Set the first input to **Alarm Input 1**.
 - c. Set the first output to **OSD**.
 - d. Set the second output to **Shot 7**.
 - e. Set the third output to **Transmit**.
5. Enable the Alarm Rule: Highlight Enabled and select **YES**.

Example 2: Advanced Alarm Rule

Scenario: A MIC-550 located at an airport is set to AutoPan Between Limits from the parking garage to the airport terminal. The gate entering the airport has an alarm contact connected to the MIC-550, and the perimeter fence in the area of the gate has an infrared (IR) sensor for motion detection (motion detector) that is connected to the MIC-550.

When the alarms for the gate contact and the motion detector are activated at the same time, we want the alarm rule to:

1. Flash an OSD message (**ALARM 2**) on the monitor.
2. Stop the AutoPan and move the camera to a saved position (Shot 5) viewing the fence.
3. Transmit a Bilinx signal to the head end system to trigger an alarm response.

The sequence to program this alarm rule example is as follows:

1. Wire and set the alarm Input(s).
 - a. Wire the motion detector to Input 1. (This circuit is normally open.)
 - b. Wire the gate alarm contact to Input 5. (This circuit is normally closed.)
2. From the **Inputs Setup** menu:
 - a. Ensure that Input 1 (the motion detector) is set to **N.O.** (This setting is the default for Input 1.)
 - b. Ensure that Input 5 (the gate contact) is set to **N.C.**
3. Set the alarm Outputs from the **Outputs Setup** menu:
 - a. Set Output 5 to **OSD**.
 - b. Set Output 6 to **Transmit**.
 - c. Set Output 7 to **Shot 5**.
4. Set up the Alarm Rule by selecting the Inputs and Outputs from the **Rule Setup** menu:
 - a. Select **Rule 2**.
 - b. Set the first input to **Alarm Input 1** (the motion detector).
 - c. Set the second input to **Alarm Input 5** (the gate alarm contact).
 - d. Set the first output to **OSD**.
 - e. Set the second output to **Shot5** viewing the fence.
 - f. Set the third output to **Transmit** (a Bilinx signal to the headend).
5. Enable the Alarm Rule: Highlight Enabled and select **YES**.

10.2**Privacy Masking**

Privacy Masking is used to block out a specific area of a scene from being viewed. Mask choices include black, white, or blurred, and can be configured with three, four, or five corners to cover more complex shapes.

- To configure a Privacy Mask, open the **Main** menu, select **Display Setup**, and then select **Privacy Mask**. Alternatively, enter the keyboard command **ON-87-ENTER**. To setup a privacy mask, follow the on-screen menu instructions.
- In Pelco Mode, open the **Pelco Main** menu, open the **Bosch** menu, select the **Display Setup** menu, and then select **Privacy Masking**. To setup a privacy mask, follow the on-screen menu instructions.

NOTICE!

- Draw the mask 10% larger than the object to ensure that the mask completely covers the object as the MIC-550 zooms in and out.
- When the camera is canted, privacy masks are most accurate when programmed within a tilt region of +50° (up) to -60° (down) from the horizontal axis. Masks drawn near these limits should be oversized by approximately 20% in order to ensure continuous coverage during P/T operations. Accuracy of masks drawn outside these limits cannot be guaranteed.

10.3 Image Stabilization

Image Stabilization becomes increasingly important as zoom ranges are extended. The advanced image stabilization algorithms of the MIC-550 eliminate camera shake for exceptional image clarity. Bosch achieves this clarity without reducing camera sensitivity or picture quality. To configure image stabilization, open the **Main** menu, select the **Camera Setup** menu, and then select **Stabilization** to turn on the feature.

10.4 Pre-position Tour

The MIC-550 features (2) preset tours. Each preset scene is saved for playback later.

Tour 1 is a standard tour that only recalls the scenes in the exact sequence they were shot. Scenes can be added or deleted on the tour, but the sequence cannot be changed. To add or remove scenes on Tour 1 enter the keyboard command **SHOT-900-ENTER** and follow the on-screen instructions.

Tour 2 is a customizable tour that allows you to rearrange the sequence of scenes on the tour by inserting and deleting scenes. To enter the Edit Tour 2 menu, enter the keyboard command **SET-900-ENTER** and follow the on-screen instructions.

10.5 Azimuth, Elevation, and Compass Directions

The MIC-550 allows a user to display the azimuth and elevation position, and the compass heading of the camera. The MIC-550 displays the position data in the lower-right corner of the image display. These readings are described as:

Azimuth: The pan angle from zero to 359 degrees in one degree increments. An azimuth of zero degrees corresponds to North.

Elevation: The tilt position from zero (horizon) to –90 degrees (camera pointing straight down) in one degree increments.

Compass: The cardinal or intercardinal (N, NE, E, SE, S, SW, W, NW) heading in which the camera is pointing.

The MIC-550 uses the azimuth to determine the compass direction. The following table shows the azimuth range and its corresponding compass heading:

Azimuth Range	Compass Direction
21° to 65°	NE (Northeast)
66° to 110°	E (East)
111° to 155°	SE (Southeast)
156° to 200°	S (South)
201° to 245°	SW (Southwest)
246° to 290°	W (West)
291° to 335°	NW (Northwest)
336° to 20°	N (North)

10.5.1 Setting the Azimuth Zero Point

The installer must calibrate the Azimuth Zero point. The MIC-550 uses the Azimuth Zero point, usually set to magnetic North, as the zero degree pan position and as the North compass heading. The MIC-550 then displays the azimuth reading and the compass heading based on the number of degrees from the Azimuth Zero point.

To set the Azimuth Zero point:

1. Determine the North compass heading, then move the camera to that position.
2. Press **OFF-90-ENTER** to turn off the command lock (if active).
3. Press **ON-94-ENTER** to set the Azimuth Zero point.

**CAUTION!**

Bosch recommends that only the installer calibrate the Azimuth Zero point. A recalibration to the Azimuth Zero point may cause inaccurate compass headings.

10.5.2**Displaying Azimuth, Elevation, and Compass Headings**

You can display only the azimuth/elevation readings or only the compass reading, or you can display both readings at the same time. The MIC-550 displays the azimuth/elevation readings and the compass heading in the following way:

180 / -45 S

where:

- **180** is the Azimuth or the pan location in degrees.
 - **-45** is the Elevation or the tilt location in degrees.
 - **S** is the compass direction (cardinal or intercardinal).
1. Press **ON-95-ENTER** to display the azimuth/elevation reading.
 2. Press **ON-96-ENTER** to display the compass heading.
 3. Press **OFF-95-ENTER** to hide the azimuth/elevation reading.
 4. Press **OFF-96-ENTER** to hide the compass heading.

A Keyboard Commands by Number

Locked	Function Key	Command No.	Command	Description
	On/Off	1	Scan 360°	Autopan without limits
	On/Off	2	Autopan	Autopan between limits
*	On/Off	3	Iris Control	Enters menu (auto, manual)
*	On/Off	4	Focus Control	Enters menu (spot, auto, manual)
	On/Off	7	Play Custom Pre-position Tour	Activate/Deactivate
	On/Off	8	Play Pre-position Tour	Activate/Deactivate
*	On/Off	9	Inactivity Mode	Enters menu (Off, Return to Scene 1, Recall Previous PTZ Command)
*	On/Off	11	Auto Iris Level Adjust	Enters Iris Level Adjustment menu
	On/Off	14	Set Autopan and Scan Speed	Enters speed adjustment slide bar
	On/Off	15	Set Pre-position Tour Period (dwell)	Enters dwell adjustment slide bar
*	On/Off	18	AutoPivot Enable	Enables/disables AutoPivot
	On/Off	20	Backlight Comp	Backlight Compensation
*	On/Off	23	Electronic Shutter	Enters Shutter Speed slide bar
	On/Off	24	Stabilization	Electronic Stabilization
	On/Off	26	Wide Dynamic Range	Activate/Deactivate
*	On/Off	35	White Balance Mode	Enters White Balance menu
*	On	40	Restore Camera Settings	Restores all settings to their original defaults
*	On/Off	43	Auto Gain Control	AGC—On, Auto, Off
*	On/Off	44	Sharpness	Enters Sharpness menu
*	On	46	Advanced Menu	Enters Main Setup menu
	On	47	View Factory Settings	View all menu default settings
	On/Off	50	Playback A, continuous	Activate/Deactivate
	On/Off	51	Playback A, single	Activate/Deactivate
	On/Off	52	Playback B, continuous	Activate/Deactivate
	On/Off	53	Playback B, single	Activate/Deactivate
	On/Off	54	IR Illuminator	Controls IR Illuminators (On/Off)
	On/Off/ Auto	56	Night Mode Menu	On, Off, Auto (Day/Night only)
	On/Off	57	Night Mode Control	Enables/disables Night Mode (Day = Off /Night = On)
*	On/Off	58	Day/Night Threshold	On—menu (Day/Night only)
	On/Off	59	Night Mode Priority	Motion—Activates Night Mode before slow shutter, preserving full-frame integration as light is reduced. Color—Activates slow shutter before Night Mode, preserving color longer as light is reduced.
*	On/Off	60	On Screen Display	On—Enable Off—Disable
*	On	61	Display Adjust	Adjust On-screen Display
	On	62	Pre-position Title menu	Enters Pre-position Title menu. Refer to <i>Section 9.3 Specifying a Shot or a Sector Title, page 48</i> .
*	On	63	Zone Title Menu	Enters Zone Title menu. Refer to <i>Section 9.3 Specifying a Shot or a Sector Title, page 48</i> .
	On	64	Alarm Status	Enters Alarm Status menu
	Off	65	Alarm Acknowledge	Acknowledge alarm or deactivate physical outputs
	On	66	Display Software Version	Displays software version number

Locked	Function Key	Command No.	Command	Description
	On/Off/ Auto	67	IR Focus Correction	On (two times)–Activates focus compensation when using IR illuminators. Off–Deactivates focus compensation when using normal lighting. Auto–Automatically activates/deactivates IR Focus Correction when IR illuminators turn on/off.
*	On/Off	69	Alarm Rule Activation/Deactivation	On–Enables all alarm rules Off–Disables all alarm rules
	On	72	Re-initialize Camera	Performs camera/lens re-initialization functions
*	On	79	Camera Height	Enters the Camera Height menu
*	On/Off	80	Digital Zoom Lock	Turns digital zoom on and off
	On/Off	81	Alarm Output 1 Open Collector	On–Activates output Off–Deactivates output
	On/Off	82	Alarm Output 2 Open Collector	On–Activates output Off–Deactivates output
	On/Off	83	Alarm Output 3 Open Collector	On–Activates output Off–Deactivates output
	On/Off	84	Alarm Output 4 Relay	On–Activates output Off–Deactivates output
*	On/Off	86	Sector Blanking	Enters Sector Blanking menu
*	On/Off	87	Privacy Masking	Enters Privacy Masking menu
	On/Off	89	Preposition Confirmation	On–Issues a message that prompts for approval to overwrite a preposition Off–No confirmation message issued
	On/Off	90	Command Lock/Unlock	On–Lock on Off–Lock off
*	On/Off	91	Lens Polarity Menu	On–Reverse Off–Normal
*	On/Off	92	Lens Polarity Menu	On–Reverse Off–Normal
*	On/Off	93	Lens Polarity Menu	On–Reverse Off–Normal
*	On/Off	94	Set Azimuth Zero Point	Sets the zero degree pan position. Refer to <i>Section 10.5 Azimuth, Elevation, and Compass Directions, page 54.</i>
	On/Off	95	Display Azimuth/Elevation Readings	On–Displays azimuth/elevation readings Off–Hides azimuth/elevation readings Refer to <i>Section 10.5 Azimuth, Elevation, and Compass Directions, page 54.</i>
	On/Off	96	Display Compass Readings	On–Displays compass heading Off–Hides compass heading Refer to <i>Section 10.5 Azimuth, Elevation, and Compass Directions, page 54.</i>
	On	99	Factory P/T Home Position	Recalibrates home position; can be used as an Alarm Output
	On/Off	100	Record A	Activate/Deactivate
	On/Off	101	Record B	Activate/Deactivate
		102	Wiper alarm	Manual on/off

Locked	Function Key	Command No.	Command	Description
		103	Wiper wipe	Intermittent; wipes twice, then turns off after 15 seconds.
		104	Wiper wipe	On shot; wipes five times, then turns off.
		105	Washer/Wiper	Activate
	On	997	FastAddress, display	Display current address
	On	998	FastAddress, all units	Display and program current address
	On	999	FastAddress, unaddressed cameras	Display and program unaddressed MIC-550 units
	Set	"1-99"	Pre-position Programming	Set ##–Programs a preset view
	Shot	"1-99"	Pre-position Recall	Shot ##–Recall programmed preset
	Set	100	Pre-position Menu	Enters the Pre-position menu
	Set/Shot	101	Autopan Left Limit	Set–Programs left limit Shot–Shows limit
	Set/Shot	102	Autopan Right Limit	Set–Programs right limit Shot–Shows limit
	Set	110	Factory P/T Home Position	Set–Recalibrate home position
*	Set	802	Edit Password	Enters the Edit Password menu
*	Set	899	Reset ALL	Restores all settings to original defaults and clears all user-programmed settings
	Set	900	Edit Tour 1 (Standard)	Enters the Standard Tour Scene menu
	Shot	900	Edit Tour 2 (Custom)	Enters the Custom Tour Scene menu
	Set/Shot	901-999	Adds/Removes a Preposition Shot from Tour 1	Set ###–Adds preset Shot ###–Removes preset

Bosch Security Systems, Inc.

850 Greenfield Road

Lancaster, PA 17601

U.S.A.

www.boschsecurity.com

© Bosch Security Systems, Inc., 2011